## 52 24 390 Removing and installing/replacing rear head restraints

Pull out head restraint (1) firmly.

Installation:

Press head restraint (1) downwards until it engages audibly in notches.

