





Note:

The operation is described on the left side; proceed in the same way for the right side.

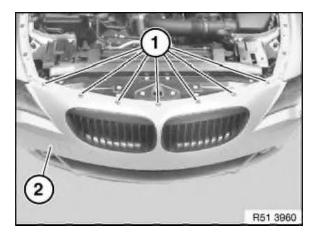

Raise hood lid.


Release screws (1) on bumper trim (2).

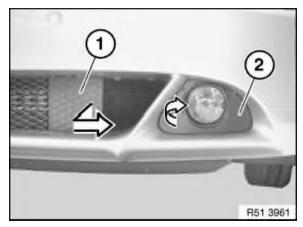

Lever out trim (1 and 2) in direction of arrow.


Installation:

Make sure trims (2) are in correct installation position.

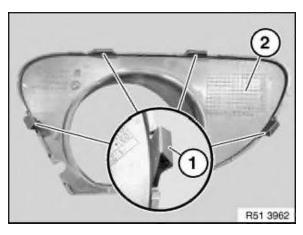


Installation:

Catches (1) on trim (2) must not be damaged.

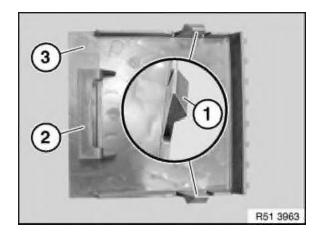


Installation:


Catches (1) and guide (2) on trim (3) must not be damaged.

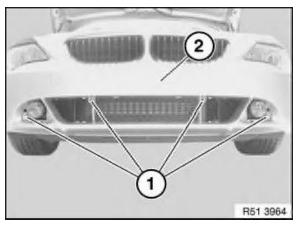

Release screws (1) on bumper trim (2).

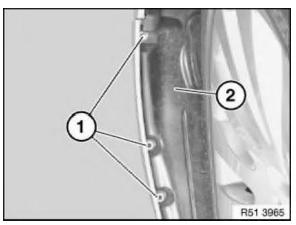


Release screws (1) on wheel arch trim (2).

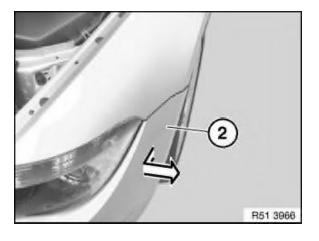

Important!


Do not damage bumper trim when pulling off.

Pull bumper trim (1) in direction of arrow off side guide.

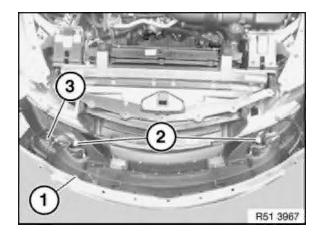

If necessary, disconnect plug connections on fog lamps (2) and/or Park

Remove bumper trim (1) towards front (with aid of a 2nd person).

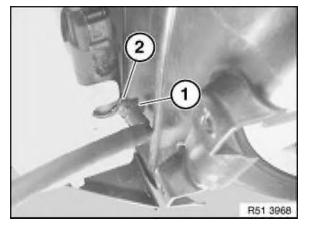

Version with headlight cleaning system:

Pull off bumper trim (1) towards front.

Distance Control (3).


Version without headlight cleaning system:

Note:

Have a rubber plug on hand.

Unlock hose (1), detach and seal pump outlet (2).

Remove bumper trim towards front (with aid of a 2nd person).

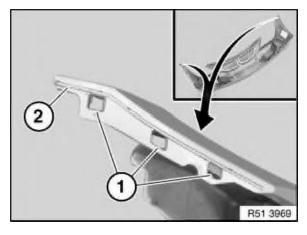

Installation:

Tabs (1) on bumper trim (2) must not be damaged.