

Betriebsanleitung  
zur  
Universal Handy  
Vorbereitung



## Notes on these Operating Instructions

This booklet supplements the Owner's Handbook for the car. Keep it safe together with your other vehicle documents.


Should you sell your BMW at a later date, please remember to pass this instruction booklet on to the next owner – it is an important part of the vehicle's specification.


For information on how to use other items of the car's equipment, please consult the main Owner's Handbook or the relevant Supplementary Owner's Handbooks. BMW Service will gladly advise if you have any queries.

## Status at time of printing

The advanced technology and high quality of BMW equipment are maintained by unceasing development work. Because of this, the equipment fitted to your car may differ from the description in these Operating Instructions. Nor can errors and omissions be entirely ruled out. You are therefore asked to appreciate that no legal claims can be entertained on the basis of the data, illustrations or descriptions in these instructions.

## Symbols used

 indicates precautions that must be followed precisely in order to avoid the possibility of personal injury and serious damage to the vehicle. ◀

 contains information that draw your attention to special features. ◀


◀ marks the end of a specific item of information.

If you have any queries, BMW Service will be glad to advise you.

## 10 Overview

So that you can operate your mobile phone with Bluetooth interface via your car radio, radio and navigation system or on-board computer, the instructions given on the next few pages enable you to

- ▷ Pair your mobile phone to the Bluetooth interface on your car, or isolate it from the interface again
- ▷ Transfer the phone book from your mobile phone to your car radio, radio and navigation system or on-board computer
- ▷ Operate telephone functions that are unavailable or restricted, depending on your mobile phone, car radio, radio and navigation system or on-board computer.

 Perform all inputs while the car is stationary. The car's occupants and other road users could otherwise be put at risk. ◀


### Requirements

If your mobile phone has a Bluetooth interface, you can connect your mobile phone up to the Bluetooth interface of your car.




Please ask BMW Service for details of which mobile phones are supported by the universal mobile phone provision and for which mobile phones mountings are available. These mountings enable you to recharge your mobile phone and assure better network reception.


The use of Bluetooth technology is not permitted in all countries. Please ask BMW Service for details of where it is not permitted. ◀

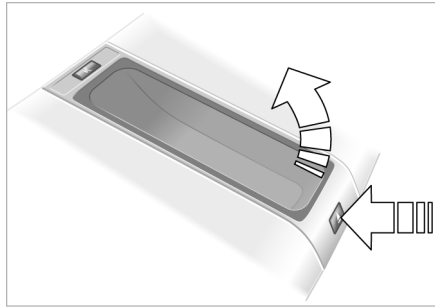

MTT00091CMA

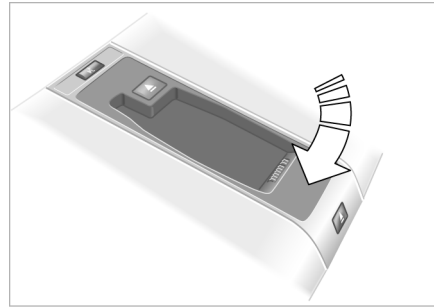


MTT00092CMB

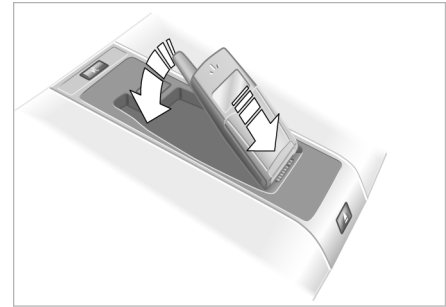

MTT00093CMB

## Inserting mobile phone mounting

 Before using the mobile phone, always place it in the mounting to ensure that it functions properly. ◀

1. Remove storage compartment



2. Insert the mobile phone mounting for your mobile phone and press it down gently until it engages in position.

To remove the mobile phone mounting:



Press this button beneath the mobile phone mounting.

## Inserting mobile phone

Insert the mobile phone with the keys facing upwards and press it down gently until it engages in position.

To remove the mobile phone:





Press this button beneath the mobile phone mounting.

You can now remove the mobile phone.

## 12 Pairing

### Pairing the mobile phone

 Your mobile phone only needs to be logged onto the Bluetooth interface of your car once. This logging-on process is known as pairing. Once paired, your mobile phone will be identified automatically and you will be able to operate your mobile phone via your radio, radio and navigation system or on-board computer. ◀

 The details appearing in the display or on the monitor may vary depending on the device being used. ◀

1. Switch on the mobile phone




Press the button above the mobile phone mounting for about one second

and at the same time


3. Turn ignition key to position 1

4. Release the button.

"BLUETOOTH PAIRING" appears in the display or on the monitor.

 During the pairing process, the indicator lights on the on-board computer or on the car radio with multi-information display flash. ◀


Depending on the mobile phone being used, its display will request you to perform various steps, which you should select and confirm, see the operating instructions for your mobile phone.

 You can pair up to four mobile phones. If you pair a fifth mobile phone, the one that was paired first is deleted. ◀

During the pairing process, a request appears in the mobile phone's display to enter the "BLUETOOTH PASSKEY", a four-digit number that you will have been given upon receipt of your car.


5. Enter the "BLUETOOTH PASSKEY" using the numerical keys of your mobile phone.


"PAIRING SUCCEEDED" appears in the display or on the monitor.


 You can transfer entries from your mobile phone's phone book to your car radio, radio and navigation system or on-board computer either now or subsequently, see page 14. ◀

6. Turn ignition key to position 0.


Pairing your mobile phone with the universal mobile phone provision with Bluetooth interface has now been completed.


 The next time you operate the mobile phone via the Bluetooth interface, it will be identified within no more than 30 seconds. ◀

 To recharge the battery, place the mobile phone in the mounting and press it down gently. Turn the ignition key to position 1. If the ignition is off, the battery will be recharged in approx. 12 minutes. ◀


 The use of Bluetooth technology is not permitted in all countries. Please ask BMW Service for details of where it is not permitted. All paired mobile phones should be isolated in these countries. ◀

## Isolating


 If you no longer wish to use the Bluetooth interface, you can isolate your mobile phone. ◀

 This process isolates all mobile phones that have been paired with the interface. ◀

To isolate the paired mobile phones:

1. 

Press the button above the mobile phone mounting for about one second and at the same time
2. Turn ignition key to position 1
3. Release the button.
 


"BLUETOOTH PAIRING" appears in the display or on the monitor
4. 

Hold this button pressed for about ten seconds until a triple acoustic signal is emitted.

"PAIRED DEVICES DELETED" appears in the display or on the monitor

5. Turn ignition key to position 0.
 


The mobile phones are now isolated.


 The phone book entries that you have transferred from the mobile phone to your car radio, radio and navigation system or on-board computer are likewise deleted in the process. ◀

## 14 Transferring phone book Special features

To make a phone call via the directory in your BMW car radio, radio and navigation system or on-board computer, you can transfer numbers to it from the phone book in your mobile phone.


Please read the operating instructions for your mobile phone for details of what steps to perform.


 You can transfer the phone book directly after pairing the mobile phone. For details of how to pair your mobile phone, see page 12. After transferring the phone book, turn the ignition key to position 0. ◀


 Depending on the mobile phone being used, each time the ignition is switched on the phone book is automatically transferred. Ask BMW Service for details of which mobile phones offer this function. ◀

Depending on the mobile phone being used, you may be unable to use the following telephone functions with your SIM card via the Bluetooth interface:

- ▷ Read SMS messages
- ▷ Call up information, e.g. on call costs, signal strength, etc.
- ▷ Speed-dials are not available via the multi-information display. ◀

 "Top-8" and "Last numbers" show the numbers used most frequently or recently from your car via your radio and navigation system or on-board computer. ◀

 The PIN code cannot be entered via the on-board computer or multi-information display; it can only be entered via the mobile phone. ◀

 In order to use the emergency call function, the mobile phone must be switched on and operational, and network coverage must be available. ◀

### Switching to the hands-free unit

You can switch a call being conducted via the mobile phone to the hands-free mode at any time.



Press this button above the mobile phone mounting.