
51 47 210

Removing and installing/replacing trunk trim panel on left side panel

Necessary preliminary tasks:

• Remove luggage compartment floor trim panel.



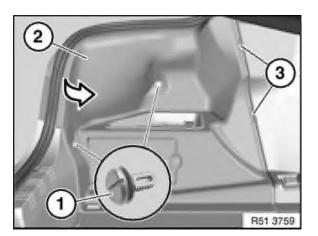

Open rotary clips (1) and remove.

Feed out luggage compartment trim on left side panel (2) in direction of arrow and remove.

Installation:

Correctly feed in guides (3) of luggage compartment trim on left side panel (2).



If necessary, unclip storage compartment (1) all round and remove in direction of arrow from luggage compartment trim on left side panel (2).

