


Installation location

The eject box is installed in the stowage compartment between the front seats. To open the stowage compartment lid, press the release button.

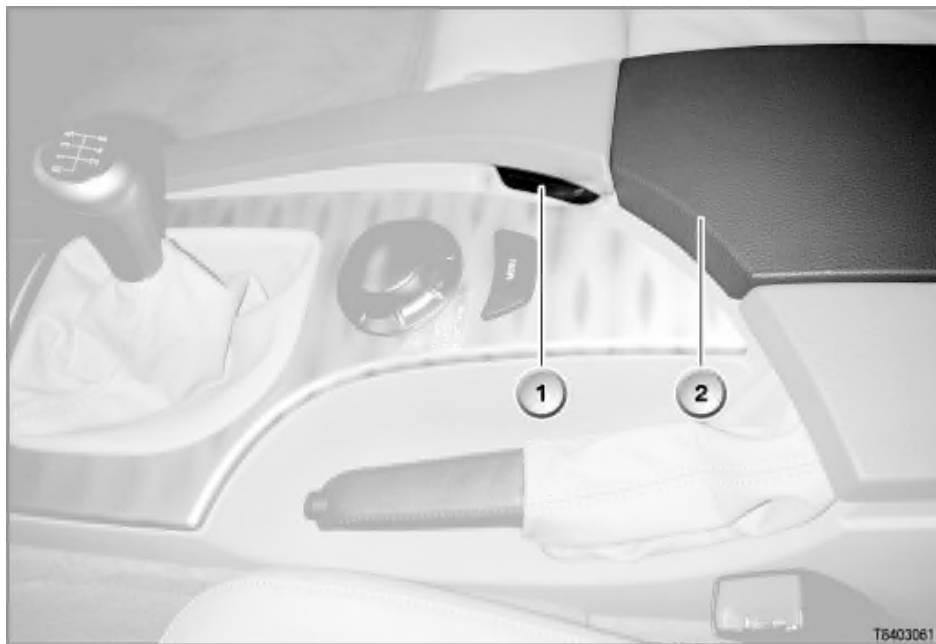


Key	Explanation	Key	Explanation
1	Release button	2	Stowage compartment lid

Construction

The eject box is connected to the TCU (Telematic Control Unit) via a plug connector and the wiring harness. The eject box houses:

- the SIM card holder (Subscriber Identity Module)
- the SIM card reader
- the battery charger for the battery (e.g. lithium ion battery) of the bluetooth handset

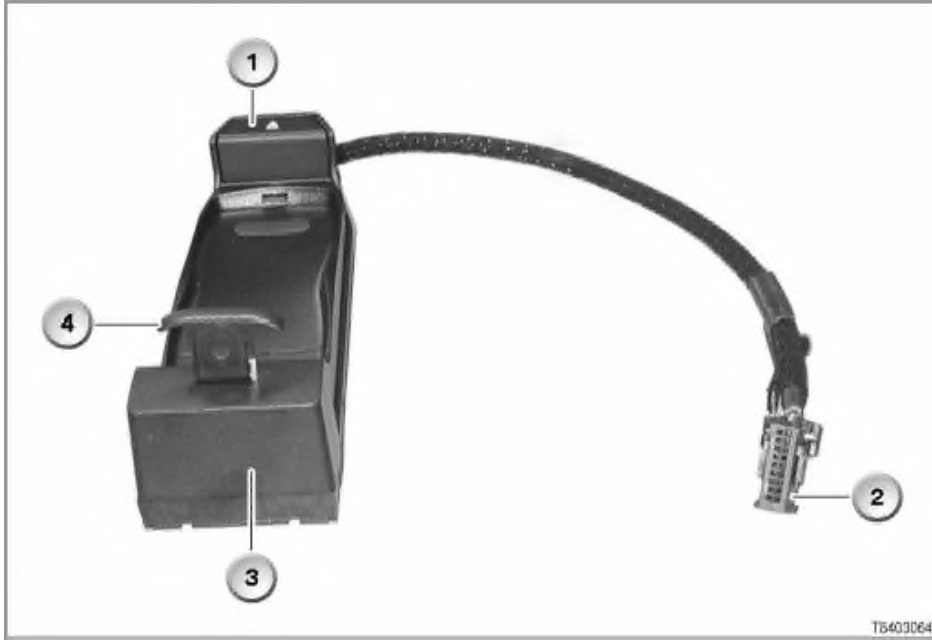

T5403064

Key	Explanation	Key	Explanation
1	Eject button for the bluetooth handset	2	Connector
3	Eject box	4	SIM card holder (Subscriber Identity Module)

How it works

The eject box holds the bluetooth handset. For reasons of safety, the bluetooth handset should be locked in the eject box while the vehicle is being driven.

With the exception of the emergency call function, the telephone functions are only active when a SIM card is inserted.

The battery charger in the eject box is switched on and off by the power management in the TCU (Telematic Control Unit).