

## E60 - Bluetooth antenna

### Installation location

The bluetooth antenna is located under the rear shelf (parcel shelf) (not illustrated).

### Construction

The bluetooth antenna is located in a closed housing.



1. Bluetooth antenna
2. Aerial connector

### How it works

The bluetooth antenna is the transmit/receive antenna on the TCU (Telematic Control Unit) for communication with the bluetooth handset. The bluetooth antenna is designed for a frequency of 2.45 GHz.