


*Necessary preliminary tasks:*

- Remove left luggage compartment trim panel
- Remove right luggage compartment trim panel

M5 only:

- Remove guide for bumper at bottom rear

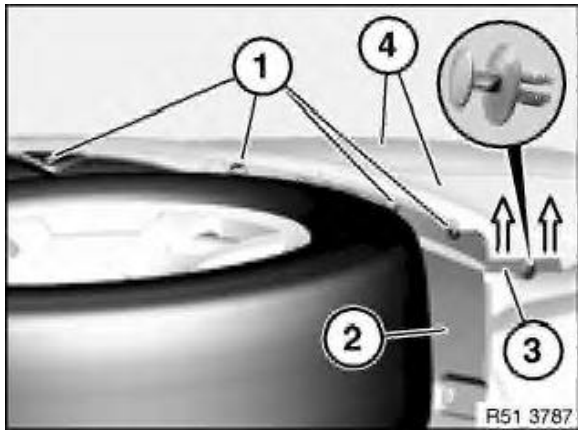


Release screws (1) from wheel arch cover (2) on left/right.

Release expansion rivet on left/right.

Pull bumper trim (4) out of mounting (3).

*Installation:*


Make sure bumper trim (4) is correctly positioned in relation to mounting (3).

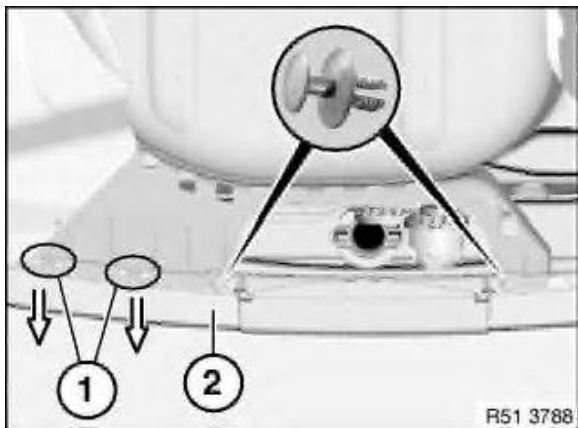

**Not M5**

Release expansion rivets on bottom middle guide.

Release bumper trim (2) from catches (1).

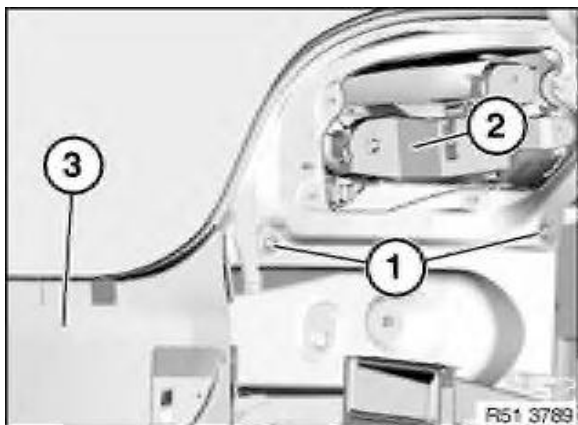

Release screws (1) with sealing washers on left/right.


2 Tail light

3 Trim, rear apron

*Installation:*

Replace screws (1) with sealing washers.

Tightening torque 51 16 8AZ .

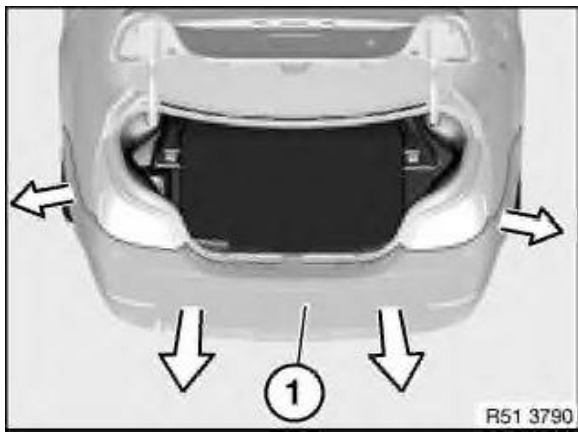


Unclip bumper trim (1) to side panel (1) on left/right outwards.


Remove bumper trim (1) in direction of arrow towards rear.

With optional extra PDC:

Disconnect plug connection (wiring harness) of ultrasonic transducers.

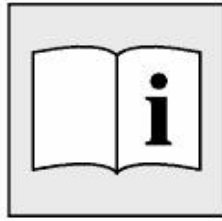*Necessary preliminary tasks:*

- Remove luggage compartment floor trim panel.

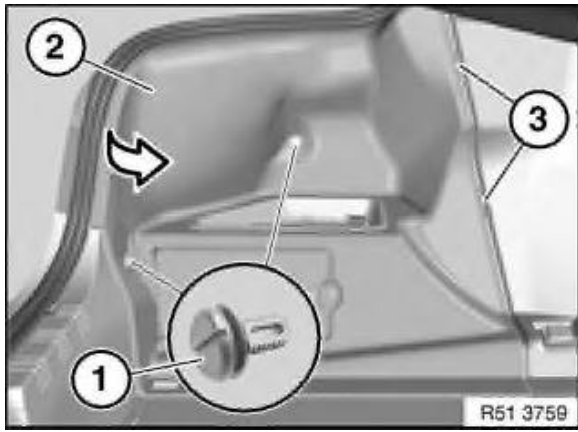


Open rotary clips (1) and remove.


Feed out luggage compartment trim on left side panel (2) in direction of arrow and remove.

*Installation:*


Correctly feed in guides (3) of luggage compartment trim on left side panel (2).

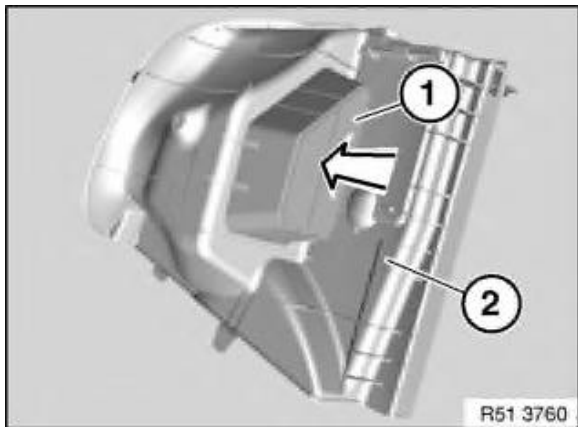Replacement:

If necessary, unclip storage compartment (1) all round and remove in direction of arrow from luggage compartment trim on left side panel (2).

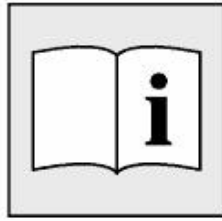*Necessary preliminary tasks:*

- Remove luggage compartment floor trim panel.

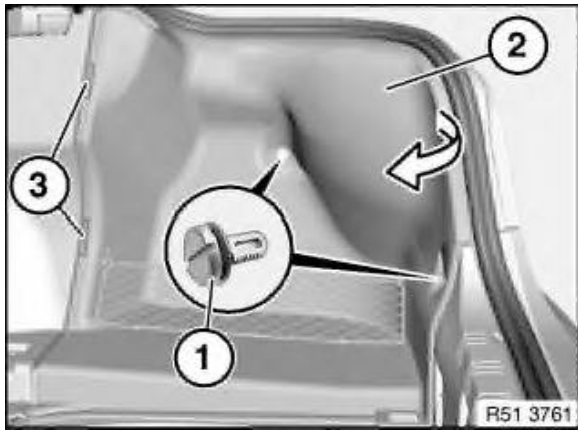


Open rotary clips (1) and remove.

Feed out luggage compartment trim on right side panel (2) in direction of arrow and remove.

*Installation:*

Correctly feed in guides (3) of luggage compartment trim on right side panel (2).

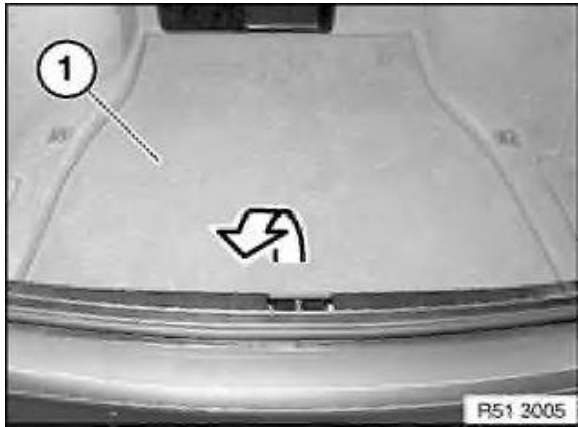

Open rear lid.

Remove luggage compartment floor trim (1).