**Special tools required:**

- 00 9 317

**Warning!**


Side airbag is mounted on door trim panel:  
Disconnect battery.

**Important!**

Do not use any sharp-edged removal tools, risk of damage to  
airbag.

*Necessary preliminary tasks:*

- If necessary, remove footwell light at bottom.
- If necessary, remove LED for door handle/door  
compartment light.

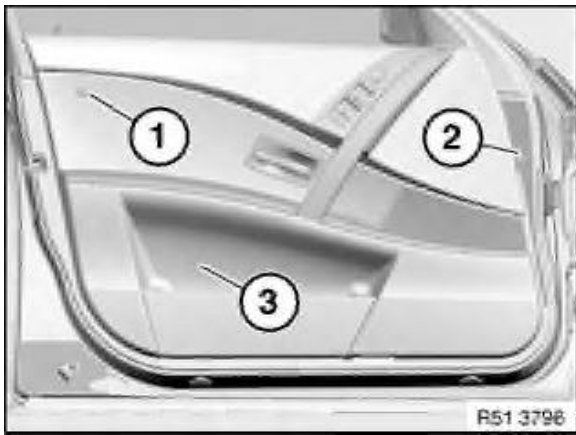


Lever out airbag emblem (1) with special tool 00 9 317 and release screw underneath.

Tightening torque 51 41 1AZ .

Unfasten cap (2) and release screw underneath.

Tightening torque 51 41 4AZ .


3 Door trim panel

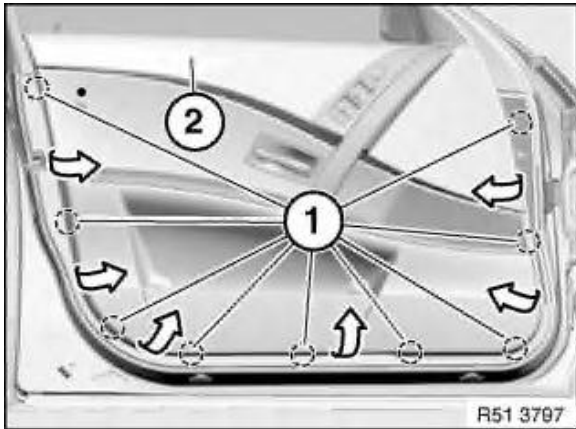

*Note:*

Start by unclipping door trim panel (2) at bottom.

Unclip clips (1) of door trim panel with special tool 00 9 317 .

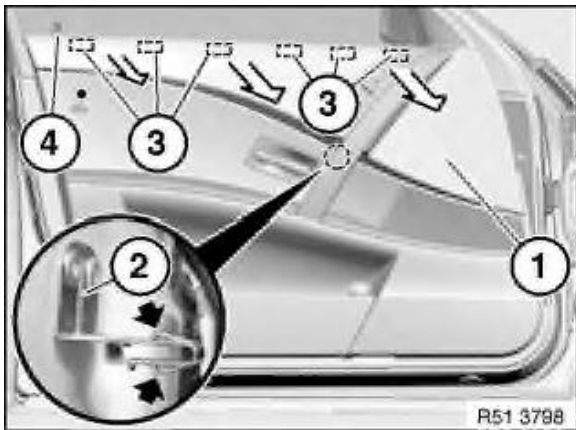


Carefully unclip door trim panel (1) at top from retainers (3).

Feed door trim panel (1) upwards out of central clip mounting and release button (4).

*Installation:*

Attach central clip mounting to door trim panel.

Bend open retainers on inner door plate for accommodating central clip (2) for installation.

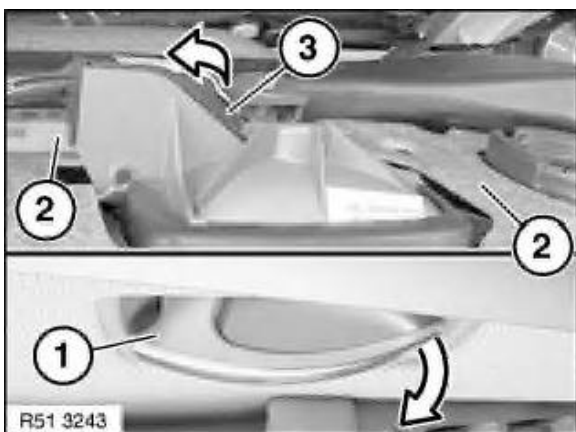

Unhook Bowden cable for release lever:

- Tighten release lever (1).
- Lever out lock (2).
- Detach Bowden cable (3) towards rear/top.


*Installation:*

For fitting, press release lever (1) fully onto door trim panel.



### Warning!


Disconnect plug connection on side airbag.

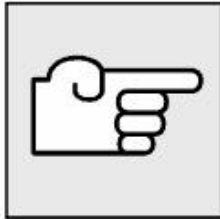

Disconnect remaining plug connections.  
Remove door trim.

### Installation:


Connect all plugs to original locations.

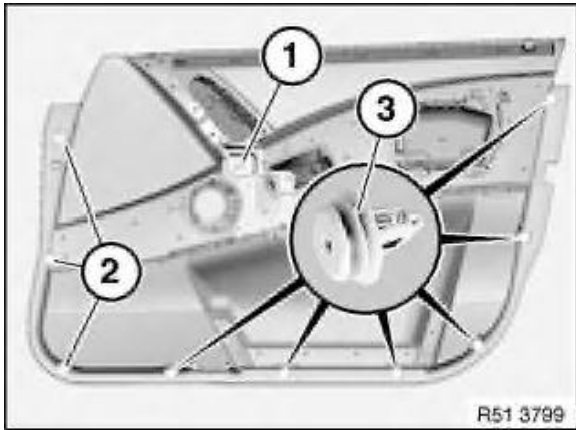

### Installation:

Clips (2) are longer than the other clips.  
Clips (2) are gray, remaining clips (3) are white.  
Fit all clips with sealing ring.  
If necessary, replace faulty clips.

Attach central clip mounting (1) to door trim panel.

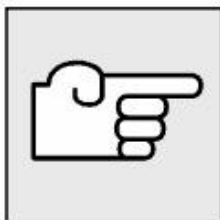

### Installation:

After assembling the door trim panel proceed as follows:

- Open door window,
- lock with ignition key,
- check whether linkage of safety lock button can move freely,
- if necessary, align linkage.