


E60 - Emergency antenna

Installation location

The emergency antenna is located under the rear shelf (parcel shelf).

Construction

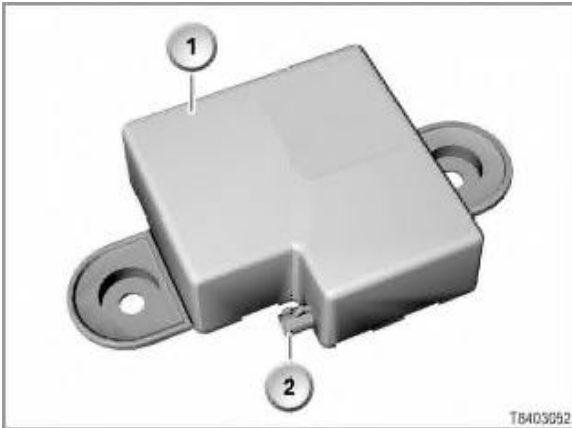

1. Emergency antenna
2. Aerial connector

How it works

The emergency antenna is connected directly to the TCU (Telematic Control Unit). In the event of an accident, the SGM (Safety and Gateway Module) will send a crash message to the TCU. The TCU then triggers an automatic emergency call. If the emergency call cannot be transmitted via the SDARS aerial or the telephone and GPS aerial, the TCU will switch to the emergency antenna.

Note: switching to the emergency antenna

The system will only switch to the emergency antenna if a crash message is present. The system will not switch to the emergency antenna in the event of transmission and reception interference via the SDARS aerial or the telephone and GPS aerial.