
E60 - US compensator

Installation location

If the customer so wishes, the compensator can be installed in the right-hand side of the luggage compartment.

Construction

The compensator is made up of a closed metal housing. The two aerial connectors are for the aerial cables to the eject box and to the SDARS aerial or telephone and GPS aerial.

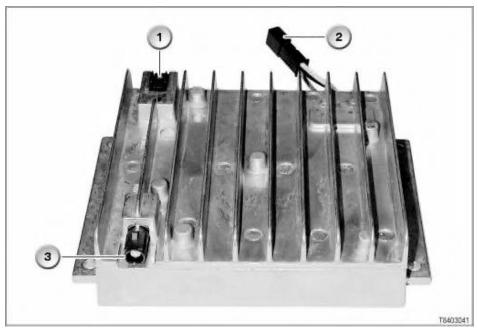

Key	Explanation	Key	Explanation
1	Aerial output to eject box	2	Power supply and TEL_ON control line (switch-on signal for compensator)
3	Aerial input from SDARS aerial or telephone and GPS aerial		

How it works

The compensator equalises losses in the aerial cables. The compensator ensures the full transmitting and receiving power of the mobile phone is available at the aerial.