


Pull up cover (1) between armrest and rear seat back.

Release expansion rivets (2) on trim.

Remove trim (3) towards top, feeding out over armrest buckle latch.

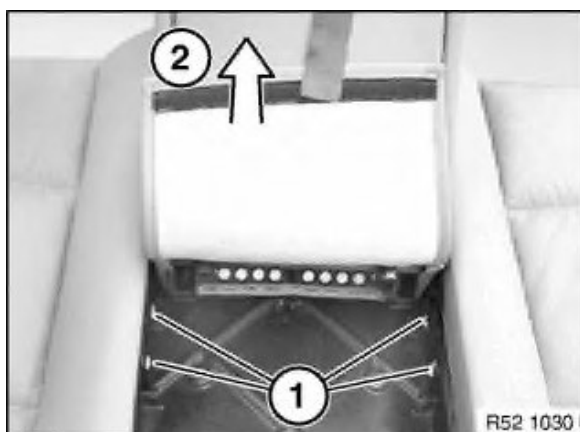

Release screws (1).

Tightening torque: 52 24 5AZ .

Remove armrest (2) towards front.