


Removing rear panel:

1. Pull rear panel on one side at top towards rear slightly.
2. At same time, firmly punch towards middle of seat on other side at top.  
Upper springs pop out of seat guide.
3. Pull rear panel up out of lower guides.

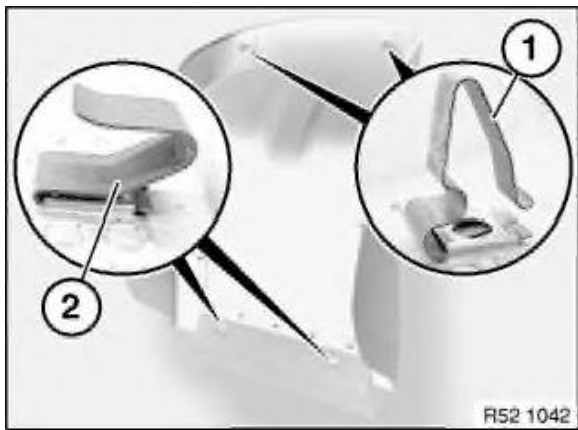

*Installation:*

Rear panel and springs (1= top, 2= bottom) must not be damaged.