
*Necessary preliminary tasks:*

- Remove trim for storage compartment
- Remove rear compartment fresh air grille


Version with rear console:

- Remove rear console

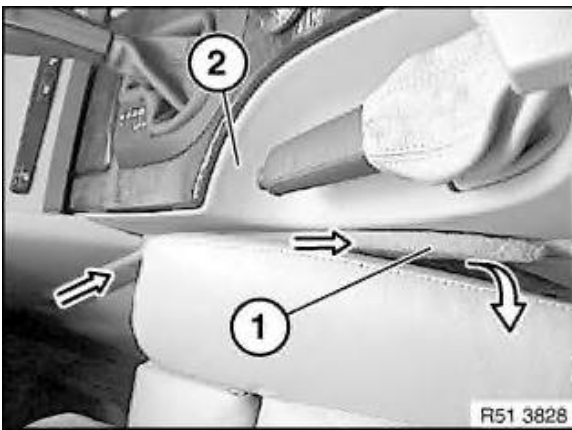


Lever out trims (1) on left/right at rear end and pull out in direction of arrow.


2 Centre console

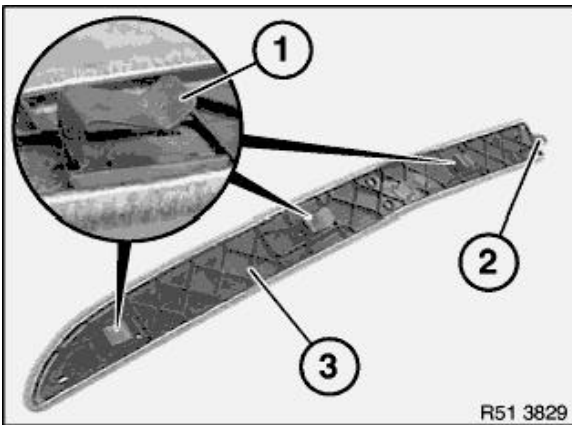*Installation:*


Retainers (1) and guide (2) on trim (3) must not be damaged or missing.

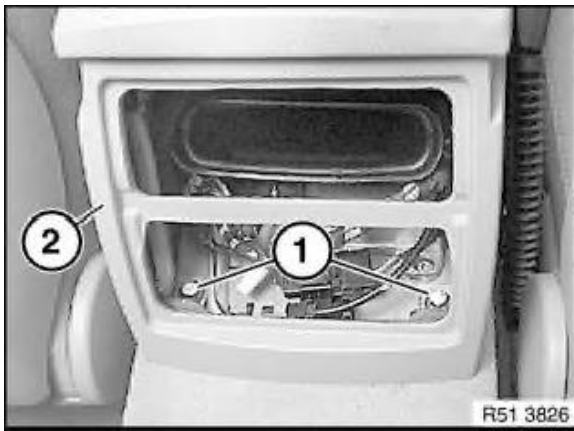


Release screws (1) on storage compartment (2).
If necessary, unlock plug connections.

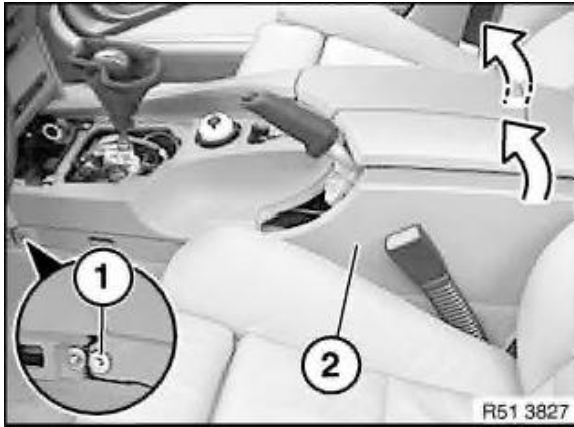


Release handbrake lever gaiter on storage compartment (2).
Release screw (1) on left/right.
Raise storage compartment (2) at rear and feed through handbrake lever gaiter downwards.
Unlock plug connections under storage compartment (2) and on socket.
Feed out storage compartment (2) in direction of arrow over handbrake lever and remove towards rear.

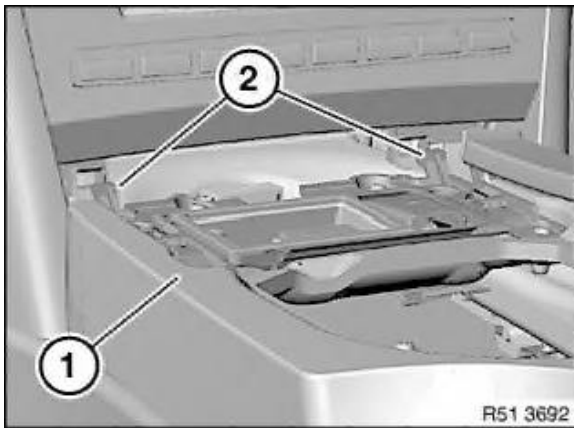

Installation:
Do not damage guides (2) when feeding storage compartment (1) in.

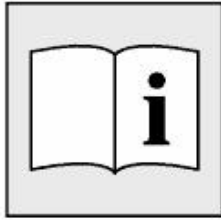*Necessary preliminary tasks:*

- Remove finisher for preselector lever
- Remove knob for controller
- Remove button unit

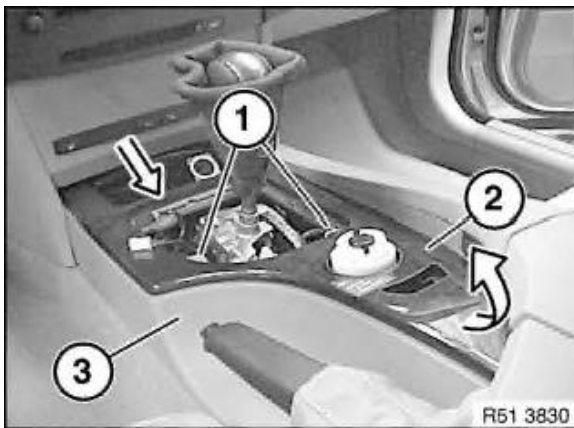

If necessary, remove ashtray insert.

Release screws (1) on storage compartment (3).

Open centre console cover.


Press release button for centre console cover and lever out finisher (2) for storage tray at rear.

Pull off finisher (2) towards rear.

If necessary, disconnect plug connections on insert at front.

Security version:

Disconnect plug connection on intercom system switch.

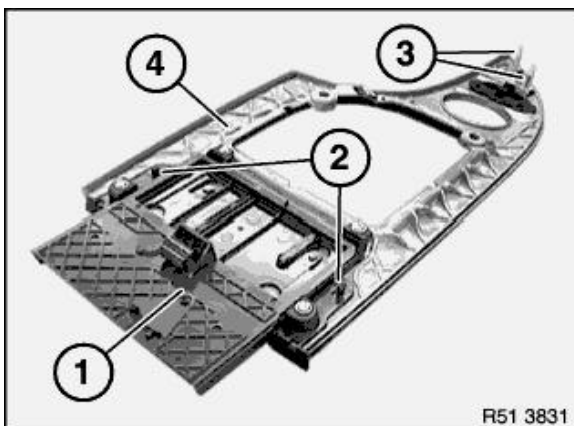*Installation:*

Following parts of trim (4) must not be damaged or missing:


- 1 Front insert
- 2 Retaining lugs
- 3 Pins or spring clips

Replacement:


Remove front insert (1) .

Replacement with Security version:


Remove intercom system switch.

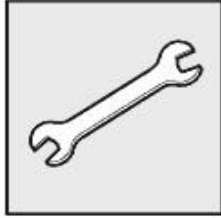**Special tools required:**


- 00 9 341

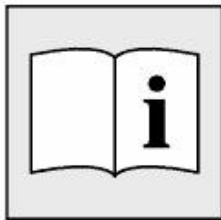*Necessary preliminary tasks:*

- Apply parking brake
- Version with automatic transmission: Move selector lever into N position
- Version with manual transmission: Engage neutral

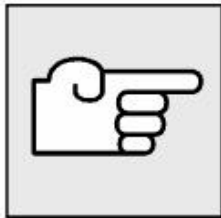*Note:*

Removing the trim for the preselector lever or gearshift lever is virtually identical. The illustrations show the removal of the trim for the preselector lever in versions with automatic transmissions.

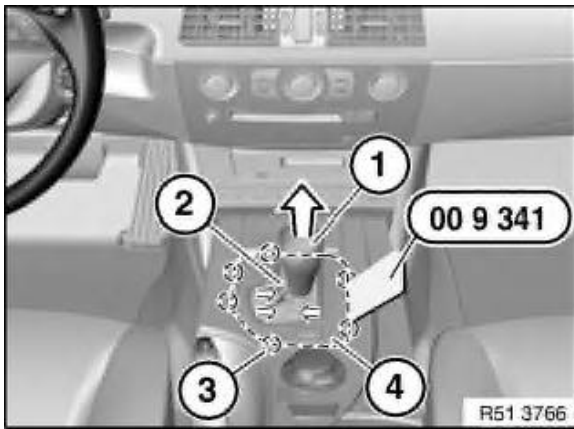

Note:

To be able to remove the preselector lever trim, it is not absolutely necessary to remove the selector lever knob (1). However, removing it does make it easier to remove the preselector lever trim.

Important!

Do not shear off turning lock of selector lever knob (1).


Therefore do not twist selector lever knob (1) when removing.

Pull off selector lever knob (1) with a forceful jerk.

Press sides of selector lever cover (2) together and feed out towards top.

Unclip trim for preselector lever (4) with special tool 00 9 341 from mounting points (3).

Disconnect associated plug connections and remove trim for preselector lever (4) towards top.

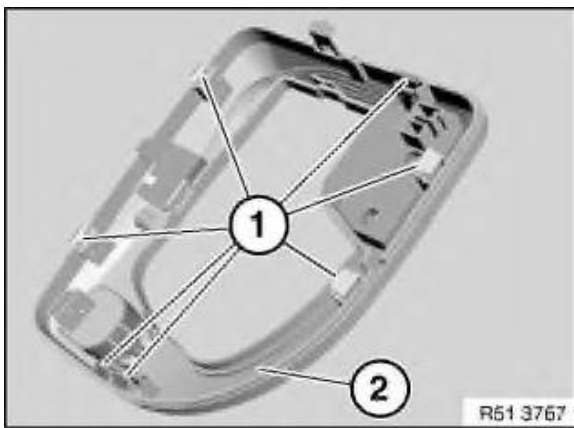


Installation:


Make sure retainers (1) are correctly seated in appropriate mounts of trim for preselector lever (2).

Replacement:

If necessary, remove driving dynamics switch.

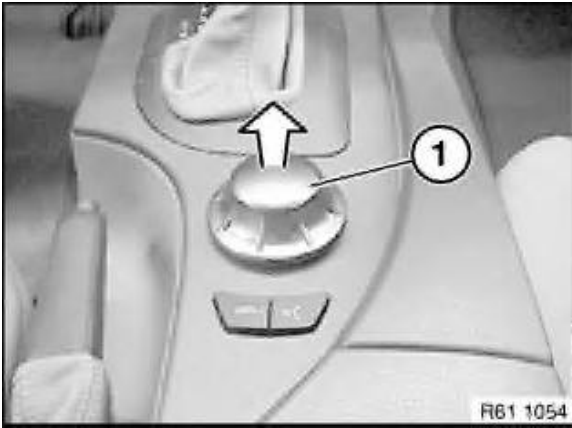


Detach knob for controller (1) in direction of arrow.

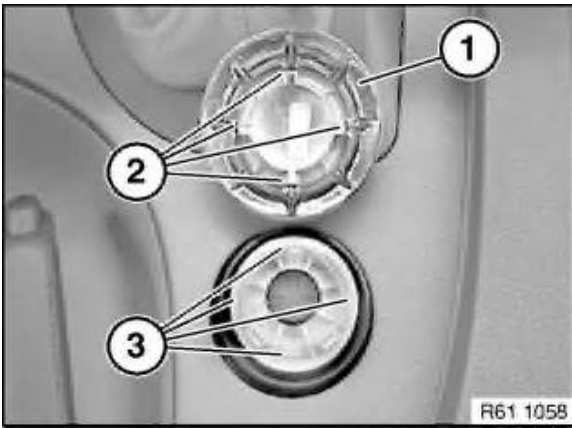


Installation:

Fit knob for controller (1) so that guides (2) are seated in mountings (3).

Press knob for controller (1) in middle until it engages.

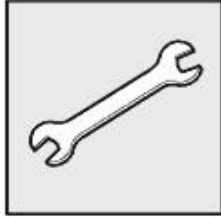**Special tools required:**

- 00 9 341

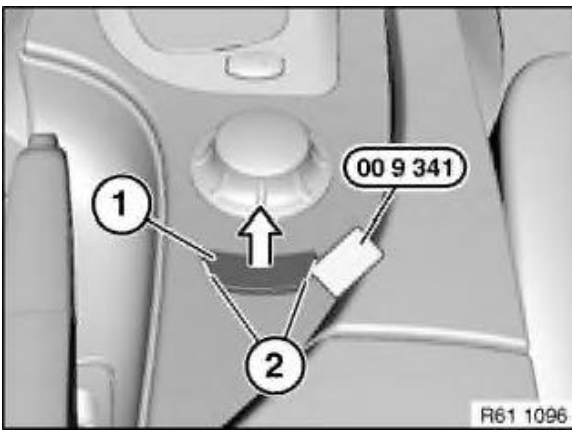


Unclip button unit (1) with special tool 00 9 341 at retaining points (2) and lever out in direction of arrow.

Unlock and disconnect associated plug connection, remove button unit (1).

*Necessary preliminary tasks:*

- Remove insert in storage compartment at rear bottom

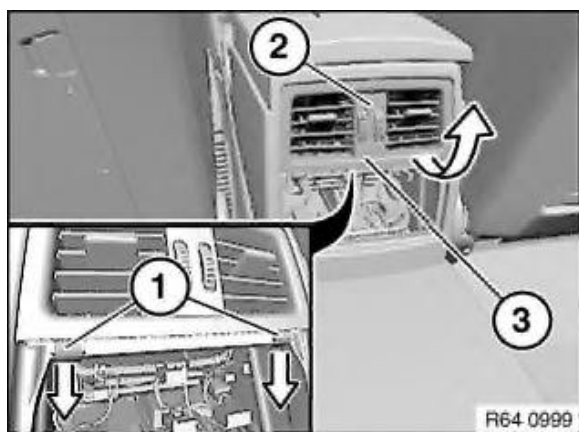


Detach clips (1) in direction of arrow.


Remove rear compartment fresh-air grille (2) in direction of arrow and unlock plug connection (3) underneath.

Installation:

Make sure rear compartment fresh-air grille (2) and clips (1) are correctly seated.

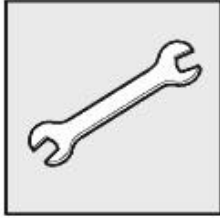**Special tools required:**

- 00 9 341

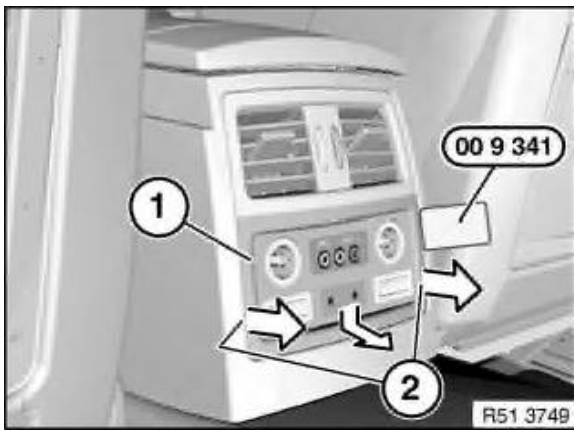

Unclip rear insert (1) with special tool 00 9 341 at retaining points (2) and pull back in direction of arrow.

Disconnect associated plug connections and remove rear insert (1).