

51 16 ... Removing and installing/replacing rear insert (in storage compartment)

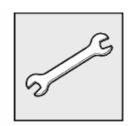

## **Special tools required:**

• 00 9 341

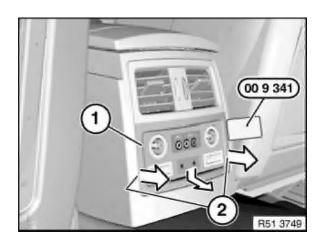

Unclip rear insert (1) with special tool 00 9 341 at retaining points (2) and pull back in direction of arrow.

Disconnect associated plug connections and remove rear insert (1).