

13 72 001Replacing air filter element (N62)

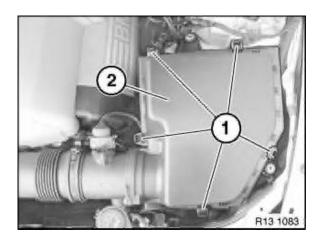

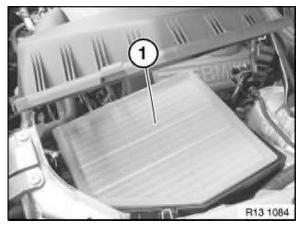

Open clips (1). Lift top section (2) of intake filter housing.

Remove air cleaner element (1).

## Installation:

Clean upper and lower sections of intake filter housing from inside. Install new air cleaner element.