


Unlock plug (1) and remove.

Unfasten hose clip (2).


Open locks (3).

Remove upper section of intake filter housing (4) towards top right.

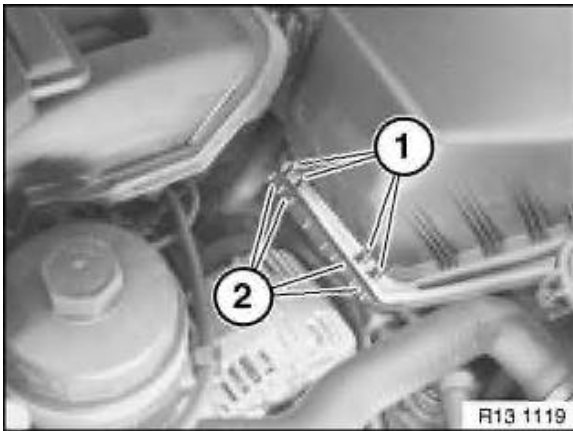

*Installation:*

Make sure lugs (1) are correctly locked in opening slots (2).

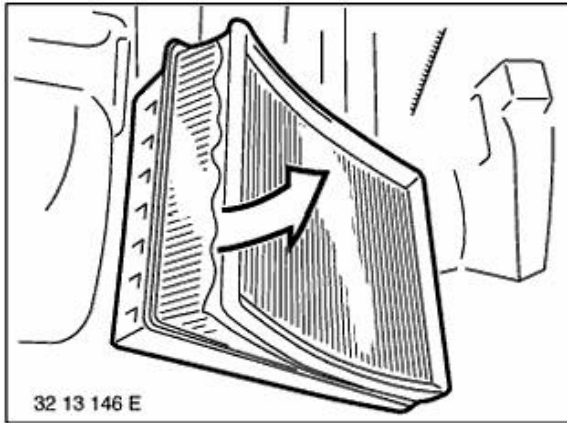

Remove air cleaner element from intake filter housing.

*Installation:*

Clean intake filter housing from inside.

Install new air cleaner element.