
51 16 **080**


Removing and installing or replacing sun visor and left or right counter support

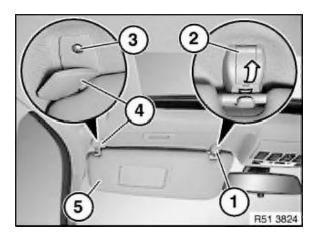

Fold down sun visor (5).

Lever out trim (2) on counter support (1) and release screw underneath.

Lever out cover (4) on joint and release screw (3).

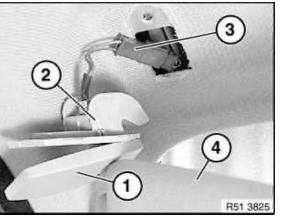

Lift out sun visor. Pull out cable slightly and disconnect plug (3).

Installation: Cover (2) or trim (1) must not be damaged. Perform function check on lighting.