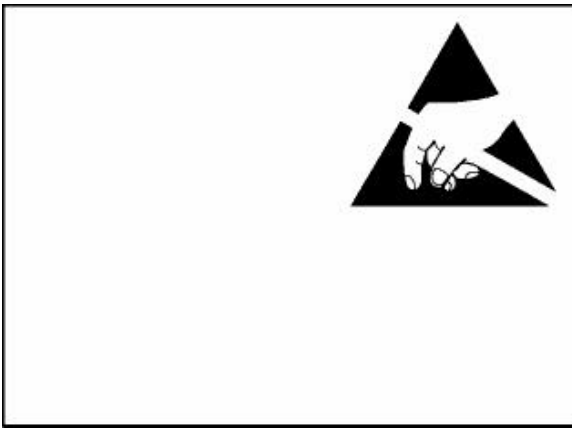


*Necessary preliminary tasks:*

- Switch off ignition
- Disconnect battery negative lead
- Remove right fresh air duct

Important!


Follow instructions for removing and installing electronic control units.

**Important!**

Read and comply with notes on protection against electrostatic damage (ESD protection).

Replacement:

- Program control unit
- Code control unit

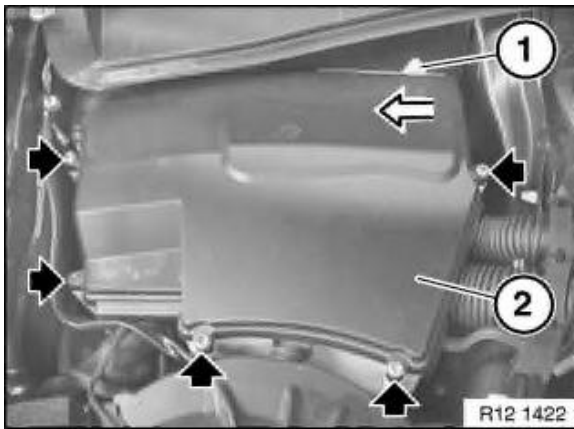

Unlock stopper (1) in direction of arrow.

Unfasten screws.

Lift out cover (2).

Security version:

Remove DME armour plating



Unlock and detach all plug connections on DME control unit (1).

Unlock DME control unit (1) and remove towards top.