


**Important!**

Do not twist volute spring cassette.

When installing, make sure that the locking pin on the rear side of the steering wheel engages in the driver recess.

**Necessary preliminary tasks:**

- Remove airbag unit
- Move steering wheel to straight-ahead position

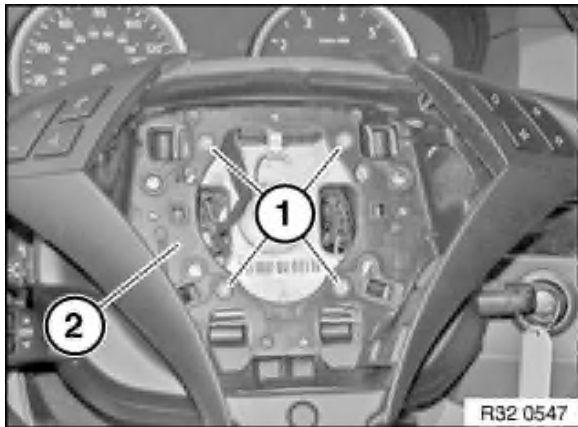**Replacement only:**

Release screws (1).

Important!

Risk of breakage!

Carefully remove multifunction steering wheel switches with decorative strips and retaining plate (2) from steering wheel.


Disconnect plug connections on reverse side and remove retaining plate (2).

Installation:

Make sure connecting cables are correctly routed.

Make sure that decorative strips and both multifunction steering wheel switches are correctly positioned on steering wheel (guide pins must not be damaged).

Tightening torque 32 33 2AZ .

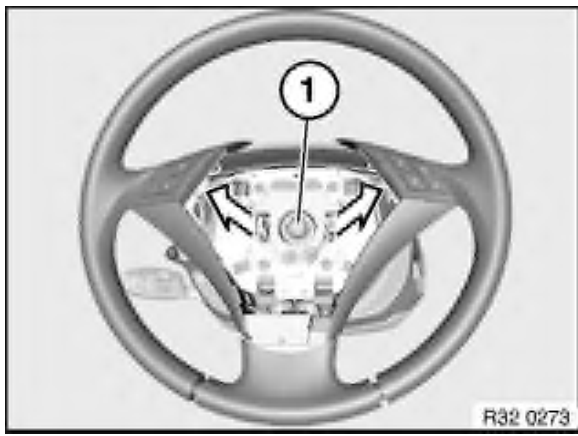

Disconnect plug connection(s).

Remove connecting lead(s) from steering wheel.


Release screw (1) and remove steering wheel.

Secure volute spring cassette with adhesive tape against twisting.

Installation:

Make sure connecting lead(s) is/are correctly laid.

Tightening torque 32 33 1AZ .

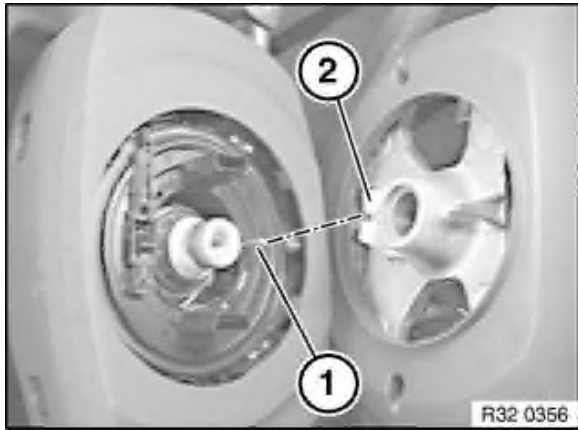

Installation:

Locking pin (1) must engage in recess of driver (2).

Align steering wheel using grooved toothings to steering column and attach.