
**Important!**

Read and comply with notes on protection against electrostatic damage (ESD protection).

*Necessary preliminary tasks:*Version with Autobeam:


- Remove interior rear-view mirror

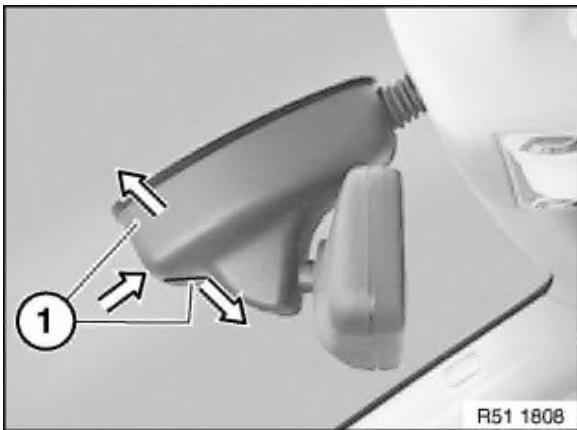

Detach two-part mirror base cover (1) by pressing from below. Feed out two-part mirror base cover (1) and remove.

*Note:*

Catches of two-part mirror base cover (1) must not be damaged or missing.

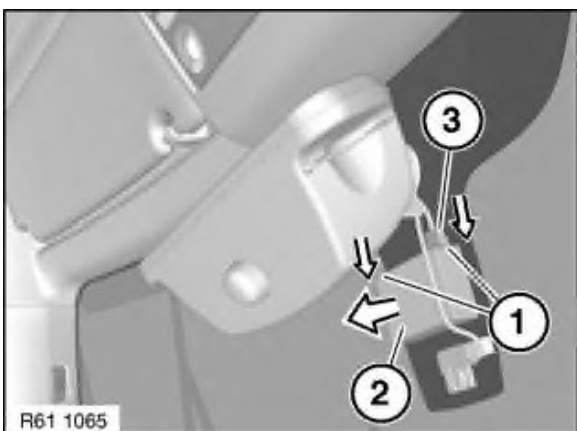

Disconnect plug connection (3).

Release locks (1) in direction of arrow and remove rain/light sensor (2) from optical element.

*Installation:*

Do not damage optical element covered by rain/light sensor (2). Initialize rain/light sensor.



Replacement:

Carry out vehicle programming/coding.