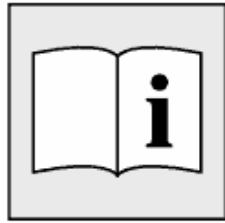



- |   |                                     |    |                                      |
|---|-------------------------------------|----|--------------------------------------|
| 1 | Trim for storage compartment        | 8  | Eject box                            |
| 2 | Centre console                      | 9  | Button unit for on-board monitor     |
| 3 | Centre armrest                      | 10 | Trim with fastener                   |
| 4 | Trim on storage compartment, rear   | 11 | Controller                           |
| 5 | Insert on storage compartment, rear | 12 | Trim for preselector lever           |
| 6 | Fresh-air grille, rear compartment  | 13 | Insert on storage compartment, front |
| 7 | Cover, centre console               |    |                                      |

*Necessary preliminary tasks:*


- Remove trim for storage compartment
- Remove rear compartment fresh air grille
- If necessary, remove USB/AUX connecting socket

Version with rear console:


- Remove rear console

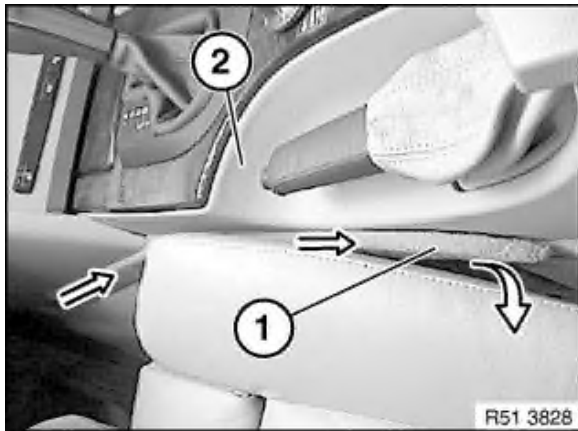

Lever out trims (1) on left/right at rear end and pull out of storage compartment in direction of arrow.

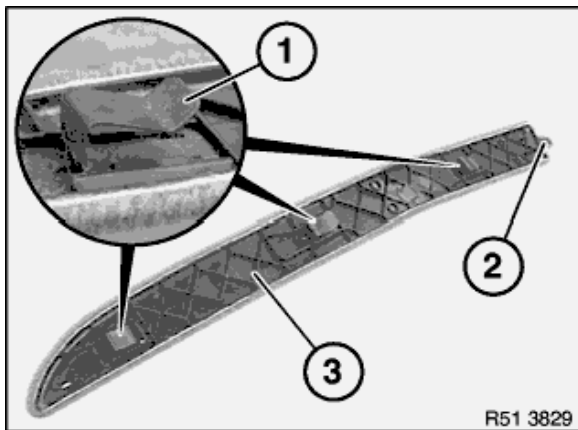
*Installation:*

Retainers (1) and guide (2) on trim (3) must not be damaged or missing.

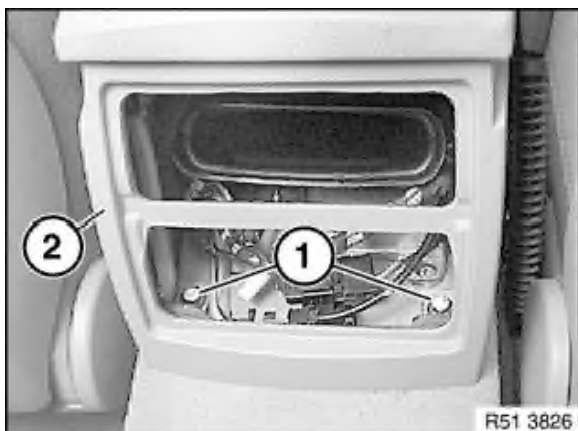

Release screws (1) on storage compartment (2).  
If necessary, unlock plug connections.


Detach knob for controller (1) in direction of arrow.

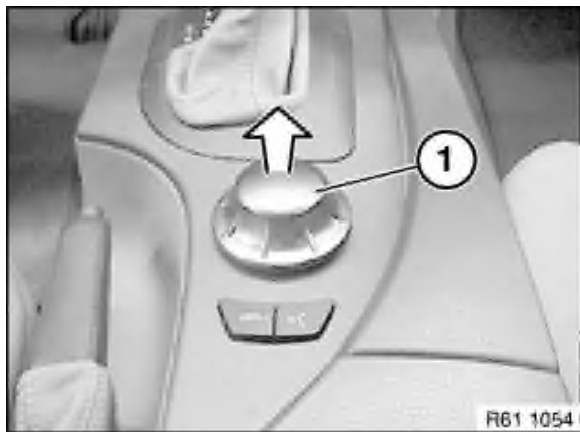


*Installation:*


Fit knob for controller (1) so that guides (2) are seated in mountings (3).

Press knob for controller (1) in middle until it engages.

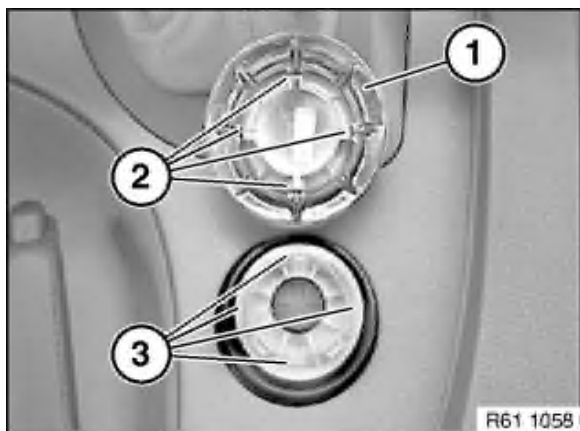

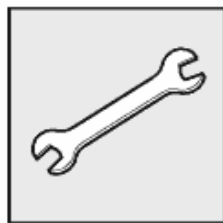
**Special tools required:**

- 00 9 341

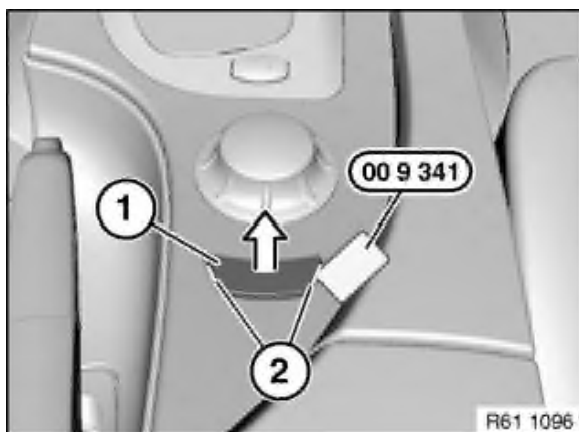

Unclip button unit (1) with special tool 00 9 341 at retaining points (2) and lever out in direction of arrow.

Unlock and disconnect associated plug connection, remove button unit (1).

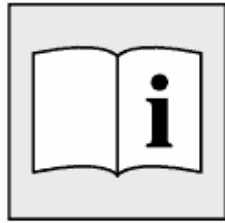*Necessary preliminary tasks:*


- Remove knob for controller
- Remove button unit

Version with manual transmission:

- Remove gaiter for gear lever

Version with automatic transmission or SMG:

- Remove finisher for preselector lever

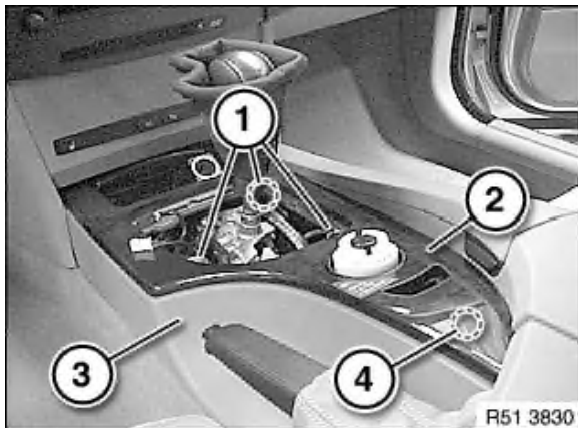

If necessary, remove ashtray insert.

Release screws (1).

Open centre console cover.


Press release button for centre console cover and release trim (2) from catches (4).

Feed trim (2) towards top/rear out of storage compartment (3).

If necessary, disconnect plug connections on insert at front.

Security version:

Disconnect plug connection on intercom system switch.

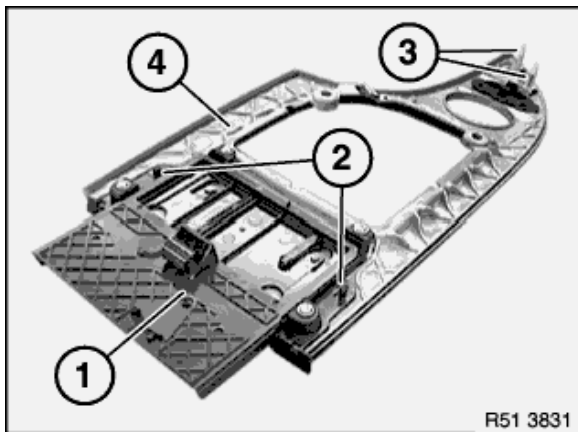*Installation:*

Following parts of trim (4) must not be damaged or missing:


- 1 Front insert
- 2 Retaining lugs
- 3 Pins or spring clips

**Replacement:**


Remove front insert (1) .

**Replacement with Security version:**

Remove intercom system switch.

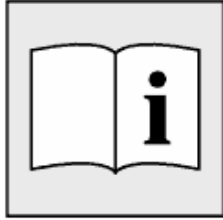*Necessary preliminary tasks:*

- Remove insert in storage compartment at rear bottom

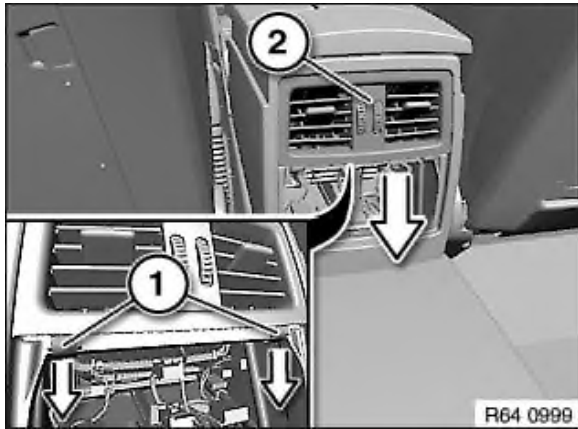


Detach clips (1) in direction of arrow.


Remove fresh-air grille (2) in direction of arrow and disconnect associated plug connection.

*Installation:*

Make sure rear cabin fresh-air grille (2) and clips (1) are correctly seated.

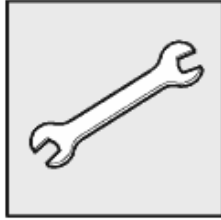**Special tools required:**

- 00 9 341

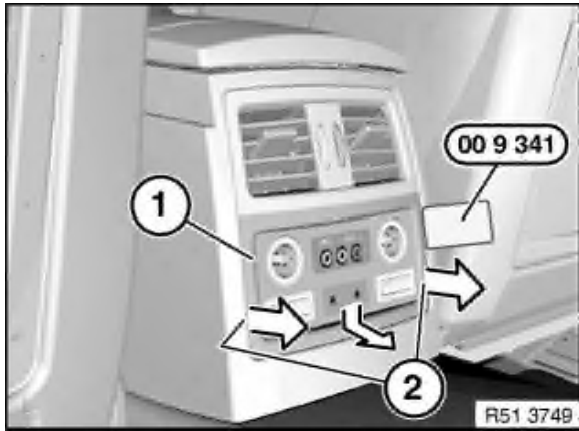

Unclip rear insert (1) with special tool 00 9 341 at retaining points (2) and pull back in direction of arrow.

Disconnect associated plug connections and remove rear insert (1).



Lever out gaiter (1) at catches (2).



Reach into trim (1) and unclip upwards from retainers (2).




### Important!

Risk of damage!

Gaiter (1) can be damaged on trim (2) when fed out.

Press gaiter (1) together slightly and feed out through trim (2).

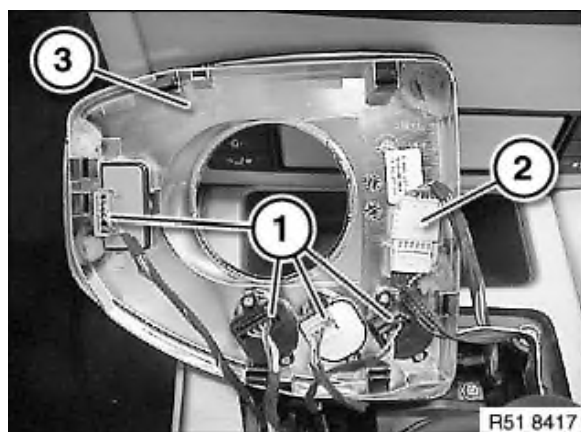

Disconnect plugs (1 and 2).

Remove finisher strip (3).

### Installation:

Plug connection (2) must be correctly clipped into trim (3).