

**4-door models only:**

Unclip rear seat on left/right towards top.

For op. ext. seat heating only:

Disconnect cable.

Lift out seat.

Installation:

Feed belt buckles and lap belt (1) through intended openings into correct position.

**2-door models only:**

Unclip rear seat on left/right towards top.

For op. ext. seat heating only:

Disconnect cable.

Pull out seat (if necessary under armrests) towards front.

Installation:

Feed belt buckles and lap belt through intended openings into correct position.

If necessary, make sure ISOFIX covers are correctly engaged.