

*Note:*

Open front cup holder (2).

Release screws (1) and remove front cup holder (2) in direction of arrow.