

*Necessary preliminary tasks:*

- Read fault memory of DDE control unit
- Switch off ignition
- Remove upper section of intake filter housing

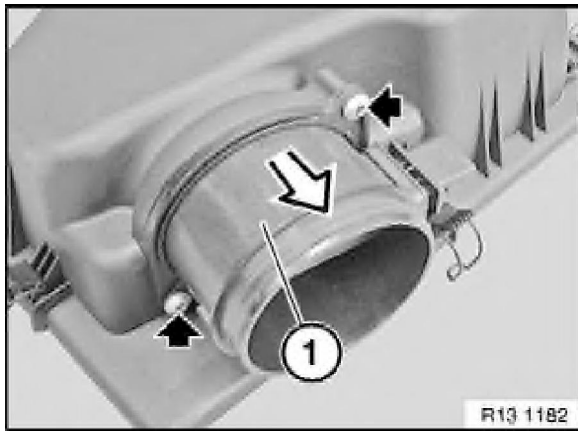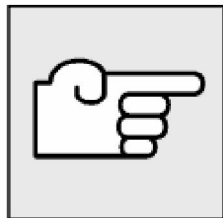

Unfasten screws.

Remove air-mass sensor (1) in direction of arrow.

*Note:*

Check stored fault messages.  
Now clear the fault memory.