
61 31 083 Removing and installing/replacing switch for unlocking rear lid

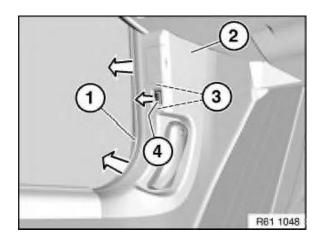

Note:

To unclip switch for unlocking rear lid (4), partially detach mucket (1).

Grip from outside behind footwell side trim panel on A-pillar on left (2).

Press retaining lugs (3) together and feed switch for unlocking rear lid (4) out of footwell side trim panel on A-pillar on left (2). Disconnect associated plug connection and remove switch for unlocking rear lid (4).