*Necessary preliminary tasks:*

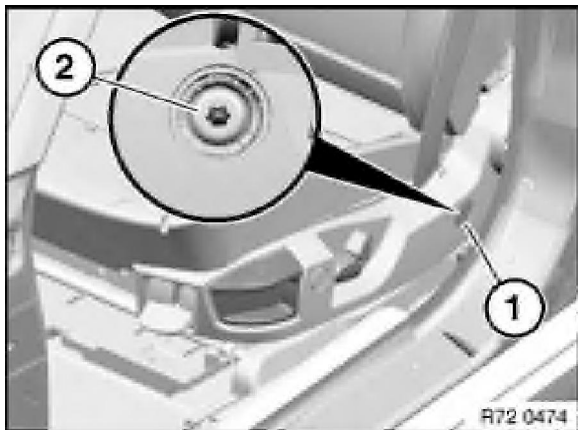
- Remove panel for door post

**Warning!**

Read and comply with safety regulations for handling airbag modules and pyrotechnical belt tensioners.

Improper handling can lead to triggering of the pyrotechnical seat belt tensioner or side airbag, resulting in injuries.

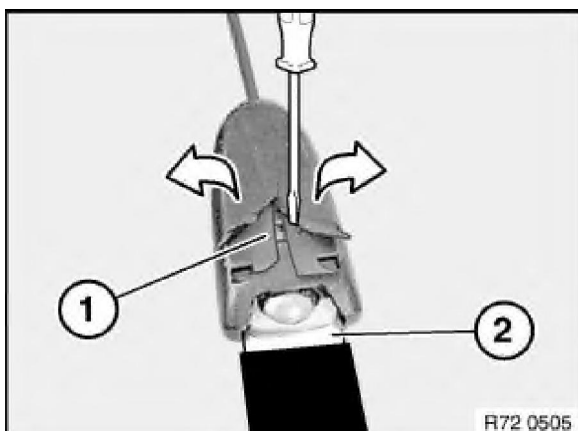
Switch off ignition!

Manual/semi-electric seat adjustment only:

Lever out plug (1).

Release screw (2).

Tightening torque 72 11 05AZ .

Driver's seat with anchor fitting tensioner only: (from 04/2004)

If necessary, detach felt.

Using screwdriver, press pin (1) into recess and release anchor fitting (2).

*Installation:*

Anchor fitting (2) is coded.