VEHICLE DIAGNOSTIC REPORT



Shop Name: SAABTECHKEYS

Tel: 08077983808

Address: NO 12 BOUNDARY ROAD, AJEGUNLE APAPA,

AJEGUNLE APAPA, LAGOS

Technician Date&Time: 2020-03-20 09:21:18

Customer information

Title 2003_10 BMW 5'/530i_M54

Year 2003_10 VIN: WBANA72030B185767

Make BMW Lic Plate

Model 5'/530i_M54 Odometer Mileage

Sub model E60/EUR_RL Color

Engine

Status

Status

Technician notes

Scan report

Soul Toport	
System	Status
DME (Engine-Motor Electronics)	Fault 1
EGS (Electronic Transmission Management)	Pass No Fault
ABS-DSC (ABS-Dynamic Stability Control)	Fault 2
SGM-SIM (Safety And Information Module-SIM)	Fault 1
KOMBI (Instrument Cluster)	Pass No Fault
CAS (Car Access System)	Fault 1
MOST (Media Oriented Systems Transport System Analysis)	Pass No Fault
SGM-ZGM (Safety And Gateway Module-ZGM)	Pass No Fault
SZL (Airbag-Steering Column Switch Cluster)	Fault 1
TMFA (Driver Door Module)	Pass No Fault
TMBF (Passenger Door Module)	Pass No Fault
SFZ (Airbag-Vehicle Center Satellite)	Fault 1
AL (Active Steering)	Pass No Fault
TCU (Telematic Control Unit)	Pass No Fault
SHD (Slide/Tilt Sunroof)	Pass No Fault
RLS (Rain/Light Sensor)	Pass No Fault
M-ASK-GW (Audio System Controller-Gateway)	Pass No Fault
M-ASK-BO (Audio System Controller-User Interface)	Pass No Fault
SZM (Center Console Switch Cluster)	Pass No Fault
CON (Controller)	Pass No Fault

www.autel.com Page 1

VEHICLE DIAGNOSTIC REPORT AUTEL®



SMFA (Driver Seat Module)	Pass No Fault
SMBF (Front Passenger Seat Module)	Pass No Fault
LM2 (Light Module 2)	Fault 2
KBM (Body Basic Module)	Pass No Fault
CID (Central Information Display)	Pass No Fault
IHKA (Integrated Automatic Heating And A/C System)	Pass No Fault
SBSL (Airbag-Left B-Pillar Satellite)	Pass No Fault
SBSR (Airbag-Right B-Pillar Satellite)	Pass No Fault
ARS2 (Active Roll Stabilization Dynamic Drive 2)	Fault 3

DTC

System	Codes	Description	Status
DME (Engine-Motor Electronics)	281D	Digital Motor Electronics (DME): BSD (Bit-Serial Data Interface) generator, signal	present
ABS-DSC (ABS- Dynamic Stability Control)	5F12	Dynamic Stability Control (DSC): brake pad wear, front axle, brake pads	present
ABS-DSC (ABS- Dynamic Stability Control)	5F13	Dynamic Stability Control (DSC): brake pad wear, rear axle, brake pads	present
SGM-SIM (Safety And Information Module- SIM)	93F9	SGM-SIM: control unit fault	present
CAS (Car Access System)	A0B5	Car Access System (CAS): fault, road speed signal	present
SZL (Airbag-Steering Column Switch Cluster)	9501	SZL (Steering Column Switch Cluster): LWS (Steering Angle Sensor) adjustment	present
SFZ (Airbag-Vehicle Center Satellite)	9AFD	SFZ (Vehicle Center Satellite): SBK (Safety Battery Terminal) firing circuit short to positive	present
LM2 (Light Module 2)	9CB3	Light Module (LM): front ride height sensor faulty	present
LM2 (Light Module 2)	9CB4	Light Module (LM): rear ride height sensor faulty	present
ARS2 (Active Roll Stabilization Dynamic Drive 2)	5D67	ARS: consistency, VIN	present
ARS2 (Active Roll Stabilization Dynamic Drive 2)	D1E4	Message (steering wheel angle) error, receiver ARS, transmitter SZL	present
ARS2 (Active Roll Stabilization Dynamic Drive 2)	D1EB	Message (kilometer reading) from the KOMBI (Instrument Cluster) faulty, receiver ARS, transmitter KOMBI	present

Page 2 www.autel.com