

I01122
Switch for steering wheel heater
and steering column adjustment

LHZ

GND


LED+

1

2

3

X01196

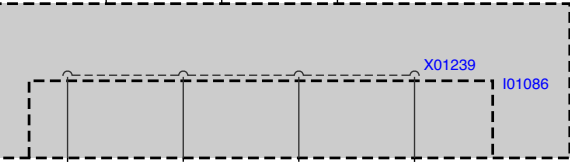

A72
Steering column switch cluster

X01239

I01086

2

X01006

1

2

X01002

3

X01001

LHZ+

LHZ-

LHZ_NTC

GND

X01236

1

X01234

1

2

X01009

1

X01235



I01118
Steering wheel heating with
temperature sensor