
51 11 160 Removing and installing/replacing trim for air duct on bumper trim

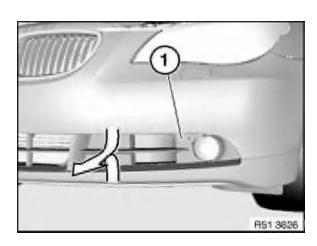

Unclip trim (1) by moving up or down. Remove trim towards front.

Installation:

Retaining elements must not be damaged. Trim must snap securely into place.