

Integrated automatic heating/air-conditioning system (IHKA), Basic and High

E60, E61, E63, E64



Introduction

The integrated automatic heating/air conditioning system (IHKA) is available in the versions Basic and High (special equipment option 534).

- E60 and E61

Standard equipment: IHKA Basic (IHKA High on 545i)

- E63 and E64

Standard equipment: IHKA High

The automatic air-conditioning system High generates a very high level of climatic comfort with separate adjustment for the driver's side and for the front-passenger side. [System overview ...]

New features of the IHKA:

- An **electric auxiliary heater** working on the PTC principle (positive temperature coefficient) is installed on vehicles with diesel engines

The electric auxiliary heater is a component of the heat exchanger for the heating system. Electric heating elements made of aluminium have been added to the plates in the coolant flow of the heating system heat exchanger. The air drawn in is directly heated by these heating elements and fed into the vehicle interior through the air vents. In principle, the electric auxiliary heater works like an electric fan heater.

- **Condensation sensor**

The condensation sensor detects an imminent misting up of the windscreen, before condensation actually forms. To prevent the windows from misting over, the IHKA control unit starts to work through a table of measures as soon as a certain level of humidity is detected at the windscreen.

- **LIN bus (Local Interconnect Network bus)**

The LIN bus serves to actuate flap motors, the electric auxiliary heater and the blower motor in the heating/air-conditioning system.

- **Convertible program (E64 only)**

W

hen the convertible top is opened and the air-conditioning system is in automatic mode, the convertible program is automatically activated.

The convertible program adapts the air-conditioner settings (blower, airflow, temperature) to the conditions created by the open top. The settings do not have to be changed when the top is opened or closed.

The convertible program is stored in the IHKA control unit.

Differences between IHKA Basic and IHKA High:

	Basic	High
Solar sensor	---	1
Condensation sensor	---	1
AUC sensor	---	1
Sensor for heating system heat exchanger	1	2
Ventilation temperature sensor	---	1
Rear compartment flap motor (air stratification)	---	1
Ventilation flap motor	1	2
Footwell flap motor	1	2

Differences/modifications from E39:

- New IHKA controls with additional functions: OFF button, temperature and airflow are set with rotary switches. On the IHKA Basic, the manual air distribution is set with the IHKA controls. On the IHKA High, the manual air distribution is set with the controller on the CID (Central Information Display) .
- Revised display concept
The scale on the rotary switch for the blower setting has a 9-element LED display. The manual blower speed setting is shown by the corresponding LEDs lighting up. In automatic mode, the display remains off (IHKA High only).
The LCD display from earlier versions has been discontinued. Additional air-conditioning functions such as air stratification or independent heater (option 536) are selected and activated in the Central Information Display (CID) using the controller.
- The flap drives are only operated by flap motors.
- Separate left/right-hand footwell flaps, (IHKA High only)
- Separate ventilation flaps, (IHKA High only)
- Intake fan arrangement in the heating/air-conditioning system
The fan is located after the evaporator.
- On vehicles with diesel engine, a heating system heat exchanger is installed with integrated electric auxiliary heater. The same heating system heat exchanger is used for both Basic and High versions.
- Clutchless, externally actuated a/c compressor with regulated performance
- Sensor for automatic air-recirculation control (AUC sensor, IHKA High only)

- Solar sensor for taking external light/heat sources into account, which could affect the air conditioning in the vehicle interior (IHKA High only).

Benefits of system:

- The efficiency and functionality of the IHKA has been improved compared to the predecessor model. Despite this, the size is some 1/3 smaller than on the E39.
- The electric auxiliary heater accelerates the heating of the vehicle interior, especially at low ambient temperatures and during the cold-start phase. This clears the windows of condensation more quickly.
- The condensation sensor automatically prevents/eliminates condensation on the inside of the windscreen, before it becomes visible.
- The variable evaporator control extracts less humidity from the air. This reduces the risk of mucous membranes drying out.

Brief description of components

Sensors:

- **Interior temperature sensor**
The force-ventilated sensor with interior temperature sensor fan is fitted in the IHKA controls. The sensor measures the temperature of the air drawn in from the vehicle interior by the integrated interior temperature sensor blower.
- **Solar sensor (IHKA High only)**
The solar sensor is located in the middle of the dashboard. (The installation position of the solar sensor in the E63/E64 has been turned through 180°.) This sensor is only active in automatic mode. The solar sensor takes external sources of light or heat (e.g. direct sunlight) into account, which could affect the air conditioning of the vehicle interior.
The sensor consists of 2 photoresistors. The sensor supplies the IHKA control unit with analogue signals for the driver's and front-passenger sides. The signal depends on the intensity of sunlight.
- **Sensor for automatic air-recirculation control (IHKA High only)**
The AUC sensor is installed at the top of the fan cowl. The sensor is exposed to the sideways downwind from the auxiliary fan. The AUC sensor detects the following pollutant emissions from spark-ignition and diesel engines:
 - Hydrocarbons (HC)
 - Carbon monoxide (CO)
 - Nitric oxides (nitrogen monoxide NO, nitrogen dioxide NO₂)
- **Condensation sensor (IHKA High only)**
The sensor is located under the rain/light sensor. In IHKA automatic mode, the sensor measures the humidity in the vehicle interior and on the inside of the windscreen. The sensor detects an imminent misting up of the windscreen, before condensation actually forms. The condensation sensor is not active in the convertible program.
[more ...]
- **Heating system heat exchanger sensor**
The sensor is integrated in the heating/air-conditioning system. On the IHKA Basic, the sensor measures the delivery temperature on the driver's side, directly on the delivery side of the heating system heat exchanger. On the IHKA High, 2 sensors are installed as the delivery temperatures are measured separately at the heating system heat exchanger for the driver's side and for the front-passenger side.

- **Evaporator temperature sensor**
The sensor measures the outlet temperature of the refrigerant at the evaporator to prevent icing from occurring.
- **Ventilation temperature sensor (IHKA High only)**
A sensor is integrated in the air duct to measure the ventilation temperatures. This sensor measures the delivery temperature directly in the middle of the ventilation grille.
- **Refrigerant pressure sensor**
This sensor is located in the pressure line between the condenser and the evaporator. Depending on the sensor signal, the A/C compressor is switched off by the IHKA control unit in the event of excessively high system pressure.

Control unit:

- **IHKA controls / control unit**
The IHKA controls and the IHKA control unit are united in a single component. The Basic and High versions have different IHKA controls. [more ...]

Actuators:

- **Electric auxiliary heater**
The heating elements of the electric auxiliary heater are integrated into the heating system heat exchanger and directly heat the air drawn in to control the temperature of the air inside the vehicle. [more ...]
- **Flap motors**
On the IHKA Basic, 6 flap motors control the ventilation flaps. The IHKA High has 9 flap motors due to the left/right separation for the driver's side and the front-passenger side and because of the additional rear compartment flap. [more ...]
- **Blower with blower regulator**
The blower generates the necessary airflow. The blower is installed after the evaporator in the heating/air-conditioning system (suction fan) and is equipped with 2 blower wheels.
The blower regulator is fitted directly on the blower motor housing. The blower regulator is capable of self-diagnosis. The blower regulator is actuated by the IHKA control unit (via the LIN bus). The blower regulator controls the blower motor with a pulse-modulated signal
(P
W
M
signal).
- **A/C compressor**
The A/C compressor compresses the refrigerant drawn in from the evaporator and presses it to the condenser. The A/C compressor used is clutch-free. That means that the A/C compressor always runs with the engine. A swash plate in the A/C compressor allows the output to be smoothly regulated. To reduce load, only the cooling output actually needed is generated. [more ...]
- **Evaporator**
The evaporator plates are cooled by the refrigerant that has been evaporated inside the evaporator. The airflow generated by the blower is fed over the cooled evaporator plates. The air is cooled and dried and fed into the vehicle.
- **Auxiliary water pump**
The auxiliary water pump serves to make sure that the coolant flow rate needed in the heater circuit is maintained, even at low engine speeds.
On vehicles with diesel engine and independent heating (option 536), there is no auxiliary water pump in the engine compartment. Its job is assumed by the independent heater's auxiliary water pump and is controlled by the independent heating control unit.
- **Water valve**

The water valve works electromagnetically and meters the coolant flow rate to the heating system heat exchanger as it is needed. This determines the temperature of the air used for heating the vehicle interior. On the IHKA High, a dual water valve is used for the left/right separation of the heating system heat exchanger.

- **Switchover valve**

The switchover valve is only installed if the vehicle is equipped with independent heating (option 536). The switchover valve regulates the inlet to the independent heating as follows:

- From the radiator and the auxiliary water pump
- or
- From the return flow from the heating system heat exchanger

The switchover valve is actuated by the independent heating control unit.

- **Auxiliary fan**

The auxiliary fan is standard on all vehicles with IHKA. Besides the engine cooling, the auxiliary fan is also needed for cooling the condensers. [more ...]

- **Condenser with integrated drier flask**

Refrigerant is converted from gas into liquid in the condenser. Any water that may be present in the refrigerant circuit is collected in the integrated drier flask, which is installed downstream of the condenser. The drier element can be exchanged.

- **Expansion valve**

The expansion valve is directly on the evaporator in the heating/air-conditioning system. The valve regulates the injection rate in the evaporator. Only as much liquid refrigerant is permitted to enter the evaporator as the evaporator is able to completely evaporate. Drops of liquid that have not been evaporated could cause damage in the A/C compressor.

Additional components:

- **Microfilter**

On the IHKA Basic, fresh air for interior ventilation is fed through a system of microfilters. On the IHKA High, a microfilter with activated carbon is fitted. The activated-charcoal filter helps to provide additional purification of the incoming air from gaseous pollutant emissions.

W

hen a filter replacement is needed, this will be indicated by the Condition Based Service (CBS) display.

- **Rear air-stratification flap potentiometer (IHKA High only)**

The selected potentiometer setting is transposed into the rear compartment flap motor position.

- **LIN bus**

The IHKA control unit controls the following components via the LIN bus:

- Electric auxiliary heater
- Flap motors
- Blower with blower regulator

- **Control and display functions via controller and Central Information Display**

The following control and display functions are selected and activated on the CID (Central Information Display) with the controller (move controller to left in start menu):

- Temperature control (IHKA Basic)

The temperature for the driver's and front-passenger sides are centrally set on the IHKA controls. The temperature can be increased or decreased from this central setting using 3 selectable settings (warmer, neutral, colder).

- Temperature control (IHKA High)
The temperature can be increased or decreased separately on the driver's side and front-passenger side in 4 increments.
- Independent heater (optional)
Select between direct operation and programming with timer.
- Independent ventilation (IHKA High only)
Select between direct operation and programming with timer.
- Air distribution (IHKA High only)
The airflow for the driver's and front-passenger sides are centrally set on the IHKA controls. Deviating from these central setting, the airflow can be adjusted separately for the footwell and upper body (driver's and front-passenger sides).
The driver-side setting applies for both sides in the area of the windscreen.

>E64

W

When the convertible program is active, air distribution is switched to the upper body and head. Airflow to the footwell is throttled.

- A/C program
The A/C program is called up as follows:
 1. Press the controller in the start menu (5. menu)
 2. Select "Vehicle settings" and press controller.
 3. Select "A/C settings" and press controller.
 4. The following settings are available in the menu level "automatic program":
 - gentle
 - medium
 - intensive
 - convertible program (selection only possible when convertible top is open)

The selection of gentle, medium and intensive is not possible when the convertible program is active.

W

When the convertible program is deactivated, the air-conditioning system acts as if the convertible top were closed (selection of gentle, medium and intensive is again possible).

The following control unit is also active in the IHKA:

- **Convertible top module (E64 only)**

The convertible top module

(CV

M

) provides the IHKA control unit with the signal whether the convertible top is open or closed. The convertible top module is connected to the K-CAN.

The convertible top module is installed under the rear left side trim.

System functions

The IHKA comprises the following functions:

- Temperature control

- Evaporator control
- Air distribution setting
- Airflow control
- Sunlight adaptation (solar sensor, IHKA High only)
- M
A
X
cooling (IHKA High only)
- M
maximum heating
- Residual heat (IHKA High only)
- Defrost function (IHKA High only)
- Heated rear window
- Heated washer jets
- OFF
- Air recirculation mode
- Automatic air recirculation
- Automatic air-recirculation control (IHKA High)
- Program for avoiding condensation on the window surfaces (IHKA High only)
- Convertible program (E64 only)
- Independent ventilation function (IHKA High only)
- Independent heater (option 536)

Temperature control

In the heating/air-conditioning system, the air-mass flow is first cooled and dried at the evaporator (provided the air conditioner is switched on). Then the airflow is heated to the required temperature at the heating system heat exchanger.

- IHKA Basic

The temperature in the heating system heat exchanger is controlled with the help of the heating system heat exchanger sensor and a pulsed water valve in the heater circuit. The water valve is actuated with a pulse-modulated signal

(P
W
M

signal) by the IHKA control unit. A map for the heating system heat exchanger determines the opening times for the water valve, depending on the engine speed.

A master controller regulates the temperature inside the vehicle. Regulation is based on the specification set at the rotary switch (adjustment range: 17-27 °C) and the actual value (= interior temperature).

The lead parameter is derived from the comparison of the actual interior temperature and the corrected specification (customer setting + ambient temperature). Compared to the set specification, the interior temperature is raised in the cold so that a comfortable level is achieved even at negative temperatures, despite the temperature setting being unchanged. The ambient temperature is transmitted through the body CAN (controller area network) to the IHKA control unit.

An auxiliary regulating circuit relieves the master controller by eliminating any fault quantities that could be detected in the heating/air-conditioning system in the form of a temperature change. Disturbances are caused by:

- Fluctuations in air volume

- Fluctuations in coolant flow in engine heater circuit
 - Temperature changes in fresh air
- IHKA High

The separate temperature setting for the driver's side and the front-passenger side affects:

- heating system heat exchanger with left/right separation
- 2 heating system heat exchanger sensors
- Dual water valve

The temperature is regulated by 2 master controllers. Regulation is based on the specification set at the rotary switch and the actual value (= interior temperature).

Through the left/right separation, 2 auxiliary regulating circuits relieve the two master controllers.

The solar sensor compensates for additional fault quantities caused by external sources of light or heat (e.g. direct sunlight).

Note: Reaching maximum outlet temperature in ventilation area.

The maximum outlet temperature in the ventilation area is reached as follows:

- Set the rotary switch for temperature selection to maximum temperature (28 °C)
- Set temperature layering as follows with the CID:
 - IHKA Basic:
air stratification to "red" (warmer)
 - IHKA High:
All 4 red bars must be displayed.

Evaporator control

The evaporator temperature is regulated with the help of the evaporator temperature sensor and a controllable expansion valve. The evaporator temperature is set to the predefined specification of 2 °C. Lower temperatures are not possible due to the risk of icing.

If the "variable evaporator control" function has been encoded, the specified evaporator temperature is calculated in the range between 2 and 7 °C. The specification depends on the ambient temperature, the ventilation temperature and the refrigerant pressure. A variable evaporator control reduces dehumidification. This reduces the risk of mucous membranes drying out.

Air distribution setting

Occupants have the possibility of allowing the air distribution to be decided by the automatic program (AUTO button). Alternatively, manual selection (defrost, ventilation, footwell) allows an individual, personal air distribution.

Important for the optimal function of the air distribution is that the manually adjustable air vents are open.

Airflow control

The airflow control is dependent on the following settings and control actions:

- M
annual blower setting
The blower setting is made with the rotary switch in the IHKA controls.
- Automatic blower and flap setting
The automatic blower and flap functions are activated when the AUTO button is pressed.
- Automatic blower speed increase

The automatic blower speed increase function is available with both manual and automatic flap settings. To make a rapid heating or cooling possible from extreme interior temperatures, the standard range of adjustment is extended.

- Dynamic pressure compensation

W

Without dynamic pressure compensation, the airflow through the fresh air grille would be increased disproportionately with increasing road speed. This effect is compensated for by the opening angle of the fresh-air flap being reduced as speed increases. (The road speed comes from the instrument cluster, through the body CAN to the IHKA control unit. The opening angle is regulated according to an empirically defined map.)

- Blower control

If needed, priority levels are transmitted (through the body CAN) from the power module consumer cutoff to reduce the blower output.

- Effect of terminal 50

During the starting process (terminal 50 ON), the blower is set to OFF to relieve the vehicle battery.

Sunlight adaptation (solar sensor, IHKA High only)

The influence on IHKA regulation by the solar sensor is assigned separately to the driver's side and to the front-passenger side.

The following functions are modified when automatic mode is activated:

- Blower (individual blower proportions of the overall blower output are increased or decreased)
- Air stratification (stratification temperature adjusted)
- Flaps (position of ventilating flaps adjusted)

MAX cooling (IHKA High)

The

M

A

X

button makes it possible for the user to select maximum cooling with just one press of a button at the IHKA controls.

W

hen the

M

A

X

button is pressed, all functions, including the defrost function, are deactivated. The air-conditioning function is activated (if it was not already activated) and defined settings are selected (e.g. temperature control is deactivated, the dual water valve is closed).

Maximum heating

If the rotary switch for temperature selection is turned to the end stop, maximum heating is activated. Regulation of the vehicle's interior temperature is suspended. Predefined settings are selected (e.g. temperature of heating system heat exchanger regulated to maximum setting 90 °C).

Residual heat (IHKA High only)

The residual-heat function makes it possible to utilise the waste heat from the engine to heat the vehicle interior when the engine is not running. The auxiliary water pump is activated to circulate the water.

Switch-on conditions:

- REST button in IHKA controls ON
and
- ambient temperature below 25 °C
and
- engine temperature above 60 °C
and
- ignition lock position R or ignition OFF
and
- 15 minutes after terminal 15 OFF not yet expired

Defrost function (IHKA High only)

The defrost function is activated with the defrost button in the IHKA controls. This opens the defroster flap (on the inside in front of the windscreen) fully. The fresh-air/air-recirculation flaps move to the "fresh air" position. All other flaps are closed. The blower can be set manually.

Heated rear window

The heated rear window is switched on by pressing the heated rear window button in the IHKA controls. The function indicator lamp in the button lights up.

The heated rear window is switched off when the button is pressed again, or automatically when the heating period of 10 or 17 minutes has expired. If the button is pressed again during the heating phase, the afterheating phase (approx. 5 minutes) starts.

- Defrosting phase
When terminal 15 is switched ON, the first time the system is switched on, the time span for the heated rear window is defined as follows:
Ambient temperature down to -15 °C: Heating period: 10 minutes
Ambient temperature below 15 °C: Heating period: 17 minutes
- Pulsing
After the defrosting phase, the heating phase (60 minutes at 1/3 heat output pulsing) begins (on-off cycle: 3 seconds ON, 9 seconds OFF).
The function indicator lamp in the button is off during pulsing.

Heated washer jets

The washer jets are heated, depending on the ambient temperature (under 3 °C). The IHKA control unit actuates the

no

Z

Z

le heating.

OFF

Press the OFF button to completely switch the IHKA controls off.

Air-recirculation mode

In air-recirculation mode, the flow of outside air can be stopped to prevent pollution from entering the vehicle, e.g. in traffic congestion. Air from the vehicle interior is continuously circulated.

To prevent the windows from misting over, air recirculation is only available for a limited period of time.

Automatic air recirculation

In automatic mode, the system will automatically switch to air-recirculation mode if an extreme cooling output is called for. This allows the vehicle interior to be cooled more quickly. Air from the vehicle interior that has already been cooled is fed through the evaporator again. This reduces the temperature level much faster than it would in normal operation.

Automatic air-recirculation mode initially runs for 12 minutes in full air-recirculation mode and then continuously in partially fresh-air mode (fresh-air flap opening angle: approx. 10 %).

Automatic air-recirculation control (IHKA High)

If the AUC sensor detects an excessively high pollutant level in the environment, the IHKA control unit will automatically switch to air-recirculation mode.

Because of the lack of a fresh-air supply, air-recirculation mode is only available for a limited period of time:

- In heating mode at ambient temperatures above 6 °C, air recirculation is limited to 4 minutes. This is followed by fresh air for 1 minute.
- In air-conditioning mode at ambient temperatures above 6 °C, air recirculation is limited to 12 minutes. This is followed by fresh air for 1 minute.
- At ambient temperatures between 6 °C and 0 °C, air recirculation is limited to 3 minutes. At ambient temperatures below 0 °C, air recirculation is limited to 2 minutes. This is followed by fresh air for 1 minute.

W

hen the engine is started and the AUC function activated, fresh air is always selected for approx. 40 seconds due to the warming phase of the AUC sensor.

Program for avoiding condensation on the window surfaces (IHKA High only)

M

asures to prevent condensation on the windscreen depend on a number of conditions:

- The engine must be running
- The IHKA must be in automatic mode

The IHKA control unit evaluates condensation sensor signal (humidity). If condensation on the windscreen is imminent, the following measures are initiated in turn until the condensation has been eliminated. If one measure proves to be ineffective, the next measure is initiated. Once successful, the measures previously performed are reversed step-by-step in reverse order.

M

asures against condensation on windscreen:

- Open the defrost flaps further (max. 17.5 %)
- Switch to partially fresh air from air-recirculation/AUC/automatic air-recirculation mode
- Switch from partially fresh air in air-recirculation/AUC/automatic air-recirculation mode to fresh air
- Switch off variable evaporator control
- Raise blower speed (max. 28 %)
- Reduce airflow to footwell (by about 60 %)
- Increase temperature setting (by max. 2.5 °C)

Convertible program (E64 only)

The convertible program is activated in the factory. (this factory setting can be deactivated with the Car and Key Memory)

Switch-on conditions:

- Terminal 15 ON
- Convertible top open

The convertible program comprises the following functions:

- The condensation sensor is switched off
- The blower speed increases with increasing road speed
- Air distribution is switched to the upper body and head, airflow to the footwell is throttled
- Dynamic pressure compensation is changed, i.e. as road speed increases, the volume of air fed into the vehicle through the fresh air grille increases.
- Solar sensor control variables are changed

When

the convertible top is open, the solar sensor evaluates the surrounding brightness (darkness to intense sunshine) more strongly. For this reason, the solar sensor has a stronger effect on the IHKA controls when the convertible top is open.

In the convertible program, the blower speed can be changed manually at the IHKA controls. The automatic flap control remains active (no change to flap position).

If the convertible program is active and the flap positions are changed with the CID and controller, the convertible program will be deactivated. This means that manual settings will be assumed, unchanged settings will revert to those that the air-conditioning system had before the convertible top was closed. The convertible program can be completely reactivated by pressing the AUTO button.

Independent ventilation function

The independent ventilation function is activated either via the Central Information Display (CID) or via Telestart (through the Car Access System (CAS)). There are 2 ways of activating the system via the CID: Direct operation or programming using the timer.

If the independent ventilation function is programmed via the timer, the independent ventilation function will only be available at exterior temperatures above 15 °C.

The battery's charge level is constantly monitored by the intelligent battery sensor throughout the independent ventilation function. If the necessary charge level is not maintained, the IHKA control unit will deactivate the independent ventilation function.

Independent heater (option 536)

The independent heating function is activated either via the Central Information Display (CID) or via Telestart (through the Car Access System (CAS)). There are 2 ways of switching the system on via the CID: Direct operation or programming using the timer.

Conditions required for switching the independent heater on:

- Exterior temperature below 15 °C (only applicable after programming with the timer)
- Sufficient fuel in the vehicle's tank for a range of at least 50 km
- On-board supply voltage OK

The independent heater has the following functions:

- Auxiliary heating with running engine (pseudo auxiliary heating)
- Telestart (via CAS)

- Low-voltage cutout

Auxiliary heating with running engine (pseudo auxiliary heating)

W

When the independent heater is running, pseudo auxiliary heating mode is started when the engine is started.

W

When pseudo auxiliary heating mode is activated, the independent heater indicator lamp goes out.

If the engine temperature is greater than or equal to the temperature of the independent heating circuit, the system will change from pseudo auxiliary heating mode to auxiliary heating. These two modes differ in that only the independent heater circuit is used in pseudo auxiliary heating mode, while in auxiliary heating mode the larger heater circuit is used.

Telestart (via CAS)

The average range of the Telestart transmitter is approx. 150 meters. The CAS forwards the signal from the Telestart transmitter through the body CAN to the following control units:

- IHKA control unit
- Independent heater control unit

Low-voltage cutout (via

D

M

E/DDE)

The battery's charge level is constantly monitored by the intelligent battery sensor throughout the independent heating operation. If the necessary charge level is not maintained, the IHKA control unit will deactivate the independent heating operation.

Notes for service staff

Service staff should note the following points:

- General information: [more ...]
- Diagnostics: ---
- Encoding/programming: [more ...]
- Car and Key
M
Memory: [more ...]

National versions

The hardware of the IHKA controls are available temperature displays in °C (Celsius) or in °F (Fahrenheit).

Subject to change.