




Becoming Familiar with iDrive (for E60/E63/E64 with CCC)

Step 1 - Learn the MENU button and the points of the compass in the main MENU screen

Pressing the **MENU** button always returns the screen to the main MENU screen.

Note: From **Vehicle Info & Settings**, two presses may be necessary.

As you work around the points of the compass below, use the **MENU** button to return the main MENU screen before selecting the next compass point.

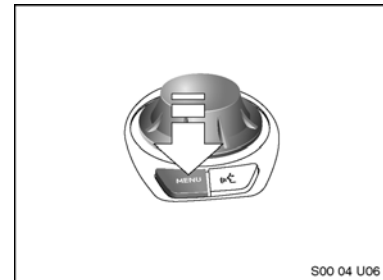

- **Communication**, (North) slide forward.

Hint: - As a memory aid, Communication is "outwards". Your voice moves away towards front of car as you speak. (Slide forward)

- **Entertainment**, (South) slide to rear

Hint: - As a memory aid, imagine you have an entertainer in the rear seat! Entertainment would then be from the rear. (Slide to rear)


- **Navigation**, (East) slide to right

Hint - As a memory aid, the Navigator always sits in passenger seat (Slide towards passenger)

- **Climate**, (West) slide to left

Hint - As a memory aid, Climate settings are for you! (Slide towards driver)

- **Vehicle Info & Settings**, press down.

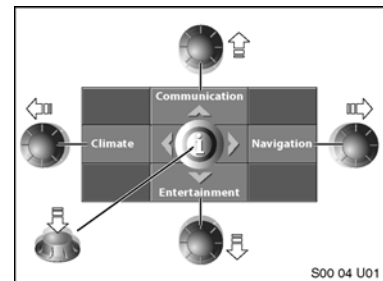


Step 2 - Familiarize yourself


Use the **MENU** button in combination with the *slide* functions and *press down* function of the controller to become familiar with its operation, and the location of each main MENU feature.

Step 3 – Set programmable steering wheel button



- From the main MENU screen, **press down** to select “Vehicle Info and Settings”.

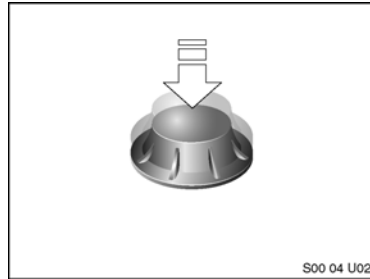

- **Rotate** to select “Vehicle settings”.


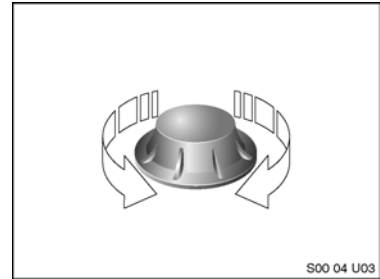


- **Press down** to display “Vehicle settings” screen.
- **Slide forward and release** to highlight the upper SELECTION BAR in the display.

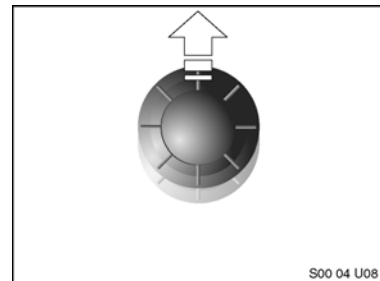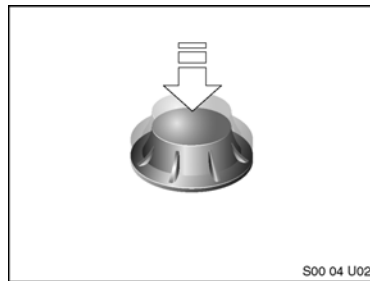



- **Rotate** to highlight “Steering wheel buttons”.

- **Press down** to select, and to display sub-menu.

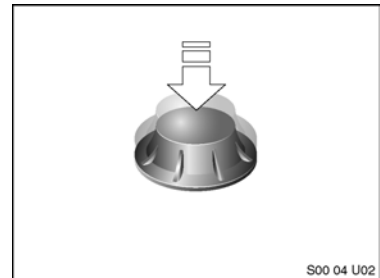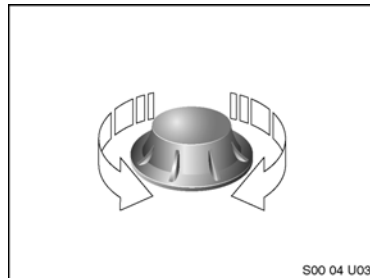



- **Rotate** to highlight “Next entertainment source”.

- **Press down** to select (selected item turns orange to confirm selection).

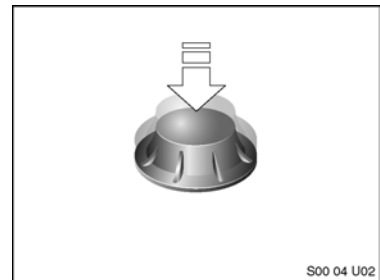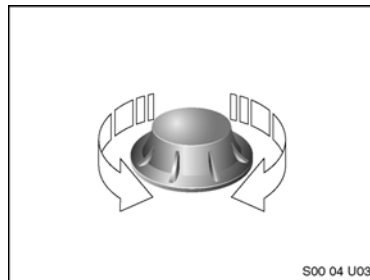


- **Press the MENU** button (**2 times**) to return to the main MENU screen.

- **Slide to rear and release** to select “Entertainment”.

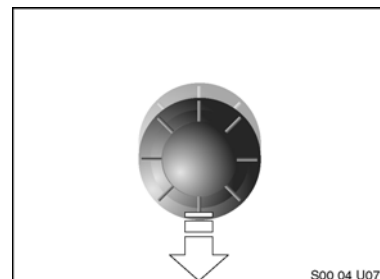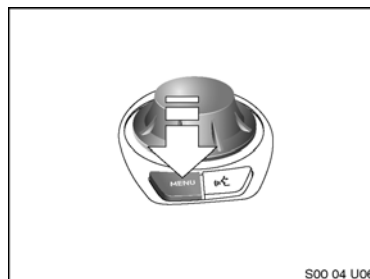


- Switch on Radio.
- **Press** the STAR button ② repeatedly. Audio will cycle through AM/FM/WB etc. with each press of the button.

Hint: This is an ideal setting for customers who like to switch radio between AM and FM.

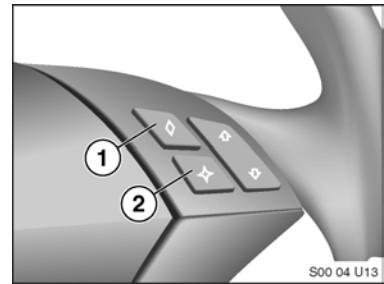


Step 4 – Set Door Locks (Car and Key Memory)


- **Press** the MENU button (once or twice) to return to the main MENU.

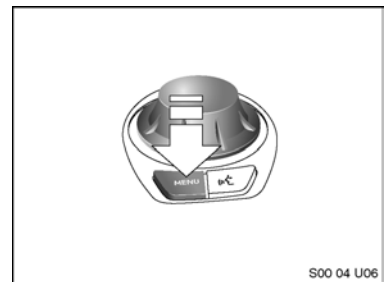


- From the main MENU screen, **press down** to select “Vehicle Info and Settings”.

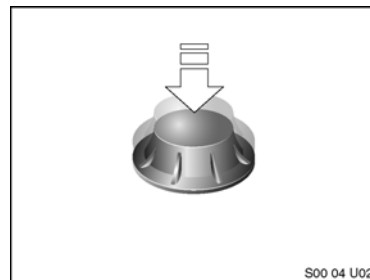


- **Rotate** to select “Vehicle settings”.

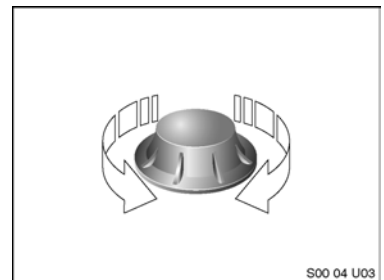

- **Press down** to display “Vehicle settings” screen.

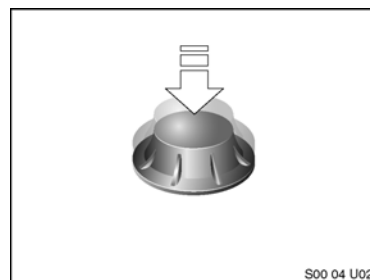



- **Slide forward and release** to highlight the upper SELECTION BAR in the display.

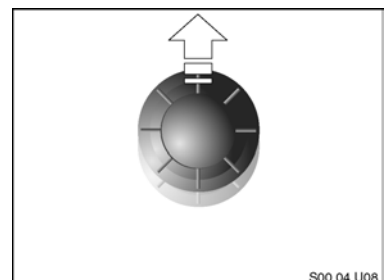

- **Rotate** to highlight “Door locks”.



- **Press down** to select “Door locks”, to show 2nd SELECTION BAR, and to show sub-menu.

If “Central locking” is shown in 2nd SELECTION BAR, continue at ♦ below.

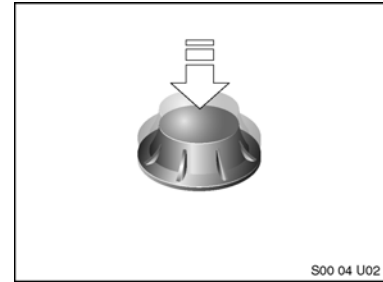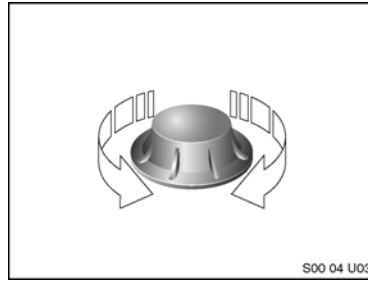


- If “Confirmation” is shown in 2nd SELECTION BAR, **slide forward and release** to highlight the 2nd SELECTION BAR.

- **Rotate counter-clockwise** to highlight “Central locking”.

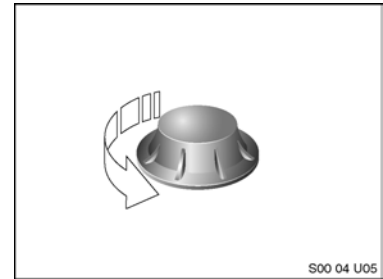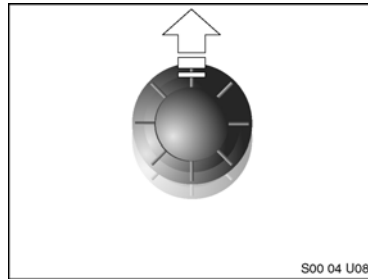



- **Press down** to select (selected item turns orange to confirm selection), and to display “Central locking” screen.

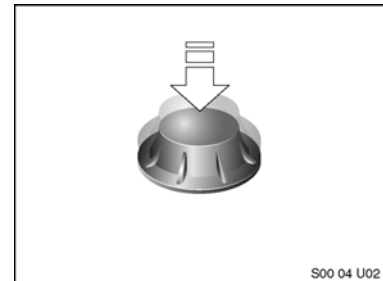

- ♦ In “Central locking” sub-menu, **rotate** to highlight desired function.


- **Press down** to select* (selected item turns orange to confirm selection).

* For “Lock button” and “Last seat position”, an additional “**rotate**” and “**press down**” is required.

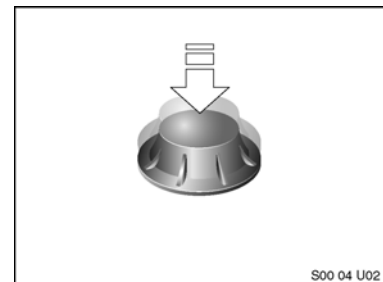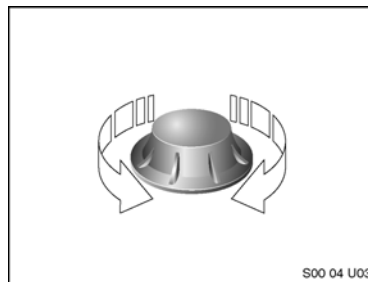


Step 5 – Set Time


- **Press** the MENU button (once or twice) to return to the main MENU.

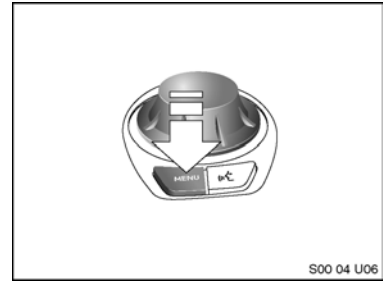


- From the main MENU screen, **press down** to select “Vehicle Info and Settings”.

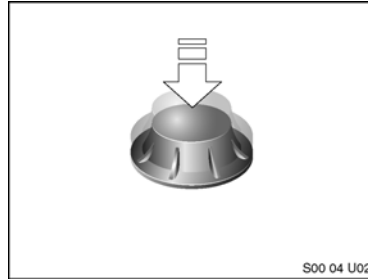


- **Rotate** to select “Display settings”.

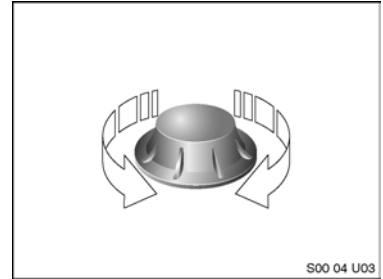


- **Press down** to display “Display settings” screen.

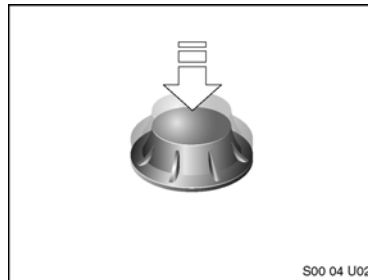

- **Slide forward and release** to highlight the upper SELECTION BAR in the display.

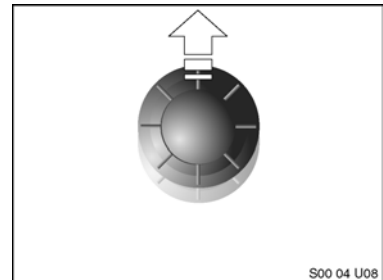


- **Rotate** to highlight “TIME”

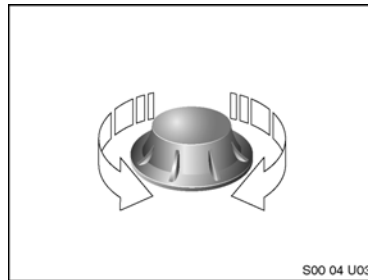


- **Press down (2 times)** to select “TIME” and to highlight the “Hour” setting (selected item turns orange to confirm selection).


Note: “Hour” setting times-out (turns white) after 5-10 seconds. Reselect by pressing down again.

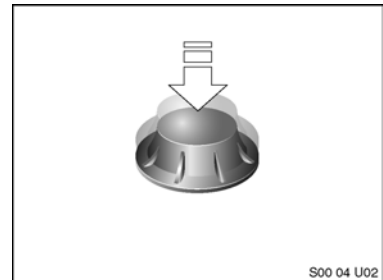

- **Rotate** to change the hour.

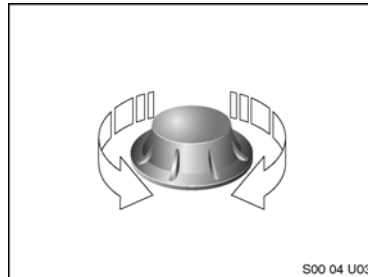


- **Press down** to select, and to advance to the “Minutes” setting (selected item turns orange to confirm selection).
Note: “Minutes” setting times-out (turns white) after 5-10 seconds.

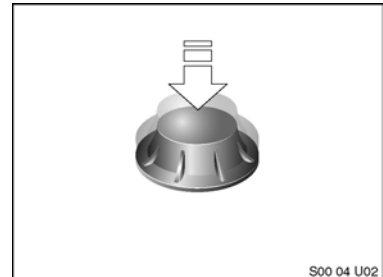

Step 6 – Change to Navigation in one movement

- **Slide to right**, and **hold** for a minimum of 2 seconds. The screen will change to the Navigation function.

Hint: The “slide and hold” feature is available for all main menu functions and enables a quick change from one function to another.


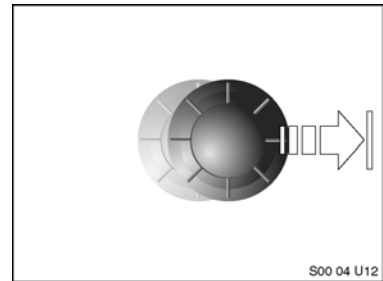


Step 7 – Enter a new destination, and start Navigation guidance


Continue from Navigation selection (Step 6) above.

If “Navigation” is shown in the upper SELECTION BAR, continue at ►► below.

- If “Car data” or Address book” are shown in the upper SELECTION BAR, **slide forward and release** to highlight the upper SELECTION BAR.
- **Rotate counter-clockwise** to highlight “Navigation”.

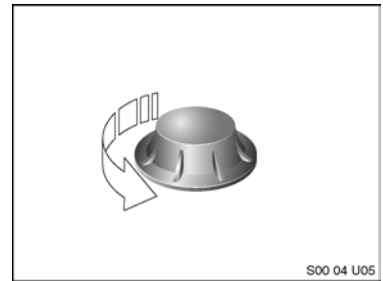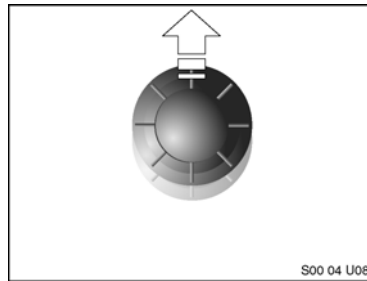



- **Press down** to select, and to show “Navigation” sub-menu.

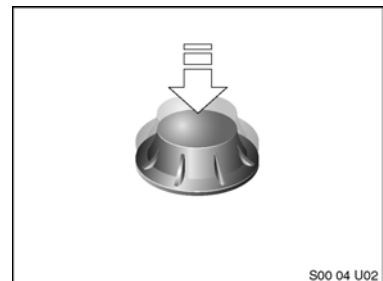


- ►► **Slide to rear and release (3 times)** to highlight the lower SELECTION BAR.

- **Rotate** to select the desired map direction (“Map, facing north” or Map, direction of travel”)


Note: If the selected item is already in orange text, continue at ► below.

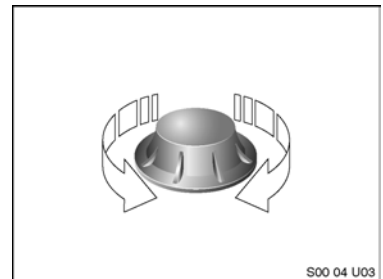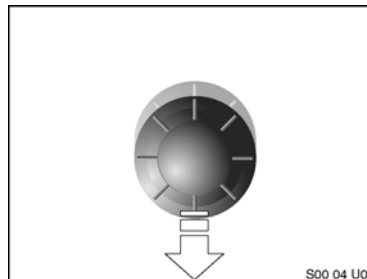


- **Press down** to select (the selected item turns orange).

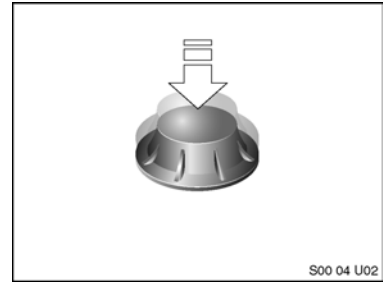


- ▶ **Slide forward and release** to highlight the 2nd lower SELECTION BAR.

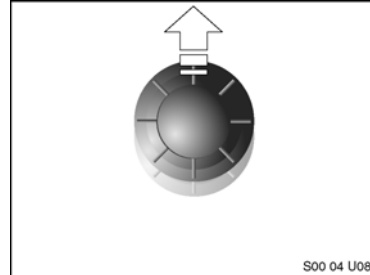


- **Rotate** to highlight “Route preference”.

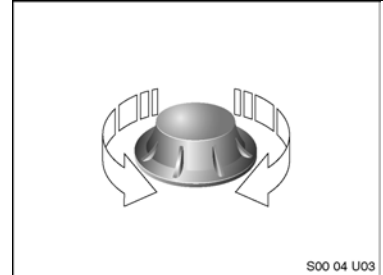


- **Press down** to select and bring up the “Route preference” sub-menu.

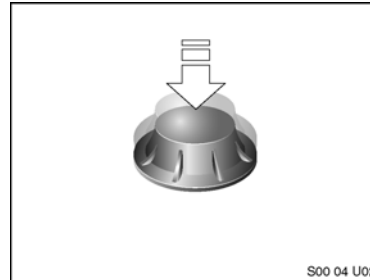


- **Rotate** to highlight the route of choice.

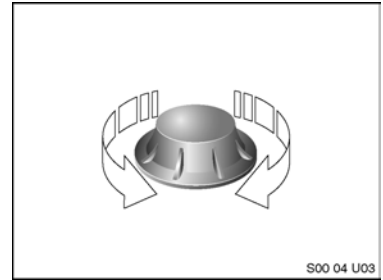


- **Press down** to select (the selected item turns orange and is shown with a check mark).

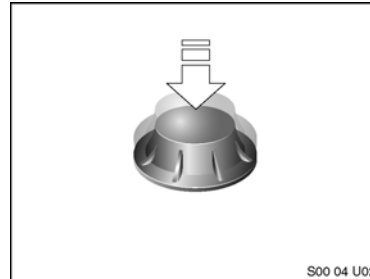


- **Slide forward and release** to select the upper SELECTION BAR.

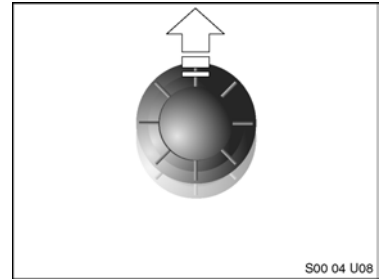


- **Press down** to return to the “Route preference” SELECTION BAR.

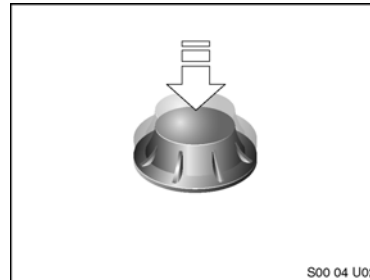


- **Slide forward and release** to select the “Destination” screen.

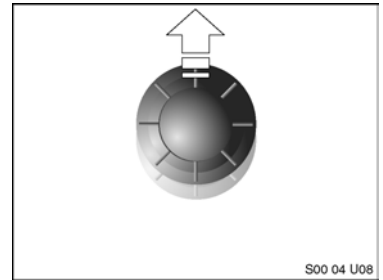



- **Rotate counter-clockwise** to select “New destination”.

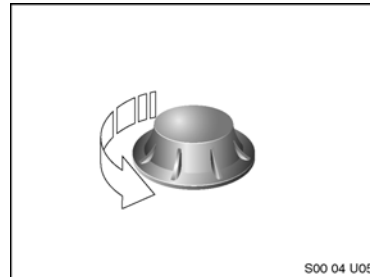



- **Press down** to enter the “Address” sub-SELECTION BAR.

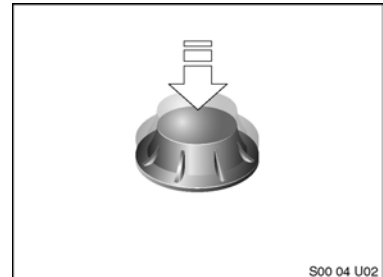

- **Rotate** to highlight “Enter address”.
- **Press down** to select, and to show address sub-menu.
- Using a combination of **rotate, slide** and **press down**, enter the desired address.

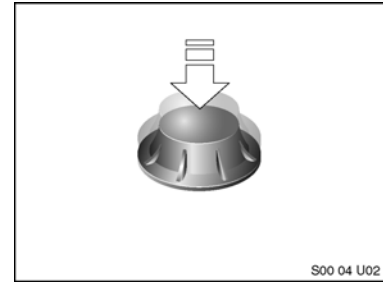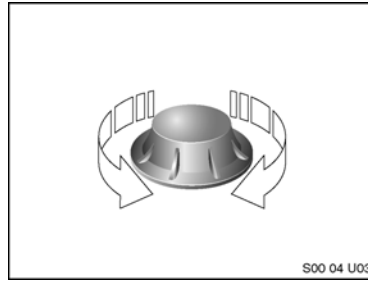





- **Rotate clockwise** to select “Start guidance”.
- **Press down** to start guidance and display map.

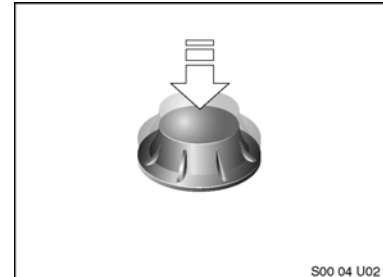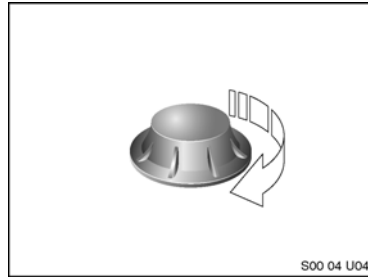

Step 8 – Display arrow guidance in split screen


Continue from the end of Step 7 above.

- **Slide to right and release** to highlight right side of split screen (split screen is shown with orange border).
- **Press down** to select split screen menu.
- **Rotate** to highlight “Map, arrow display”.
- **Press down** to select, and to show arrow guidance in split screen.

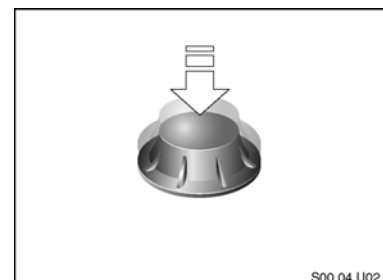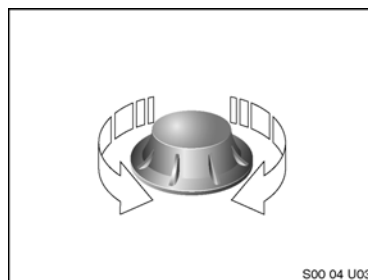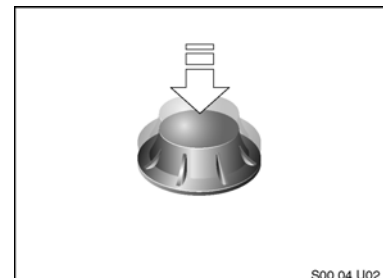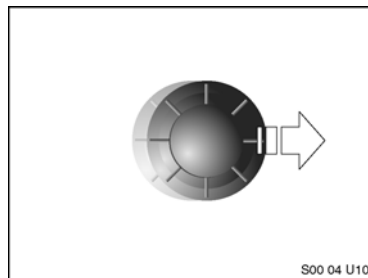

Step 9 - Repeat last Navigation announcement / Mute Navigation


- **Press** the DIAMOND button ① to **repeat** the last Navigation announcement.
- **Press and hold** the DIAMOND button ① for a minimum of 2 seconds to **MUTE** Navigation. (A cancelled loudspeaker is shown on the screen to confirm). Repeat the same procedure to **cancel** MUTE.

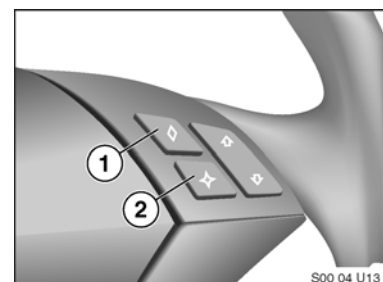

Step 10 - Change to Climate in one movement

- ***Slide to left and hold*** for a minimum of 2 seconds. The screen will change to the Climate function.

Hint: The “slide and hold” feature is available for all main menu functions and enables a quick change from one function to another.

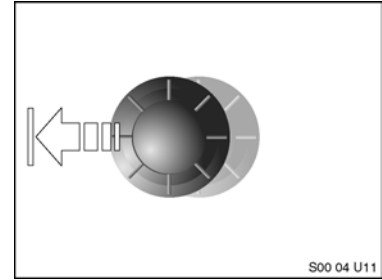

Step 11 - Adjust and set Climate

- Use ***Slide/rotate*** movements learned in the preceding steps to select and adjust the desired function.

Step 12 - Learn “Slide and hold” feature

- ***Slide and hold*** for a minimum of 2 seconds in each direction to learn how to easily switch from one function to another:
 - ***Slide forward and hold*** for a minimum of 2 seconds (Communication)
 - ***Slide to right and hold*** for a minimum of 2 seconds (Navigation)
 - ***Slide to rear and hold*** for a minimum of 2 seconds (Entertainment)
 - ***Slide to left and hold*** for a minimum of 2 seconds (Climate)