


Necessary preliminary tasks:

- Remove front bumper trim.



Warning!

Follow instructions for handling light bulbs (exterior lights).

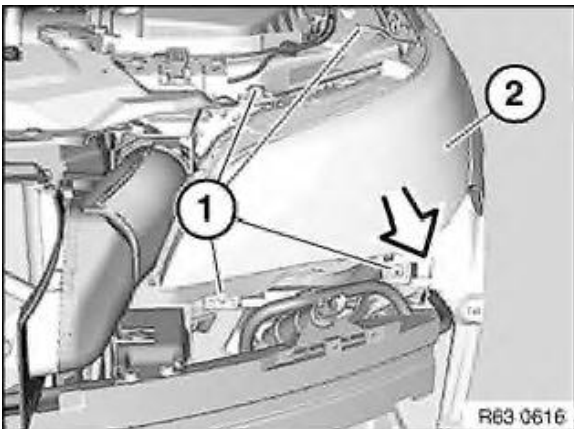

Release screws (1).


Pull headlight (2) forwards slightly in direction of arrow.

Unlock associated plug connections and disconnect.

Remove headlamp (2).

Installation:

- Observe gap dimensions.
- Adjust headlights.

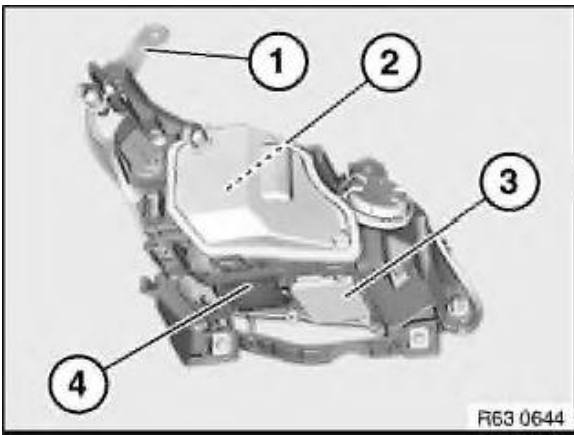

Replacement:

- If necessary, release screws from holder (1) and remove holder (1).
- Remove ignition unit and lamp for xenon headlight.
- Remove control unit for xenon headlight.