
## 51 47 220 Removing and installing/replacing trunk trim panel on right side panel



Necessary preliminary tasks:

Remove luggage compartment floor trim panel.

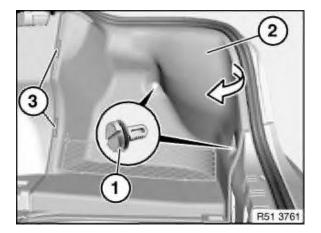

Open rotary clips (1) and remove.

Feed out luggage compartment trim on right side panel (2) in direction of arrow and remove.

## Installation:

Correctly feed in guides (3) of luggage compartment trim on right side panel (2).