



*Note:*

Version with AFS:

After reconnecting the vehicle battery, carry out the following procedure for setting the steering angle:

- Start engine.
- Turn steering wheel left to full lock.
- Turn steering wheel right to full lock.
- Turn steering wheel to central position.
- Turn off engine.
- Turn on ignition (terminal 15), AFS telltale and Check Control message go out.