



Note:

Adjustment of the active front steering must be carried out:

- after adjustment work on the front axle/steering
- after all mechanical work on the steering system
- after the battery has been disconnected or electrical plug connections on the steering column switch cluster have been disconnected
- after replacement/programming or coding of the following components:
 - Steering column switch cluster
 - DSC control unit
 - Active front steering control unit
 - ARS control unit



Connect vehicle to BMW diagnosis system.

Select and carry out adjustment for active front steering under Service functions.