



*Note:*

Initialization is necessary:

- After replacing windshield
- When installing a used rain/light sensor



*Note:*

- Connect BMW diagnosis system
- Initialize rain/light sensor.