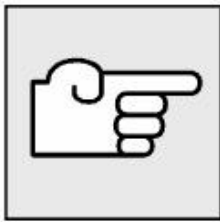
**Special tools required:**


- 51 3 290

*Necessary preliminary tasks:*

- Remove rear light

**Warning!**


Support rear lid in fully opened position with suitable apparatus.
Risk of injury.

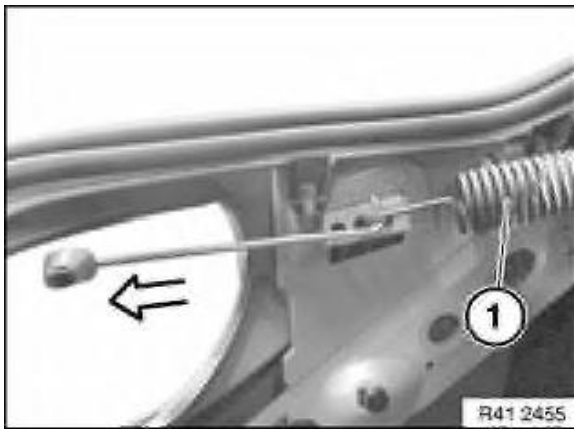


Attach special tool 51 3 290 in tension spring (1) and pull towards rear.

Installation:

Reattach tension spring (1) in same position.

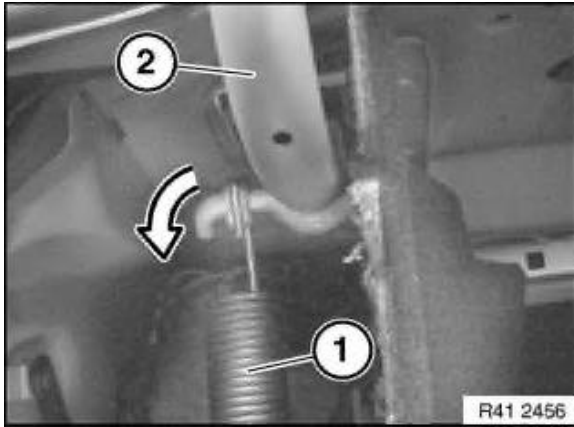


Unhook tension spring (1) from rear lid hinge (2).

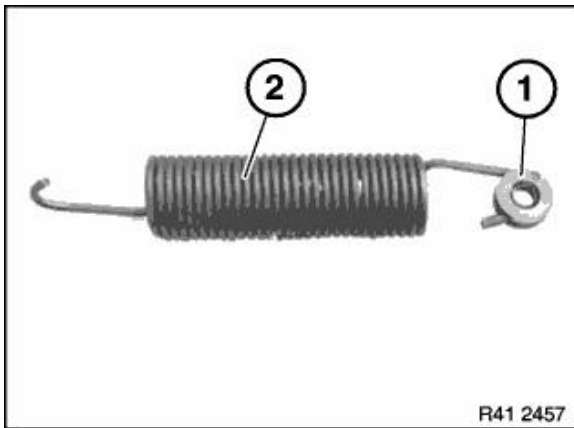

Installation:

Following parts on the tension spring must not be damaged or missing:

- 1 Plastic sleeve
- 2 Foam inlay in tension spring

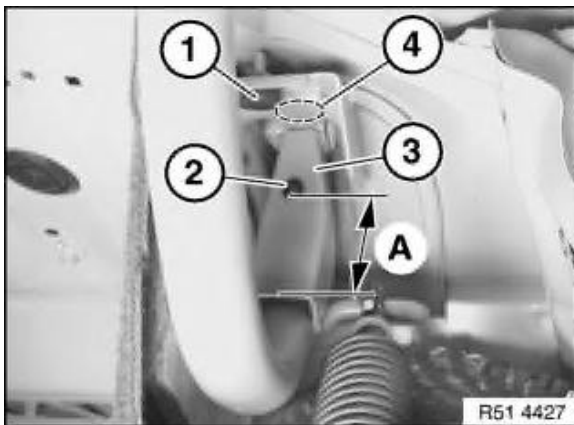

Important!

Semicircular rubber buffer (2) (from window repair kit) must be fitted to rear lid hinge (3) without end stop (1).

Stick semicircular rubber buffer (2) at spacing (A) on rear lid hinge (3).

A= 65 mm

Semicircular rubber buffer (2) must touch rear lid hinge (3) in area (4) with rear lid open.