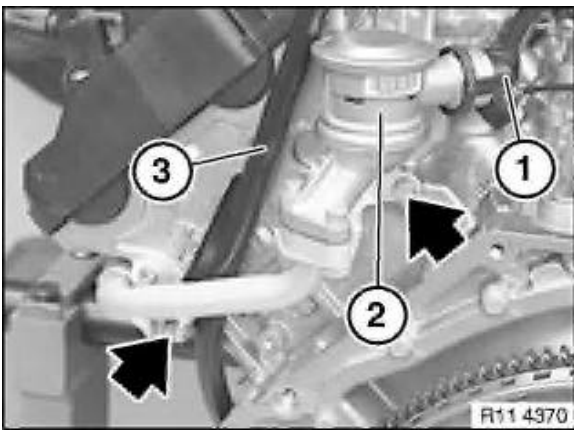


*Necessary preliminary tasks:*

- Remove intake air manifold
- Drain engine oil.


*Note:*

For purposes of clarity, this work step is shown on the engine after it has been removed.

Unlock and detach vacuum line (1).
Release screws and remove check valve (2).
Remove guide tube (3) upwards.

Installation:

Replace sealing ring on guide tube.
Apply light coat of oil to seal.
Replacing sealing ring on check valve pipe.
Apply light coat of oil to seal.

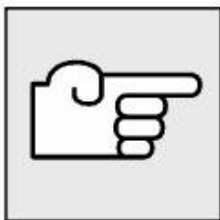

Assemble engine.
Check engine for leaks.