

The work operations here are shown on the version with air conditioning and seat heating.


Feed out seat cover (1) in area (2).

*Installation:*

Seat cover (1) is fastened by hooks in trim (3).

Remove plug connections (4) and feed out through trim (3).

Remove trim (3); if necessary, remove padding or cover.

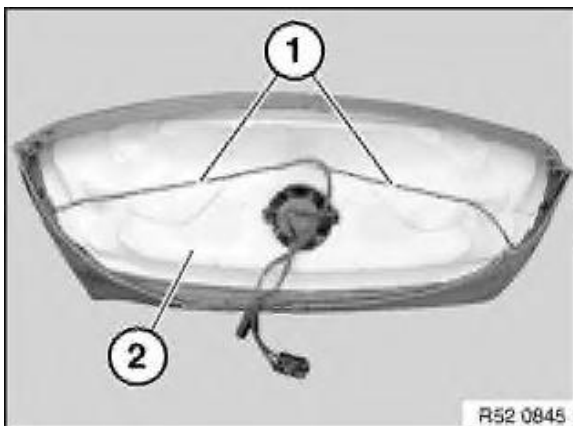


Version with seat heating or air conditioning:

Feed out cable (1) and remove padding (2).

*Installation:*

Ensure correct cable routing (1).

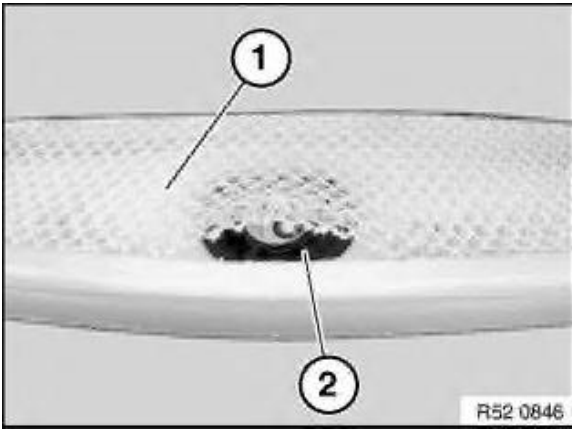

Version with air conditioning:

- Remove separating net (1).
- Lift out fan (2).