

5216... Replacing padding for front seat thigh support

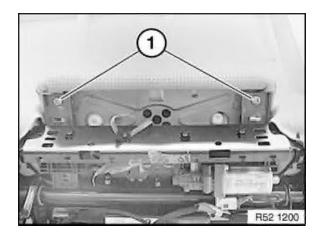


Release screws (1).

Installation:

Insert screws (1) with Loctite.

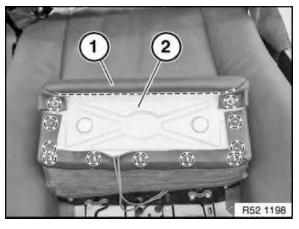

Unhook seat cover (1) from marked area. Remove carrier (2) for thigh support.

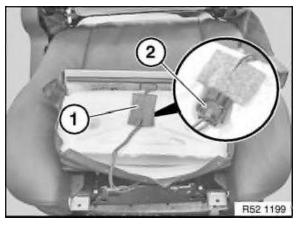

For seat heating optional extra only: Carefully detach felt (1) from thigh support. Unfasten plug connection (2) and disconnect.

Installation:

Ensure correct cable routing.

Remove padding from cover.