


Slide from auxiliary turn signal lamp (1) towards rear and fold in direction of arrow out of front side wall (2).



Unfasten plug connection (1) and disconnect.
Remove front auxiliary turn signal lamp (2).

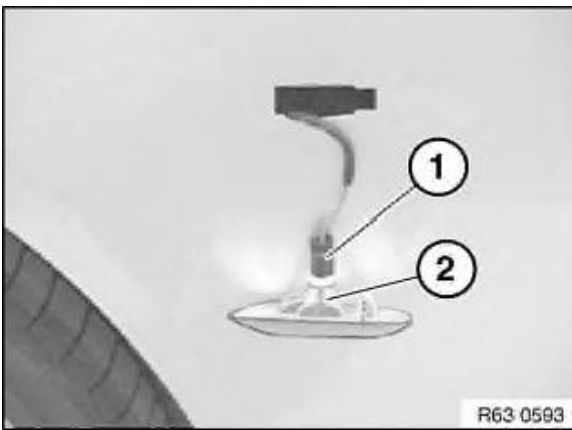

Warning!

Follow instructions for handling light bulbs (exterior lights).

Replacement:

If necessary, convert bulb.