

**Important!**

The AFS system must be adjusted after work is carried out on the steering system.



Connect vehicle to diagnosis tester.

In "Service Functions / Chassis / Steering / Active Front Steering" select the item "AFS Start-up / Adjustment".

Set total steering angle on steering gear to "zero".

If necessary, carry out wheel alignment tasks.

Work through test module.

The test module contains the following steps:

1. Reset motor position angle
2. Steering angle sensor adjustment
3. Adjustment of total steering angle sensor