

1. Select "Navigation" and press the controller.
2. Move the controller to the rear twice to move the marking to the fourth panel from the top. Turn the controller until the required map view is selected.



Key	Description
1	Perspective display

**Touring: Automatic tailgate actuation\*: New function "Set opening height".**

How high the tailgate opens can be programmed.

The setting is made as follows:

1. Call up the start menu.
2. Press the controller.
3. Select "Vehicle settings" and press the controller.
4. Select "Door locking" and press the controller.
5. Select "Tailgate" and press the controller.
6. Turn the controller. The setting is accepted. The panel can be changed.