

If necessary, disconnect plug connection for engine hood contact switch.


Turn quick-release fastener (1) approx. 90 ° counterclockwise.

Open holder (2) in direction of arrow.

Remove microfilter air duct (3) in direction of arrow.

*Installation:*

Make sure microfilter air duct (3) is correctly seated.

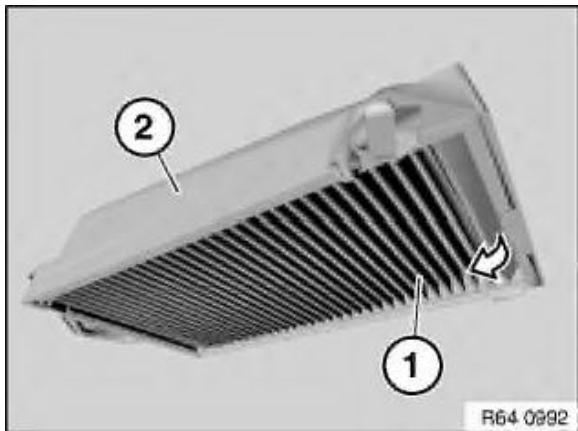

Lever microfilter for interior ventilation (1) in direction of arrow out of microfilter air duct (2) and remove.

*Installation:*

Make sure microfilter for interior ventilation (1) is correctly seated in microfilter air duct (2).