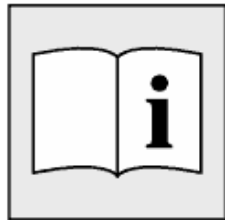


**Warning!**

Read and comply with safety regulations for handling airbag modules and pyrotechnical belt pretensioners.

Incorrect handling may result in triggering of the crash-active head restraint and thereby cause injury.

Switch off ignition!

*Necessary preliminary tasks:*

- Disconnect battery negative lead
- Remove crash-active head restraint

**Important!**

The pyrotechnical device may be replaced up to 5 times.

Triggering frequency is denoted on the sticker on the head restraint carrier.

Stickers are available as spare parts.


Starting situation:

Head restraint is in the crash position after being triggered.


*Note:*

Pyroactivator can only be removed in the triggered state.


The complete crash-active head restraint must be replaced if the event of a head restraint fault signal and an untriggered pyroactivator.

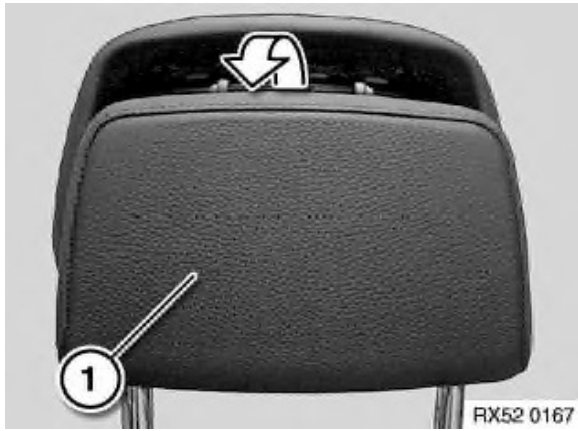

Removing cover:  
Raise cover (1) and pull towards rear.

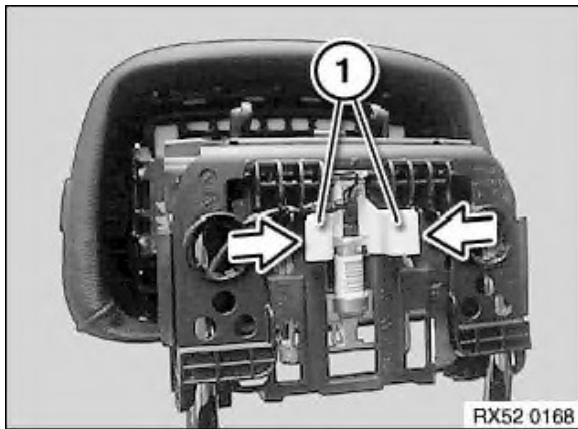


Removing pyrotechnical device:  
Press together retainer (1) for pyrotechnical device at lugs.  
Feed out pyrotechnical device.

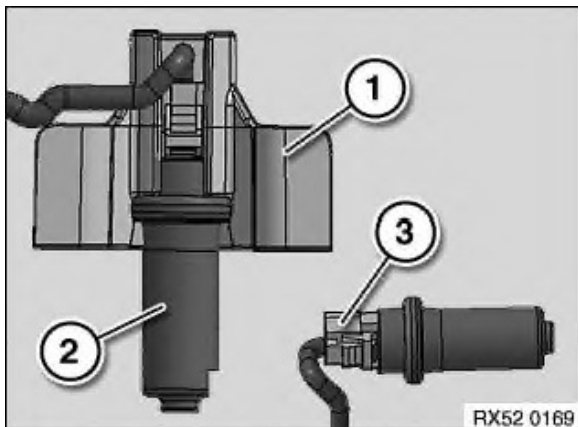


Removing pyroactivator:  
Pull pyroactivator (2) out of mounting (1) for pyrotechnical device.  
Unlock plug connection (3) and disconnect.

**Important!**


Dispose of plastic element and pyroactivator.

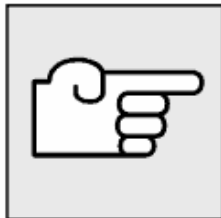


Procedure for installing pyrotechnical device:

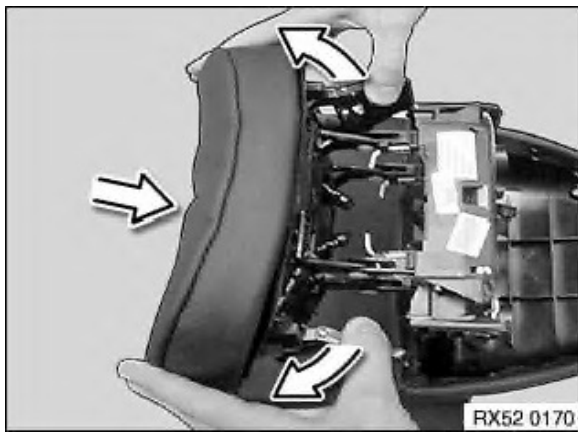


Bringing head restraint together - version without button (MFS):  
 Pull spring catches apart and push head restraint together.  
 Maintain position.

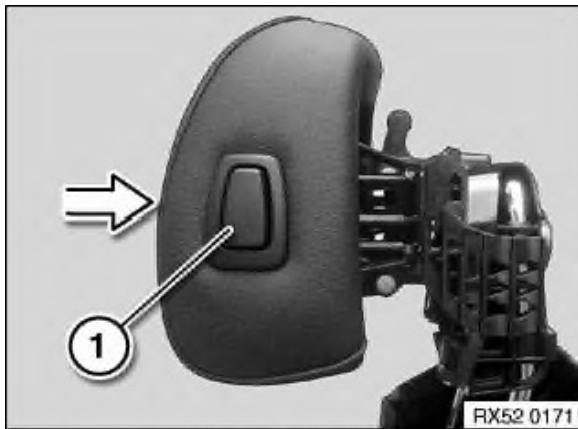


Bringing head restraint together - version with button (Basic):  
 Press button (1) and push head restraint together.  
 Maintain position.

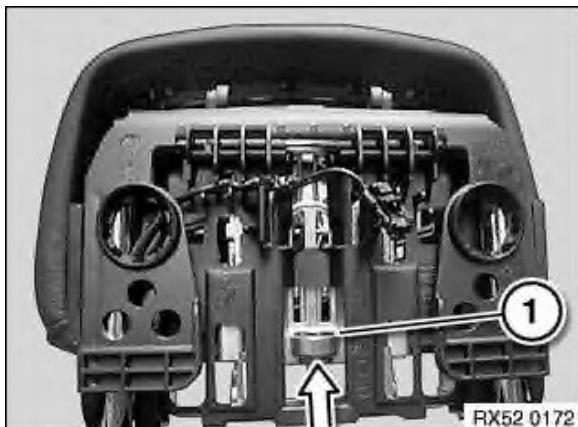

Locking release plate:  
 Hold pushed-together head restraint in position and push release plate (1) upwards up to stop.  
 Release plate (1) must audibly snap into place.

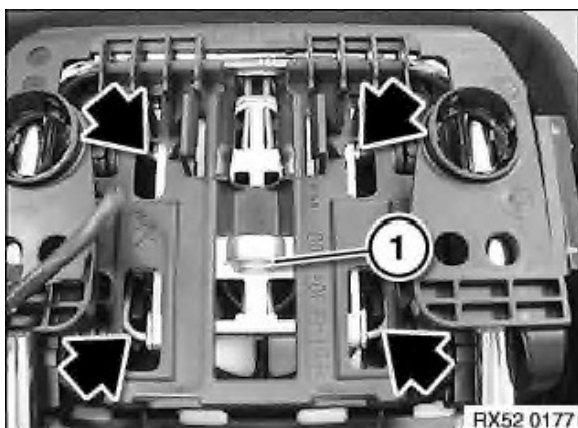


Checking head restraint lock:  
 Check end position of release plate (1).  
 All four springs must be engaged (snapped into place).

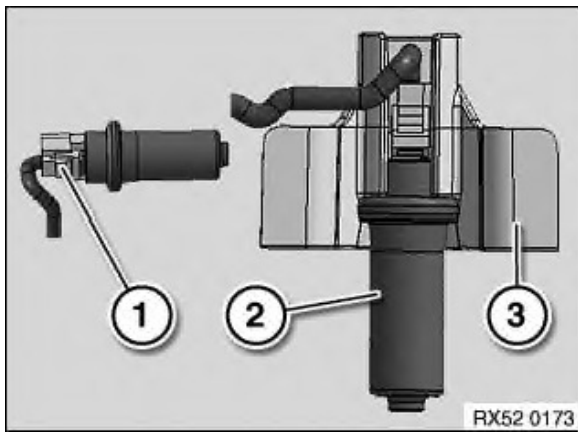

#### Replacing pyrotechnical device:

Connect plug (1) to new pyroactivator (2) and lock.  
Clip pyroactivator (2) into new mounting (3).

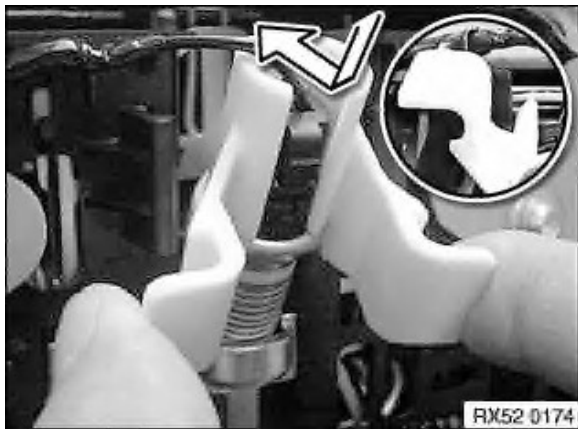


#### Installing pyrotechnical device:

Press together retainer for pyrotechnical device at lugs.  
Insert retainer for pyrotechnical device into release plate and tilt in upward direction.

Retainer for pyrotechnical device must audibly snap into place.

#### *Note:*

Check seating of retaining lugs in retainer.

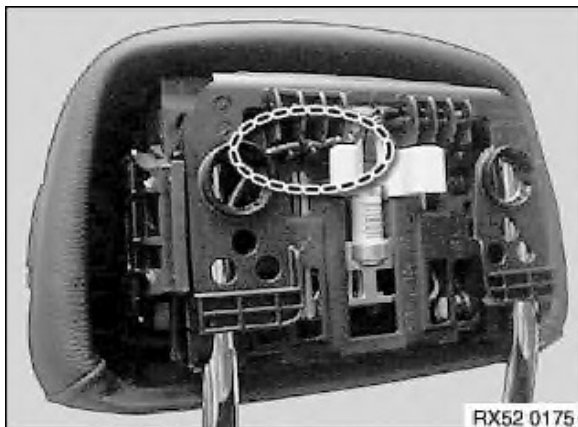

#### Laying wiring harness:

Secure wiring harness in carrier section with strain relief.



#### Mounting cover:

Clip cover onto carrier section.

Cover must audibly snap into place.