

Note:


Gearbox must be at normal operating temperature.

Gear oil:

- Refer to BMW Service Operating Fluids.

Filling capacities:

- Refer to Technical Data.

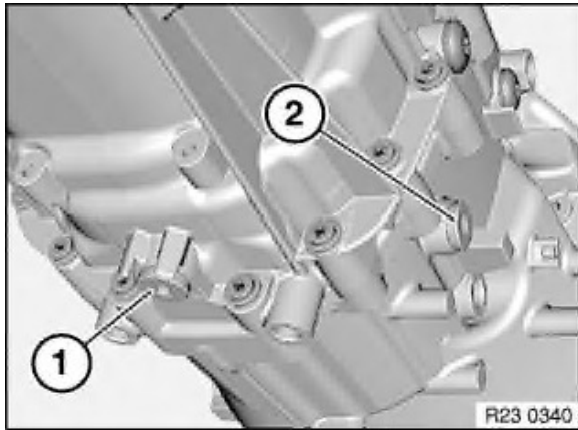

Draining gear oil:

- Release oil drain plug (1) and filler plug (2).
- Clean oil drain plug (1) and screw in.

Tightening torque 23 00 4AZ .

Fill transmission with ATF.

- Pour in gear oil until overflowing.
- Tighten in filler screw (2).

Tightening torque: 23 00 4AZ.