



Move headrest up as far as possible.

Pull out forcefully.

*Installation:*

Position adjustment drive briefly before upper stop.

Press in head restraint until it clicks audibly into place (on right and left).