

# CD player and CD changer\*

## Listening to CDs

### Starting CD player



For equipment with two drives:  
The upper drive is intended for audio CDs.  
Insert the CD with the labeled side facing upwards.  
Playback starts automatically if the sound output is on.

Currently not available:  
The CD player can also play CDs with MP3 contents. Depending on the directory and file structure, it may take up to 50 seconds to read in the data.

 
To start playback when there is already a CD in the drive:

Control Center, for principle details, refer to page 16:

1. Press button.

**MENU**

The start menu is opened

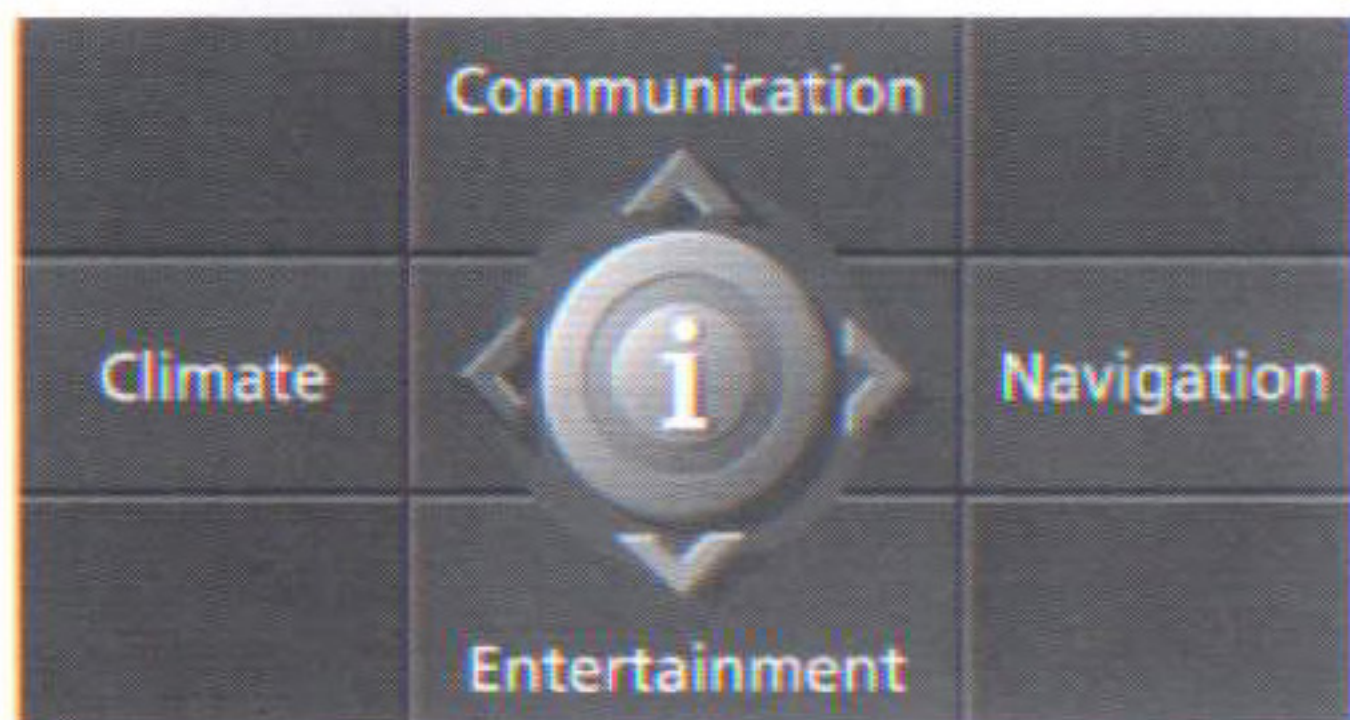


2. Move the controller backwards to open "Entertainment"

3. Select "CD" and press the controller



 4. On vehicles with a CD changer, select "CD" and press the controller to start the CD player.

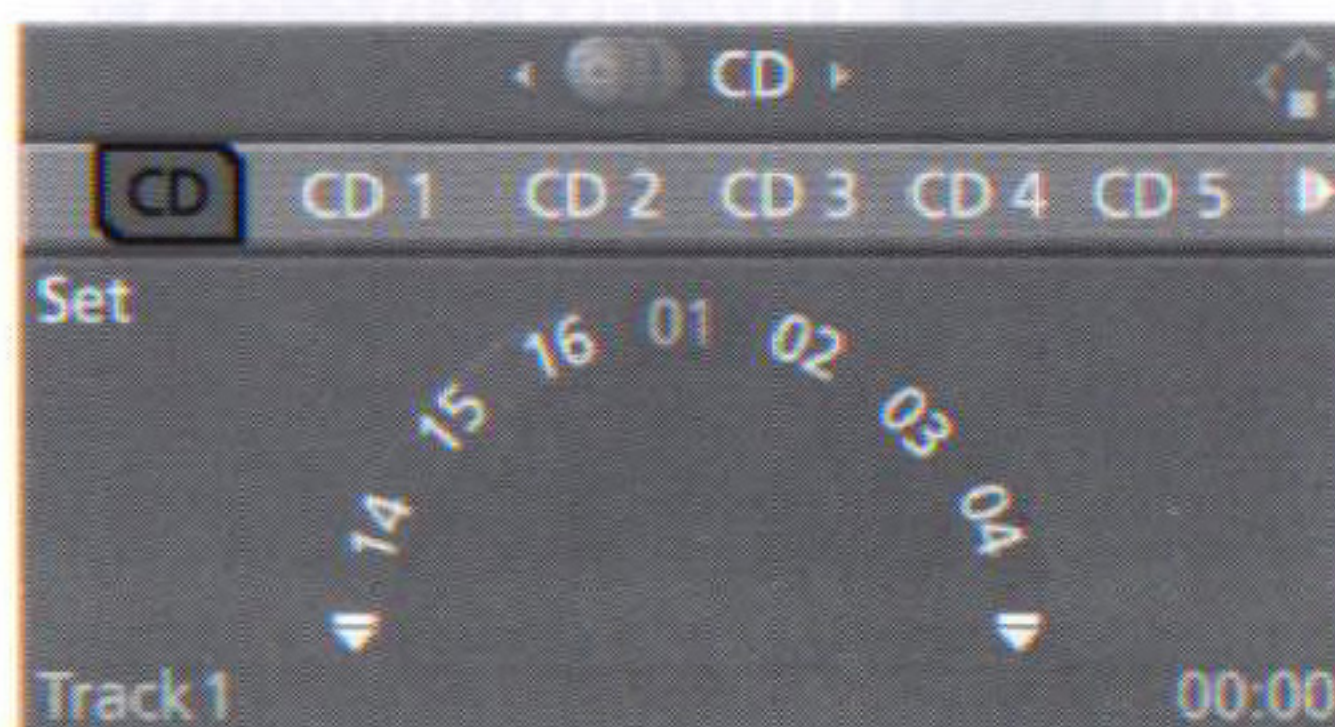

To eject the CD, press the button on the CD player:




The CD emerges slightly from the drive.

### Starting CD changer

 
1. Fill the CD magazine and insert, refer to page 142
2. Control Center, for principle, refer to page 16:  
Press button.

**MENU**

The start menu is opened

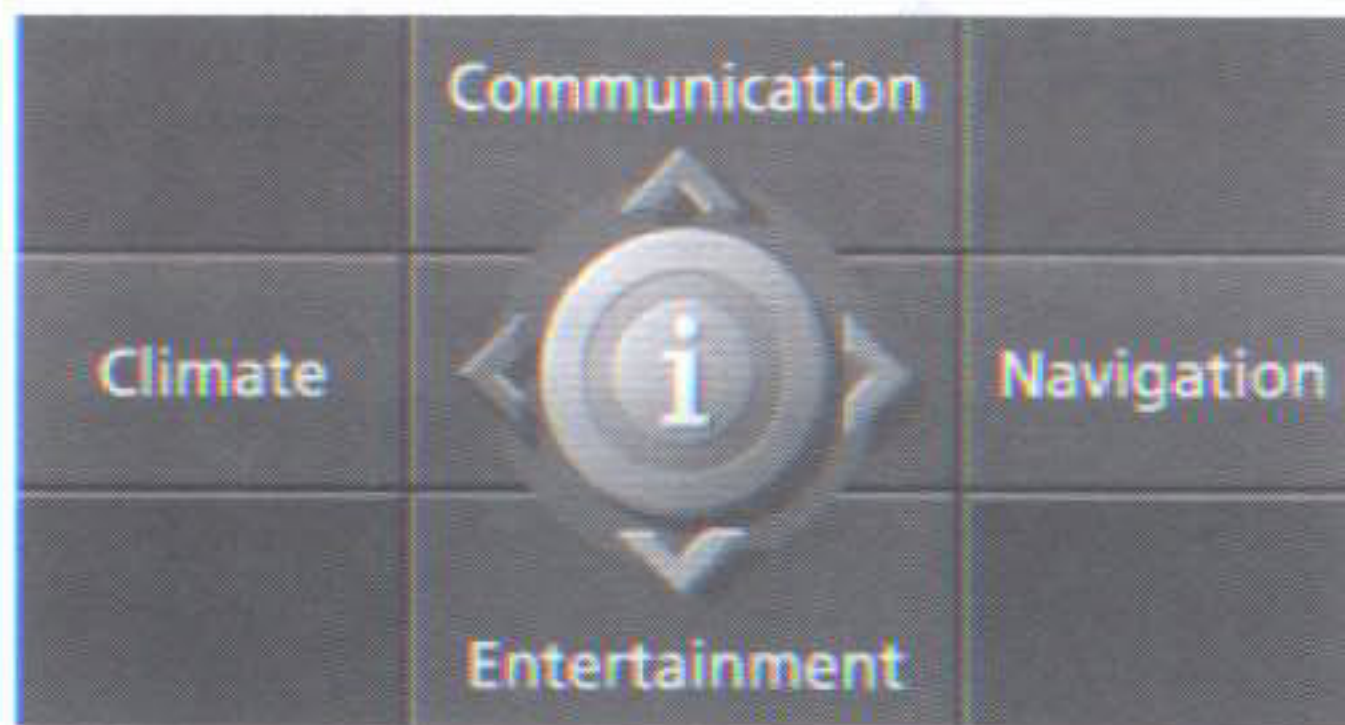

 3. Move the controller backwards to open "Entertainment"
4. Select "CD" and press the controller
5. Select the desired CD and press the controller.

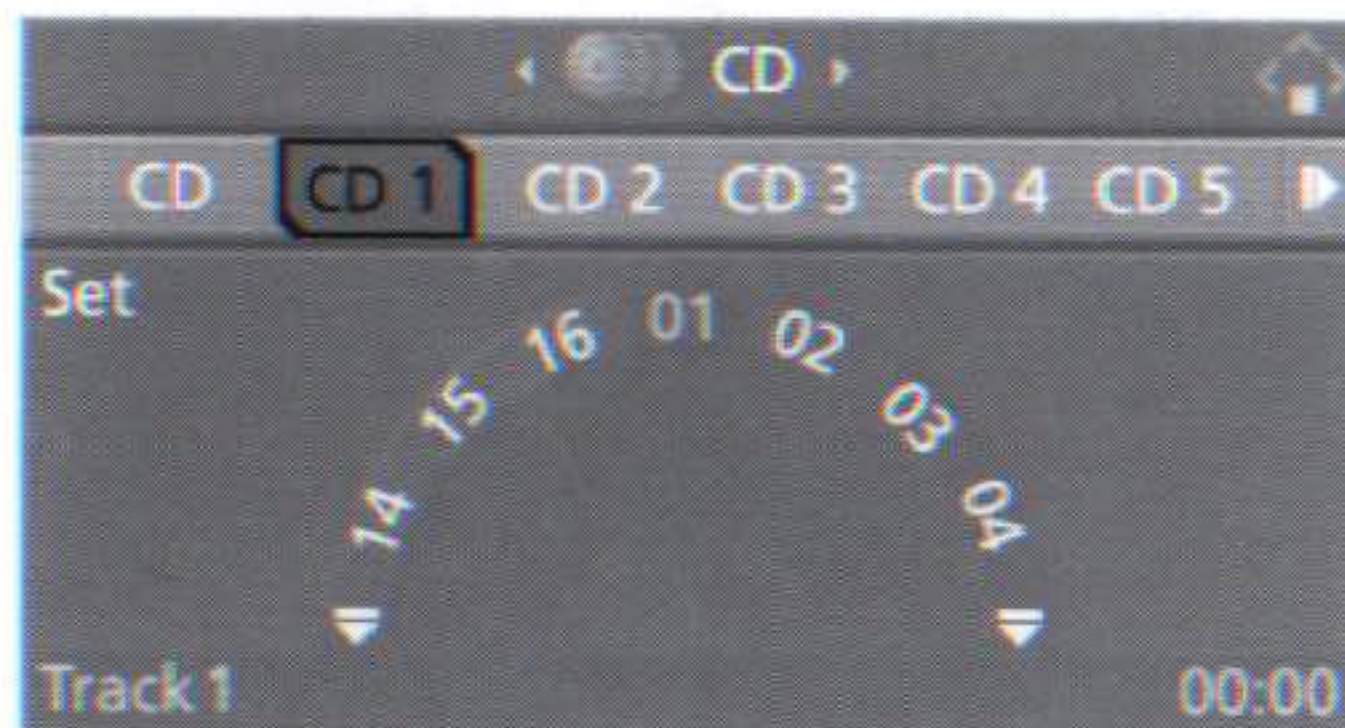

At the end of the last track, the next CD will be selected.

If new CDs have been placed in the CD magazine, playback starts with the lowest CD, e.g. CD 1, track 1.

The CD magazine's load status is indicated on the Control Display.

## Selecting a track

Buttons on CD player:



Press the button for the corresponding direction repeatedly, continuing until you reach the desired track on the current CD. The CD will start play at the start of the track. The track is displayed on the Control Display.

Control Center, for principle details, refer to page 16:

Select a track by turning the controller.

 


If you have a CD with MP3 content:

1. Select directory if necessary




2. Select the music track and press the controller

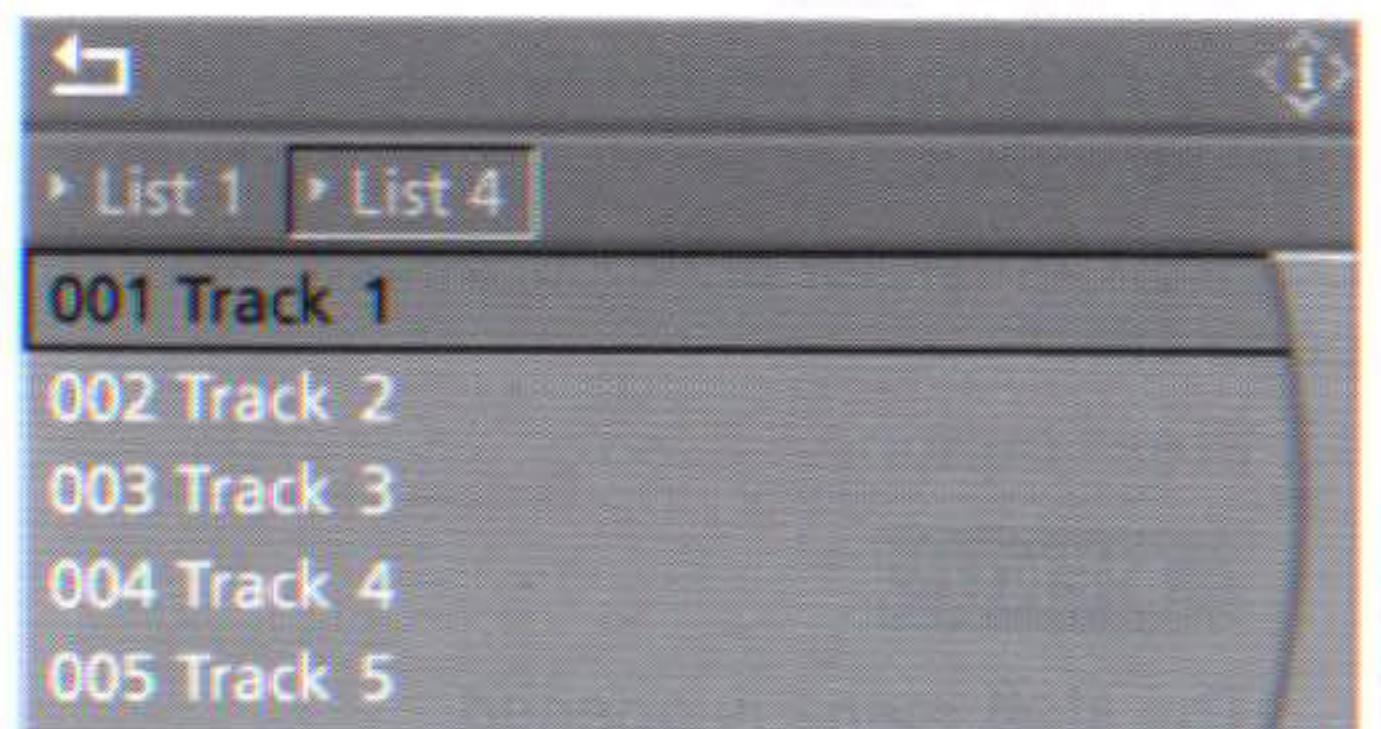


3. Select "play" and press the controller.

To change the directory:

 Select the directory and press the controller.

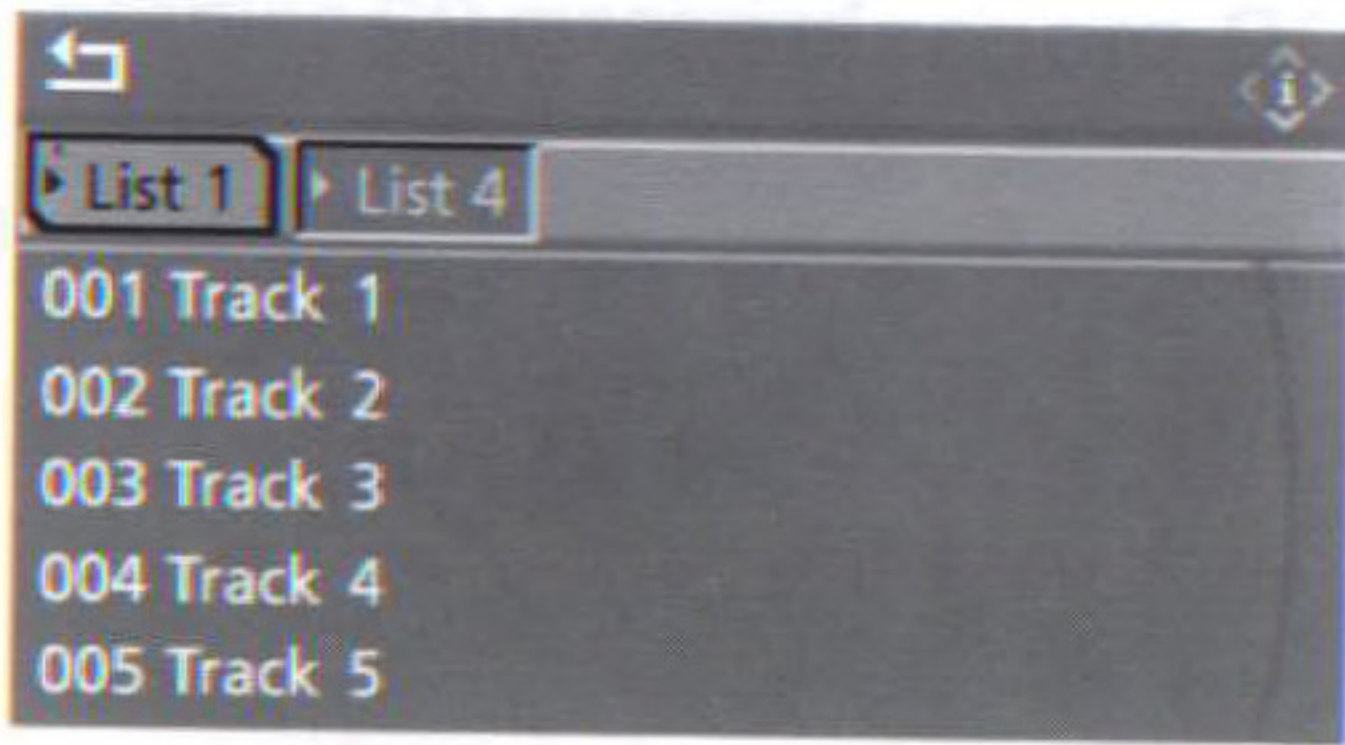

To exit the menu:  
Select  and press the controller.


## Repeating a track

 Control Center, for principle details, refer to page 16:

1. Select "Set" and press the controller.  
Other menu items are displayed




2. Select "Repeat" and press the controller.

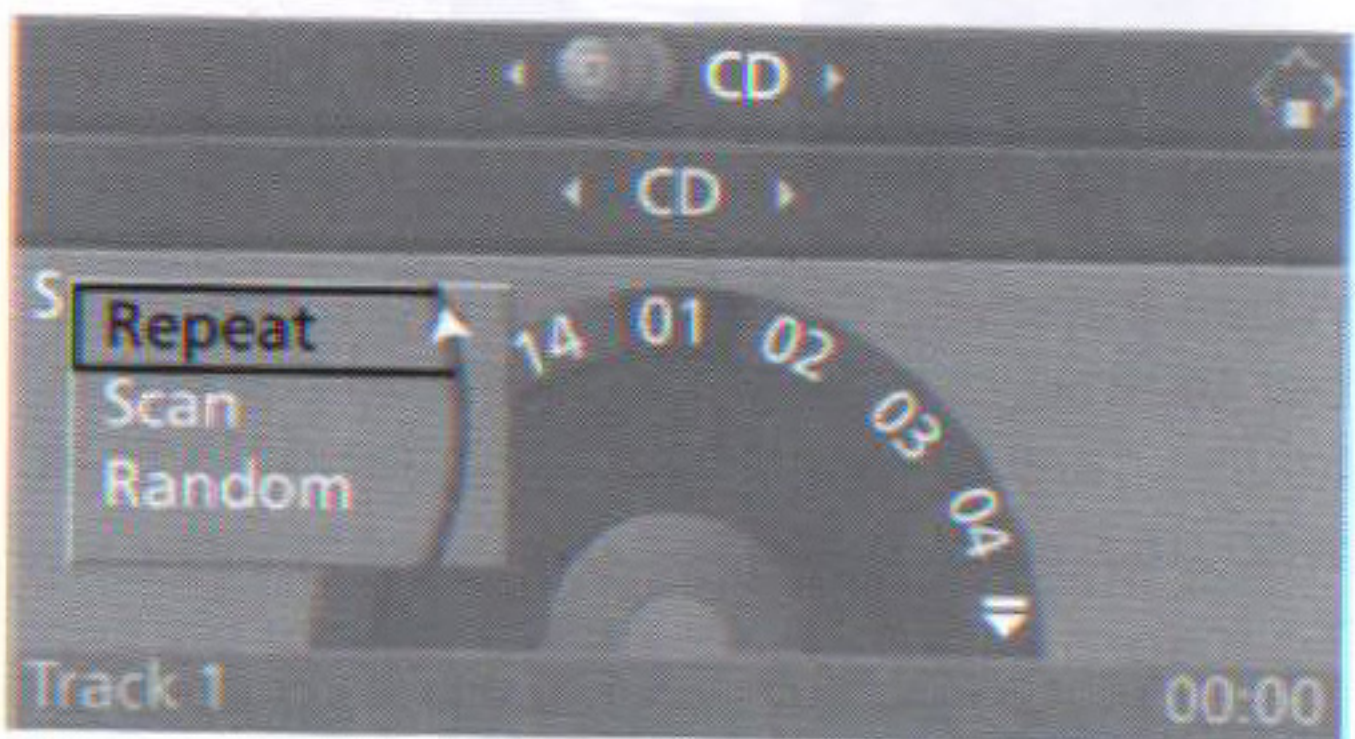

The current music track on the CD is repeated.

End repeat:  
Press the controller, select "Repeat" and press the controller.

 If you have a CD with MP3 content:

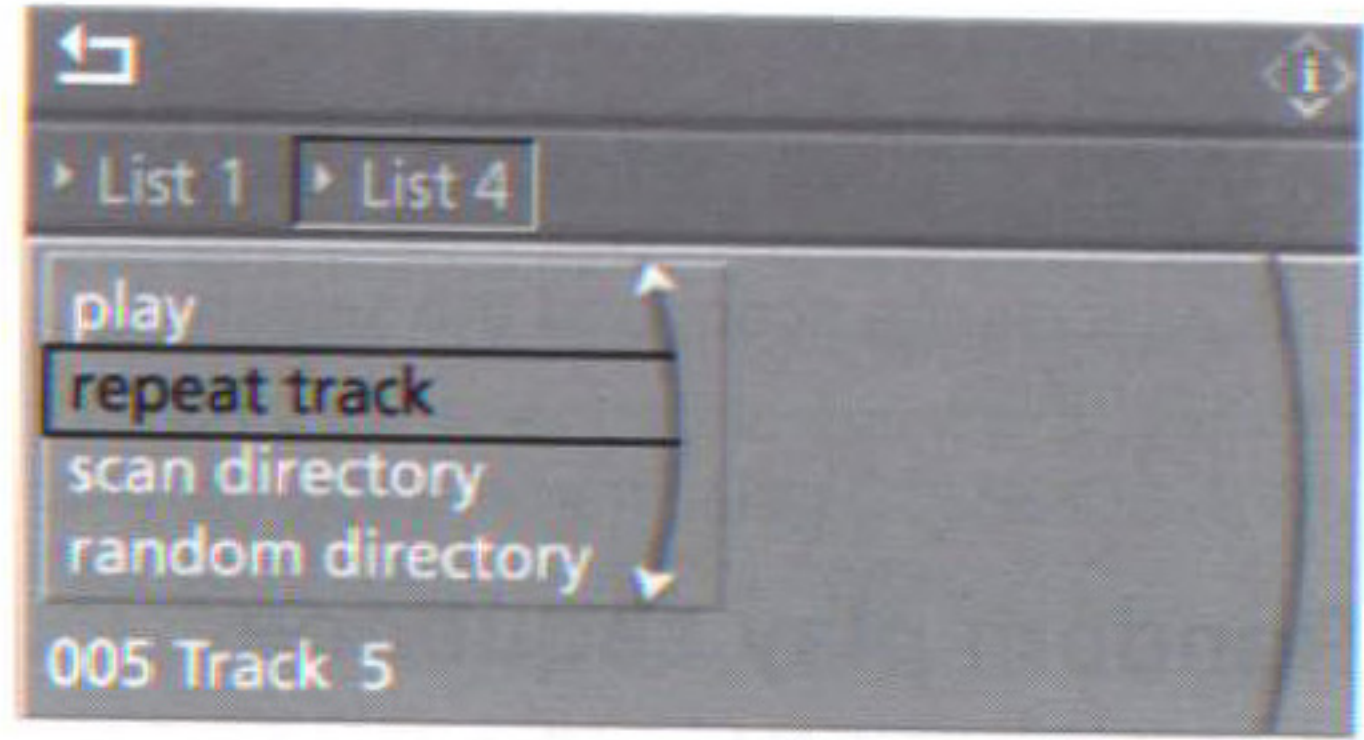

1. Select the current music track and press the controller
2. Select "repeat track" and press the controller.

The current music track on the CD is repeated.

End repeat:  
Press the controller, select "repeat track" and press the controller.

## Sampling tracks, scan

The system automatically plays a brief sample from each of the tracks on the current CD.

Control Center, for principle details, refer to page 16:

1. Select "Set" and press the controller.  
Other menu items are displayed
2. Select "Scan" and press the controller.

To stop the scan:

1. Press the controller once again
2. Select "Scan" and press the controller.

This cancels the scan, and the selected track remains.

If you have a CD with MP3 content:

1. Select the current music track and press the controller
2. Select "scan directory" and press the controller.

The system automatically plays a brief sample from each of the tracks in the current directory.

To stop the scan:

1. Press the controller once again
2. Select "scan directory" and press the controller.

This cancels the scan, and the selected track remains.

## Random play sequence

In this mode, the music tracks on the current CD are played once in a random sequence.

Control Center, for principle details, refer to page 16:

1. Select "Set" and press the controller. Other menu items are displayed
2. Select "Random" and press the controller.

End random:

Press the controller, select "Random" and press the controller.

If you have a CD with MP3 content:

1. Select the current music track and press the controller
2. Select "random directory" and press the controller.

In this mode, the music tracks in the current directory are played once in a random sequence.

End random:

Press the controller, select "random directory" and press the controller.

## Fast forward/reverse

 
Buttons on CD player:



Press and hold the button for the corresponding direction.

The tracks can be heard, but the sound is distorted.

## CD magazine

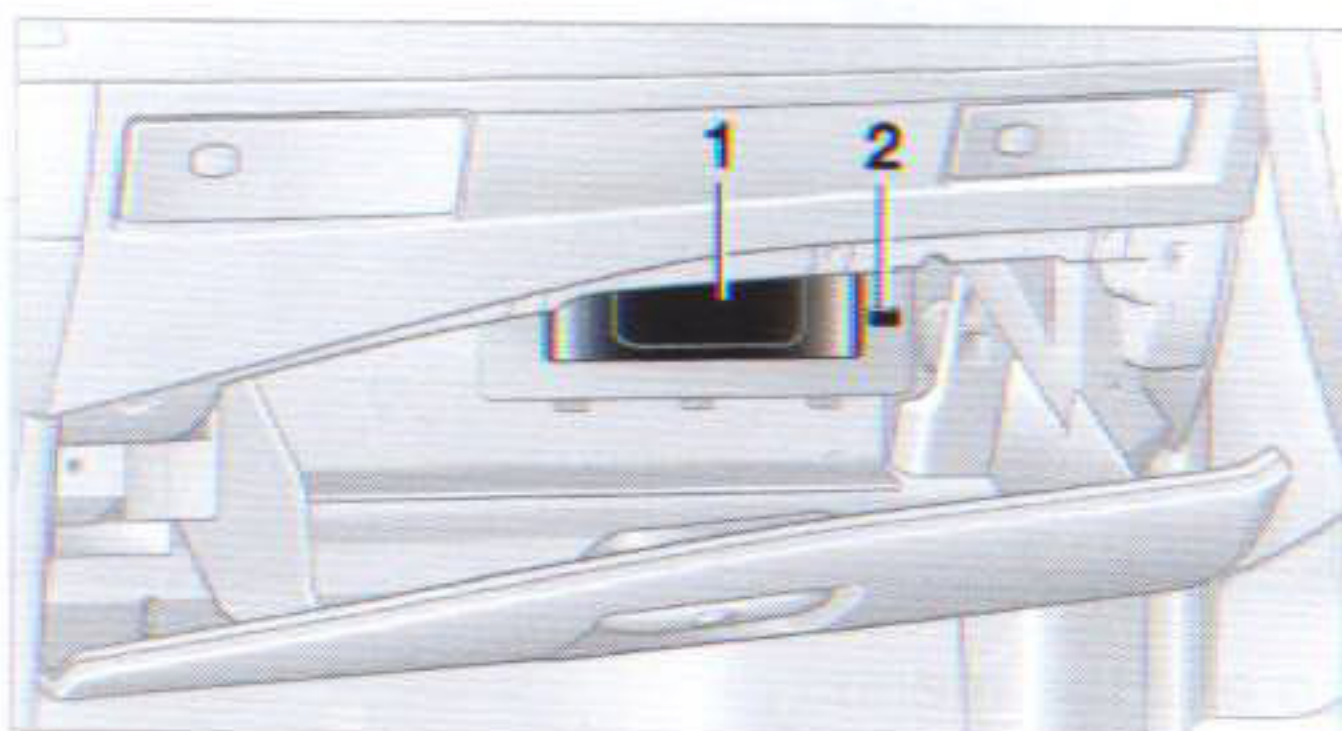


The BMW CD changer for six CDs is installed in the glove compartment.

### Removing CD magazine

 To insert or remove CDs from the CD magazine 1, you must first remove it from the CD changer:

1. Press button 2.  
The CD magazine 1 is ejected
2. Remove the CD magazine.

### Inserting/removing CDs from CD magazine

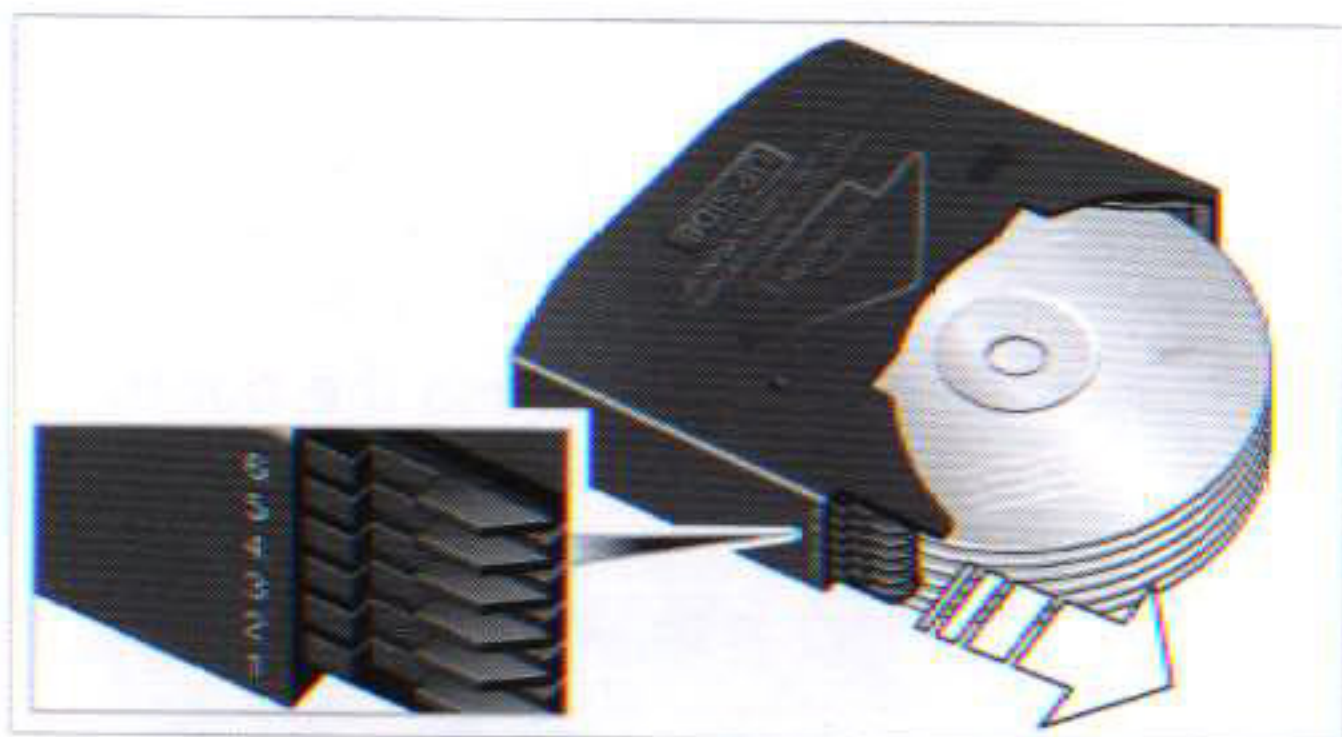

When inserting or removing CDs, remember to always only grasp them on the edge, taking care to avoid touching the data side with its mirror finish.

To insert:

Insert the CD in its slot with the label side on top.

To remove:

Pull out the desired drawer, refer to arrow, and remove the corresponding CD.