

**Special tools required:**


- 00 9 317

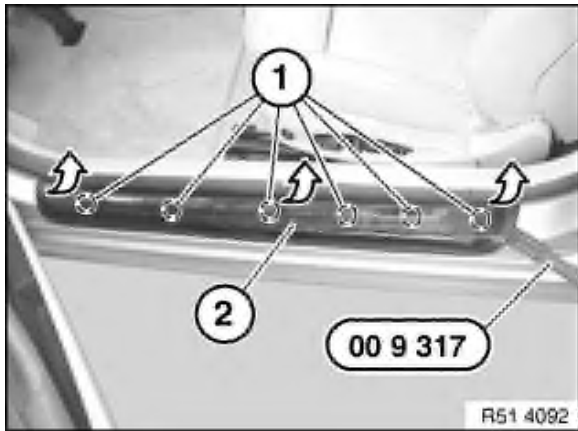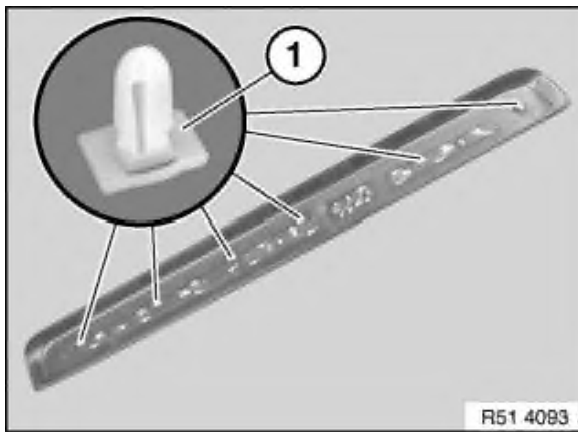

Unclip clips (1) for finishing strip (2) with special tool 00 9 317 .  
Remove finishing strip (2).

*Installation:*

If necessary, replace faulty clips (1).

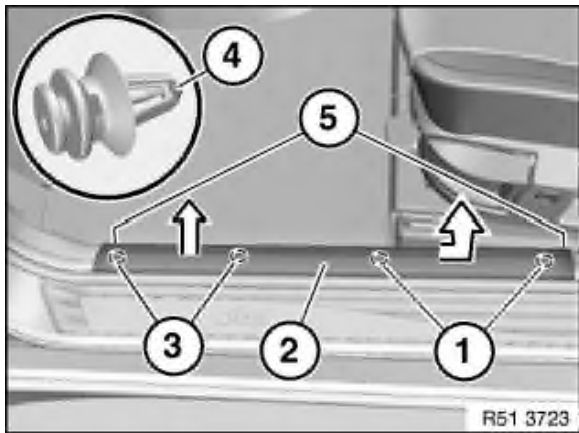

Disengage retaining lugs (5) of front entrance cover strip (2) from both adjoining panels.

**Important!**


Carefully lever out front entrance cover strip (2).

Lever out front entrance cover strip (2) at front retaining points (3).

Pull back front entrance cover strip (2) and feed out of rear retaining points (1).

*Installation:*

Position front entrance cover strip (2) preinstalled with clips (4) on associated bores and clip into place.

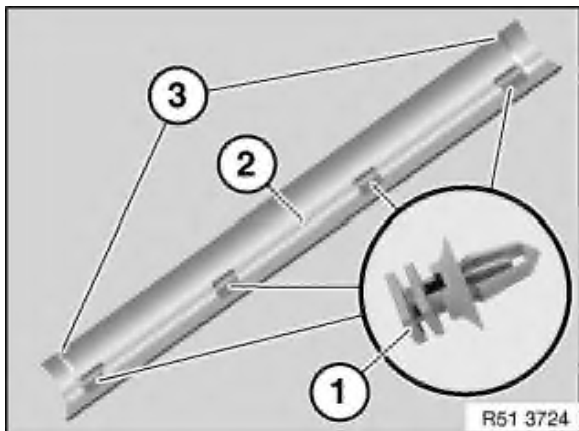

*Installation:*


Rails of front entrance cover strip (2) must not be damaged.

Retaining lugs (3) of front entrance cover strip (2) must not be damaged.


If necessary, lever out remaining clips (1) in floor panel.

If necessary, replace faulty clips (1).


Slide clips (1) into rails of front entrance cover strip (2).

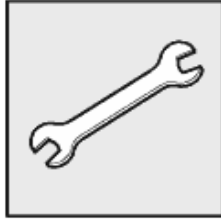**Special tools required:**

- 00 9 341

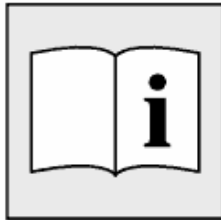*Necessary preliminary tasks:*


- Remove rear seat

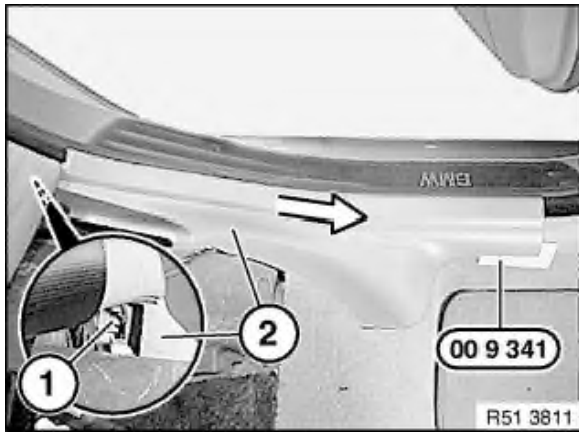


Release screw (1) on entrance cover strip (2).

Attach special tool 00 9 341 at front under entrance cover strip (2).

Pull out entrance cover strip (2) forwards/downwards.

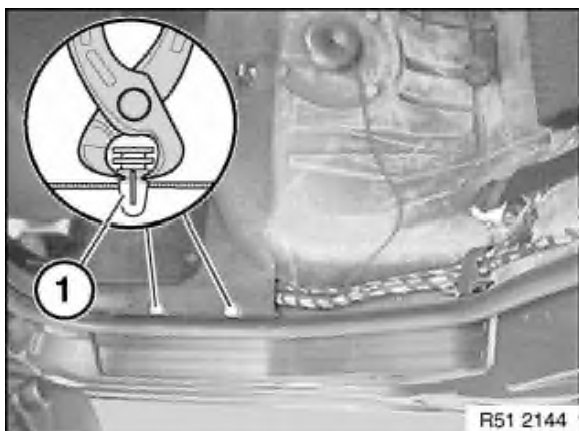

Lever out clips (1) with pliers (head of pliers surface-ground).

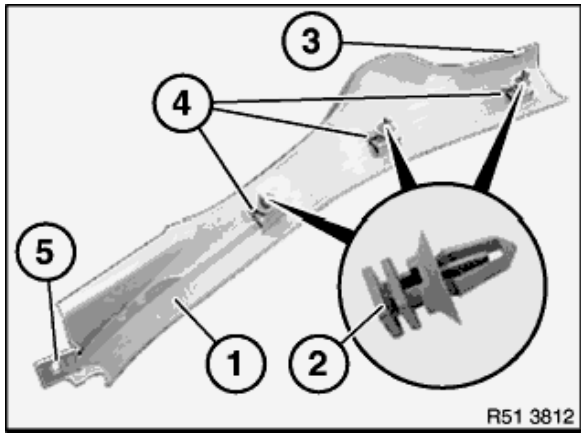

Push clips (2) onto entrance cover strip (1).

*Installation:*

Following parts of entrance cover strip (1) must not be damaged or missing:

- 2 Clips
- 3 Retaining lug
- 4 Guides for clips
- 5 Bore



Unclip rear seat on left/right towards top.


Lift out seat.

**Installation:**

Feed belt buckles (1) through designated openings into correct location.


Guide lap belt behind seat edge upwards.

Make sure ISOFIX covers are correctly engaged.

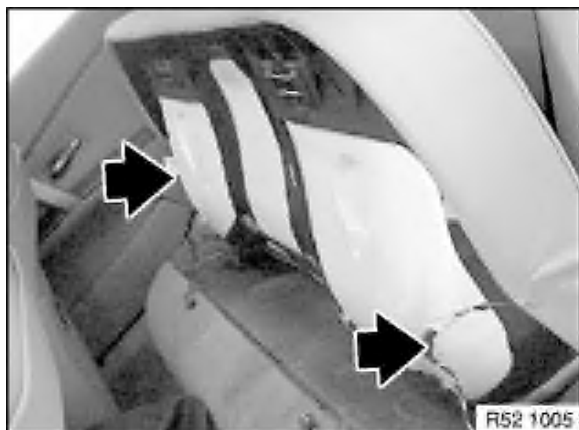


**For op. ext. seat heating only:**

Unfasten plug connection.

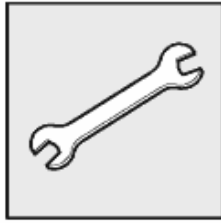


**Special tools required:**

- 00 9 341

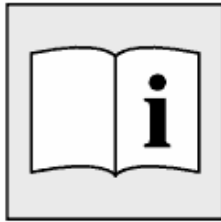

*Necessary preliminary tasks:*


- Remove front entrance cover strip.

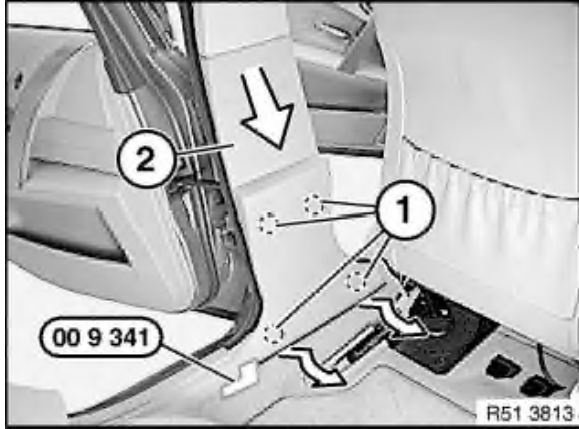

Partially detach mocket in area of B-pillar trim.

Insert special tool 00 9 341 under rear entrance cover strip (inside).


Unclip trim for door pillar (2) by pulling inwards (1), then pull downwards to remove.

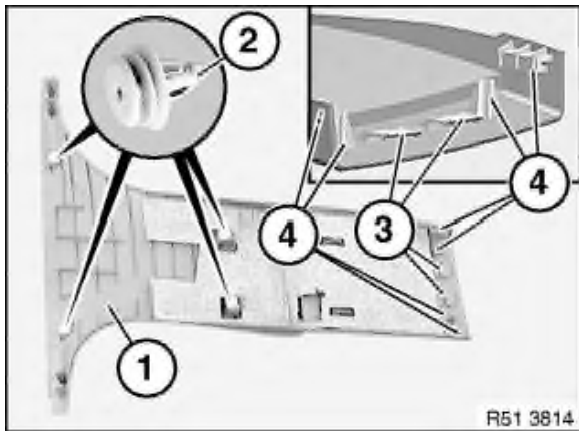

*Installation:*


Following parts of trim for door pillar (1) must not be damaged or missing:

- 2 Clips
- 3 Hooks
- 4 Guides

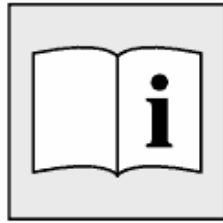

*Necessary preliminary tasks:*


- Remove front entrance cover strip (inside)

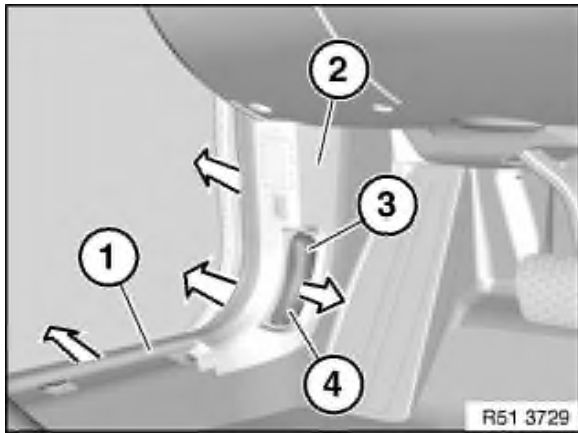

Release door mocket (1) in area of footwell side trim panel on A-pillar on left (2).


Unscrew bolt (3).

Remove engine hood actuator lever (4) from footwell side trim panel on A-pillar on left (2).

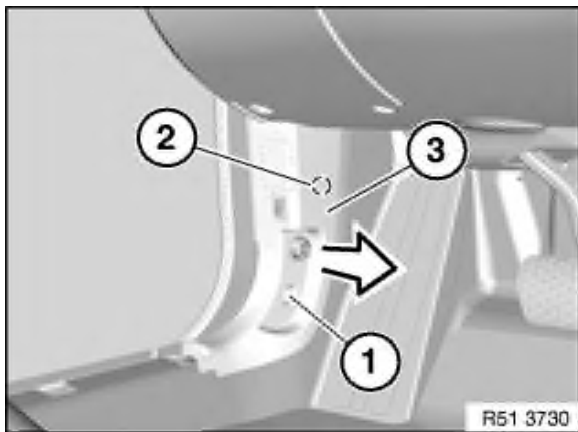

Unscrew bolt (1).

Unclip footwell side trim panel on A-pillar on left (3) in direction of arrow from retaining point (2) and remove.

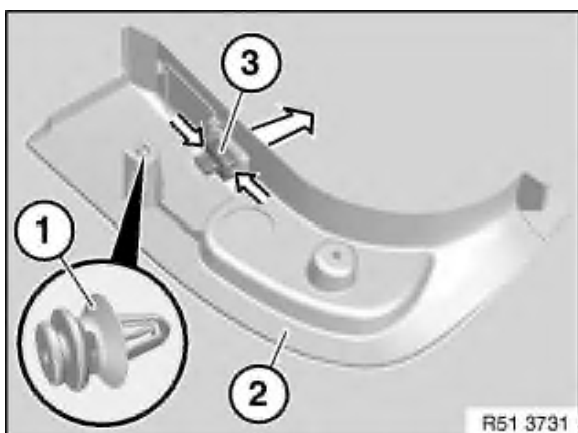

*Installation:*


If necessary, lever out clip (1) remaining in bore.

If necessary, replace faulty clip (1).


Place footwell side trim panel on A-pillar on left (2) preinstalled with clip (1) on associated bore and clip into place.

*Replacement:*


Press catches and remove switch for unlocking rear lid (3).

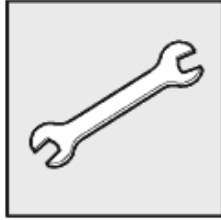**Special tools required:**

- 00 9 317

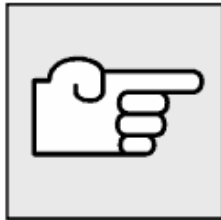*Note:*

Move driver's seat completely towards rear.

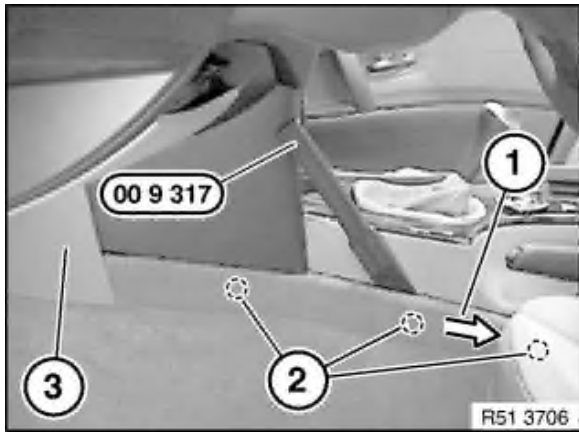


Drive bottom trim (1) towards rear with special tool 00 9 317 and remove.

*Installation:*

Make sure bottom trim (1) is correctly seated at retaining points (2).

Feed bottom trim (1) correctly into trim for pedal assembly (3).

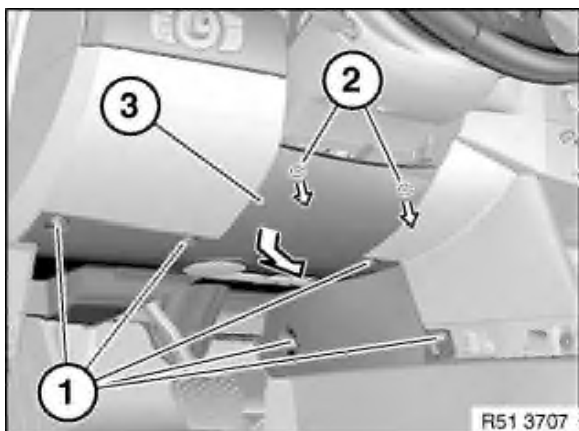

Release screws (1).

Unclip trim for pedal assembly (3) at retaining points (2) in direction of arrow.

Pull back trim for pedal assembly (3).

Disconnect associated plug connections and remove trim for pedal assembly (3).






### **Important!**

Disconnecting the plug connection for the hands-free system speaker results in fault memory entries in the telephone control unit (limitation in the emergency SOS call system).

After fitting, read out fault memory and if necessary delete entries.

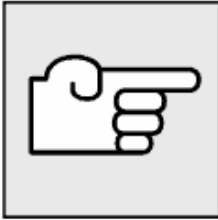


### **Replacement:**

- Remove speaker for hands-free system
- Remove footwell light


### Security version

- Remove intercom system speaker

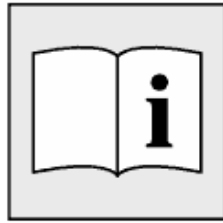

*Necessary preliminary tasks:*


- Remove front entrance cover strip (inside)

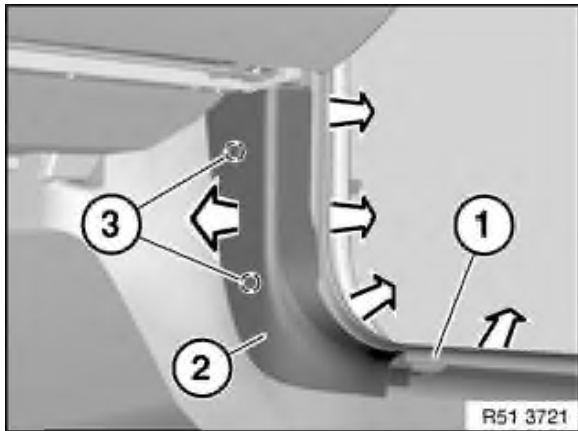

Release door mocket (1) in area of footwell side trim panel on A-pillar on right (2).

Unclip footwell side trim panel on A-pillar on right (2) in direction of arrow from retaining points (3).

Remove footwell side trim panel on A-pillar on right (2).

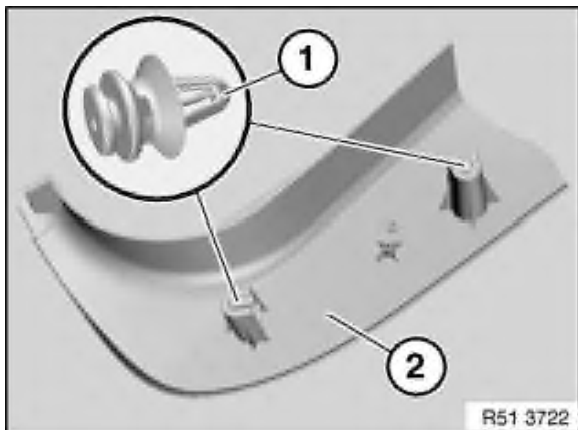


*Installation:*

If necessary, lever out clips (1) remaining in bores.


If necessary, replace faulty clips (1).

Place footwell side trim panel on A-pillar on right (2) preinstalled with clips (1) on associated bores and clip into place.

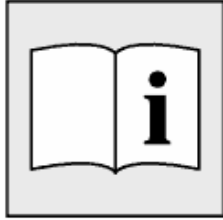

*Necessary preliminary tasks:*


- Remove footwell side trim panel on A-pillar on right.
- If necessary, remove trim for instrument panel at bottom right.

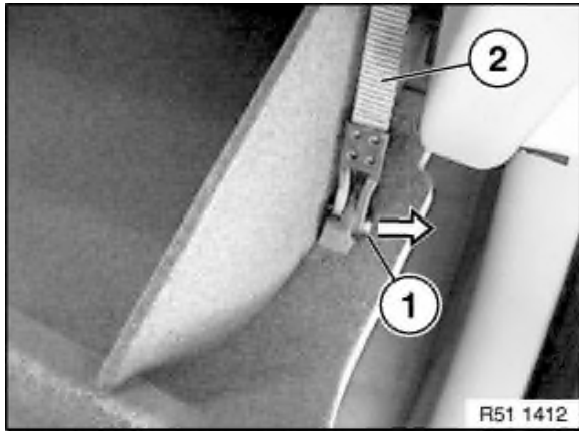


*Note:*

Open glovebox.

Unclip pin (1) from retaining strap (2).

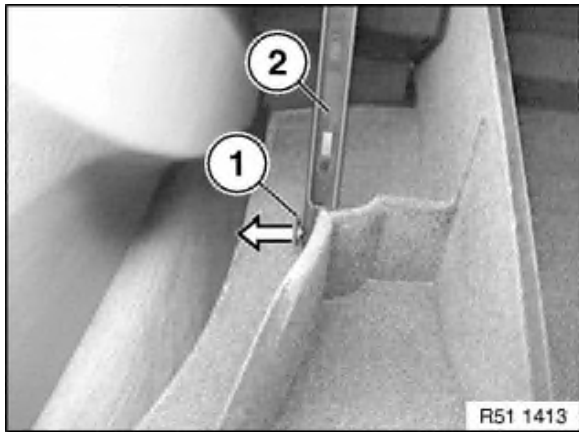


Unclip pin (1) from shock absorber (2).

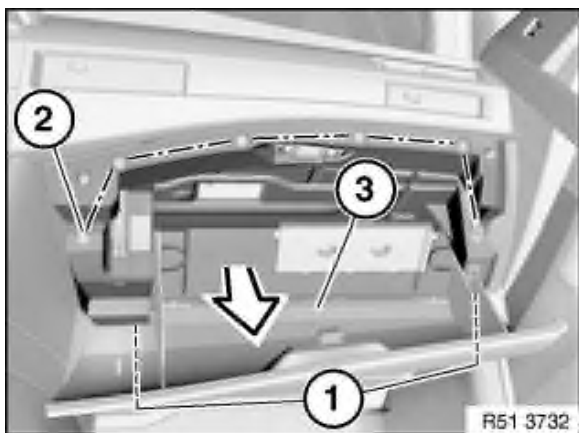


Release screws (1).

Release screws (2) and pull back right glovebox with housing (3).


Disconnect associated plug connections and remove right glovebox with housing (3).

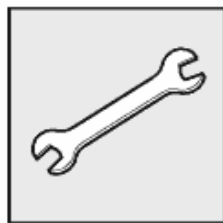**Special tools required:**

- 00 9 317

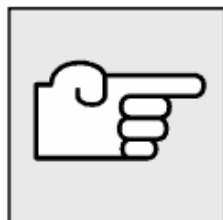*Note:*

Move front passenger seat completely towards rear.

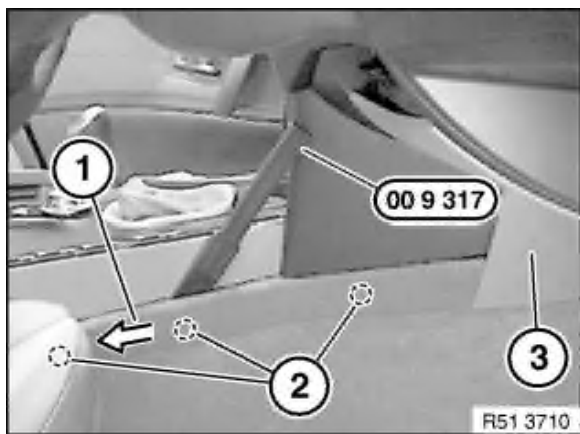


Drive bottom trim (1) towards rear with special tool 00 9 317 and remove.

*Installation:*

Make sure bottom trim (1) is correctly seated at retaining points (2).

Feed bottom trim (1) correctly into bottom right trim for instrument panel (3).

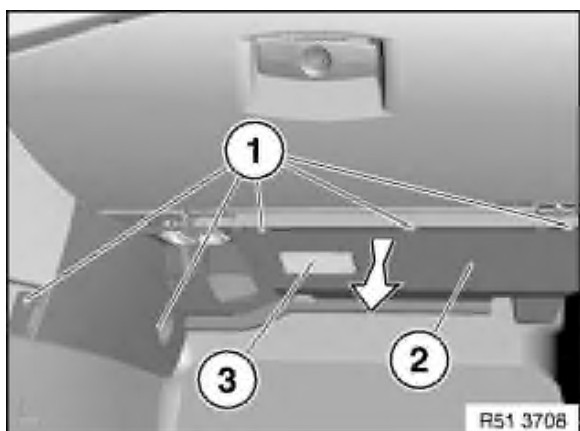

Release screws (1).


**Important!**

Carefully remove bottom right trim for instrument panel.

Move bottom right trim for instrument panel (2) slightly forwards and feed out towards rear.

Disconnect plug connection of footwell light (3).

Remove bottom right trim for instrument panel (2).

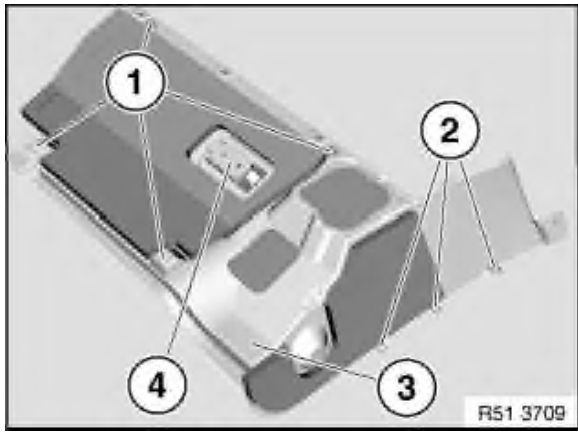

*Installation:*

Mounts (1) and guides (2) of bottom right trim for instrument panel (3) must not be damaged.

Make sure mounts (1) are correctly seated.

Replacement:


- Remove footwell light (4).

**Warning!**


Observe safety instructions for handling vehicle battery.

*Necessary preliminary tasks:*

- Remove luggage compartment trim on side panel on right
- Disconnect negative battery cable
- Remove trim for instrument panel, bottom left
- Remove right glovebox with housing

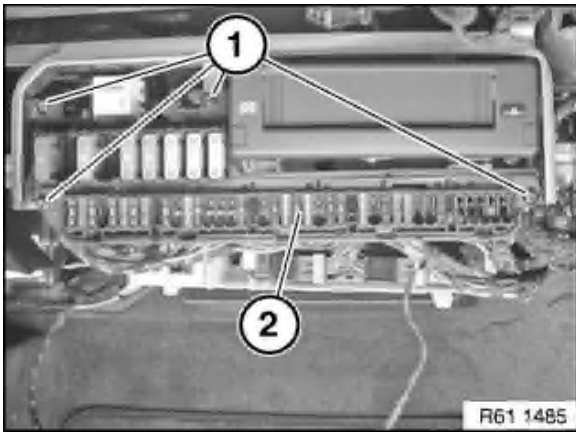

Release screws (1) and remove distribution box (2).

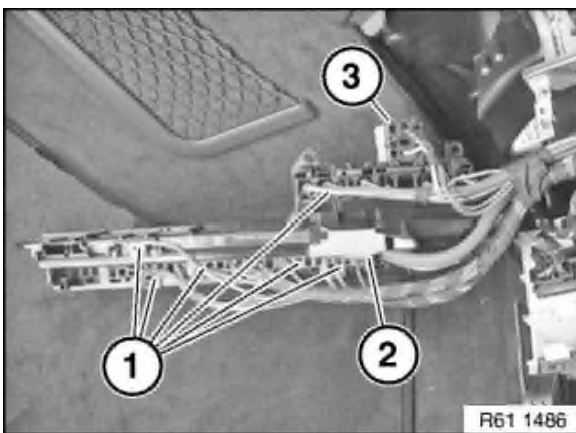

Disconnect all plug connections (1).

Unlock relay base (3) and disconnect.

Open cover (2) on positive battery cable and release nut underneath.

Tightening torque 61 21 2AZ .

Disconnect positive battery cable from distribution box.

*Installation:*

Make sure positive battery cable is correctly seated on fuse box.

**Replacement:**

Remove fuses.