



Move head restraint (1) upwards to maximum extent.
Press lock (2) and pull out head restraint.